


AMERICAN SPECIALTIES, INC.

441 Saw Mill River Road, Yonkers, NY 10701 (914) 476-9000

Hand Dryer

Operating Instructions and Parts Manual


Surface-mounted ADA-compliant hand dryer



PLEASE READ CAREFULLY THROUGH THIS MANUAL BEFORE USING THE PRODUCT. OBSERVING ALL SAFETY INFORMATION, WARNINGS AND CAUTIONS WILL PROTECT YOURSELF AND OTHERS. PLEASE KEEP INSTRUCTIONS FOR FUTURE REFERENCE.

MODEL # 0185

Patented No. D 543,661 S

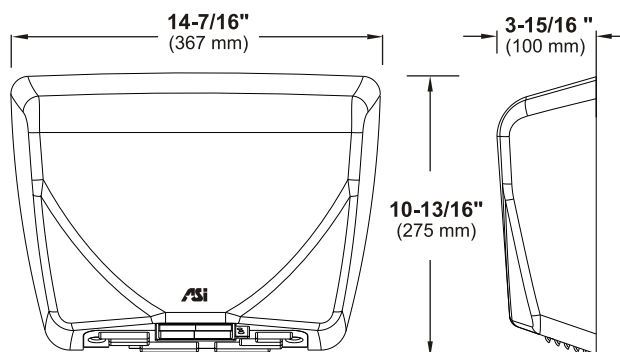

TECHNICAL SPECIFICATIONS

ITEM CATEGORY	PERFORMANCE DATA
Operating Voltage	100-240 VAC, 50/60 Hz, 2.2 kW
Warm Air Volume Output	185 CFM {314.5m ³ /h}
Warm Air Temp Output	149 F {65 C}at ambient T = 77°F {25°C}
Motor Type	¼ HP, 7.5 krpm, Brush Type, Dual Ball Bearings
Motor Thermal Protection	Auto Resetting Thermostat turns unit off at 221°F, {105°C}
Heater Element	2020W @ 120 VAC, Nichrome 7.12 Ω
Heater Thermal Protection	Auto Resetting Thermostat turns unit off at 149°F, {65°C}, Resets at 122°F {50°C}
Drying Time	Less than 25 seconds
Circuit Operation	Infrared Automatic, self adjusting
Sensor Range	2" to 13" [51 mm to 330 mm], adjustable; standard 7" [18 cm ± 2 cm]
Timing Protection	2 minutes auto shut off
Timing Duration	2 seconds delayed turn off after last sensor read
Cover Type	16 gauge (.063", 1.6 mm) thick drawn steel or 304 series stainless steel
Cover Finish	Porcelain Enamel on steel or Bright or Satin on stainless steel
Net Weight	12 lbs [5.45 kg]
Shipping Weight	12.7 lbs [5.75 kg]
Unit Size	14-7/16" W x 10-13/16" H x 3-15/16" D [367 mm x 275 mm x 100 mm]
ADAAG Compliance	Less Than 4" [102 mm] Projection

Motor

Heater

Total

Input (Vac)	Vac	Inrush A(W)	Operating A (W)	Vac	Inrush / Operating A(W)	Inrush A(W)	Operating A(W)
115	115	2.16 (248)	1.44 (165)	115	16.2 (1857)	18.4 (2105)	17.6 (2022)
120	120	2.25 (270)	1.5 (180)	120	16.8 (2020)	19 (2290)	18.3 (2200)
208	104	1.95 (203)	1.3 (135)	104	14.6 (1519)	16.6 (1722)	15.9 (1654)
220	110	2.07 (227)	1.38 (151)	110	15.4 (1700)	17.5 (1927)	16.8 (1851)
230	115	2.16 (248)	1.44 (165)	115	16.2 (1857)	18.4 (2105)	17.6 (2022)
240	120	2.25 (270)	1.5 (180)	120	16.8 (2020)	19 (2290)	18.3 (2200)

Hand Dryer

Operating Instructions and Parts Manual
Surface-mounted ADA-compliant hand dryer



AMERICAN SPECIALTIES INC.
441 Saw Mill River Road
Yonkers, NY 10701-4913
914.476.9000 | Fax 914.476.0688

General safety information:

⚠ WARNING *This product is intended for installation by a qualified service person. Use AWG NO. 12 solid conductor for wiring.*

⚠ WARNING *Disconnect power at the service breaker before installing or servicing.*

⚠ DANGER *Failure to properly ground unit could result in severe electrical shock and/or death.*

⚠ WARNING *All units must be supplied with a 3-wire service. The ground wire must be connected to the dryer's backplate.*

-- NOTE: Do not install dryer over washbasin --

Installation - IMPORTANT - READ COMPLETELY BEFORE STARTING INSTALLATION PROCEDURE

1. Make sure power supply breaker is switched off. Installation must be carried out in accordance with the current edition of the local wiring regulations code having jurisdiction. Installation should be performed only by a qualified electrician.
2. Place template against wall at desired height (see mounting height recommendations) and mark locations of 4 mounting holes and wire service entry at knockout (KO) location.
Note: For two or more dryers, dryers should be no closer than 24 inches (610 mm) on center.
3. Remove and retain 2 cover screws and cover.
4. **For in-wall (concealed) power supply** - Provide supply wire to KO location according to local code and attach securely to chassis at KO with appropriate strain relief connector (not supplied).
5. Attach dryer to wall. For wood wall/studs use 1 1/4 inch (6 mm) screws at length that will ensure 1 inch (25 mm) min. stud penetration. For masonry walls use expansion bolts or anchors for 1 1/4 inch (6 mm) screws to ensure penetration 1/4 inch (6 mm) deeper than anchor. Shim if necessary to ensure base plate is flat against wall.
6. Connect supply and ground wires to terminal block where indicated or connect supply wires to terminal block where indicated and connect ground wire to base plate with ground screw (Connections: A. Connect the live wire (colored Brown or Black) to the terminal block marked "L1". B. Connect the neutral wire (colored White or Grey) or connect the second live wire (colored Red or Orange) to the terminal block marked "N/L2". C. Connect the ground wire (colored green or green and yellow or bare conductor) to the terminal block marked "⊕" or to the green screw marked "⊕"). Colors of live and neutral wires depend on voltage of supply service and requirements of Building and Electrical Code having jurisdiction.
7. Replace cover. Do not over-tighten screws.
8. Switch on circuit breaker and test unit operation.
9. Complete and mail registration reply postcard.

Installation Kit Included (find in carton)

1. Self-Threading screws (1/4" x 1-1/2") x 4 pcs
2. Metal Washer (3/8" x 7/8" x 1/16") x 4 pcs
3. Nylon bushing x 4 pcs

Hand Dryer

Operating Instructions and Parts Manual

Surface-mounted ADA-compliant hand dryer

ASI

AMERICAN SPECIALTIES INC.

441 Saw Mill River Road

Yonkers, NY 10701-4913

914.476.9000 | Fax 914.476.0688

Service Tool Included (with installation kit)

Security hex wrench (5/32") x 1 pc

➤ Please unpack the unit and check the quantity of the above tool and kit.

Recommended mounting heights

- from bottom edge of dryer above finished floor (AFF)

SEE TEMPLATE 05072042

Men	50"	(1270 mm)	Reference ADAAG Reach LIMIT (unrestricted)	AFF (maximum)
Women	47"	(1194 mm)		
Children 4-7 years	35"	(889 mm)		
Children 8-10 years	39"	(991 mm)		
Children 11-13 years	43"	(1092 mm)		
Children 14-16 years	47"	(1194 mm)		
Handicaped	40"	(1016 mm)	All Approaches	48" (1219 mm)


Operation

- No-touch operation
- Shake excess water from hands.
- Place hands under the outlet to start operation.
- Rub hands lightly and rapidly.
- Stops automatically after hands are removed.

Cleaning and Maintenance

Periodic cleaning of the unit is recommended to ensure optimum performance.

- Disconnect the electrical supply.
- Remove the two cover-mounting screws.
- Remove the cover.
- Clean all dust lint from the interior of the dryer.
- Wipe the cover with a damp cloth and mild cleaning solution. Do not Soak. Never use abrasives to clean the cover.
- Replace the cover. Do not over tighten the screws.

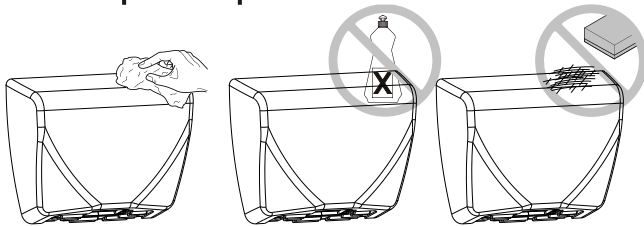

Warranty

All of our dryers are designed and manufactured to provide years of dependable performance. Component parts are guaranteed to be free of defects in material and workmanship for a period of **Ten** years. This guarantee will be honored provided that the dryer is installed and maintained in accordance with the instructions. Parts damaged during the Installation are the purchaser's responsibility. **ASI's** warranty covers defects exclusively, and only liability for the replacement of defective parts will be accepted. This warranty does not cover wear and tear, or misuse and abuse. Transportation, freight costs and labor are also excluded. Defective parts must be returned prepaid, accompanied by the unit serial number, to the point of purchase. This warranty is granted solely to the original purchaser of the unit and is subject to registration.

Hand Dryer

Operating Instructions and Parts Manual
Surface-mounted ADA-compliant hand dryer



AMERICAN SPECIALTIES INC.
441 Saw Mill River Road
Yonkers, NY 10701-4913
914.476.9000 | Fax 914.476.0688

Diagnostics and Remedies

Symptom	Corrective Action
If the dryer will not run	First ensure that the breaker supplying the dryer is operational. If it is, disconnect the power and remove the dryer cover. Taking suitable precautions to avoid shock hazard, reconnect the power and check for voltage at the terminal block. If there is power and the dryer will not run, replace the circuit board module (CBM) and/or the sensor module and/or the power transistor (part of the wire harness, item 20/22).
If the dryer cycles by itself, runs all the time, or is not sensitive enough	Ensure that there is no obstruction on or in front of the infra-red sensor. Clean any dirt off the sensor lens. Try adjusting the sensitivity potentiometer on CBM (blue knob). If the problem persists, replace the CBM and/or the sensor module.
If the element gets hot but the fan motor does not turn	Disconnect the power. Remove the dryer cover and check for obstructions in the fan housing. Damaged fans must be replaced. If there are no obstructions, replace the motor.
If the unit runs but makes a buzz noise	Disconnect the power. Remove the dryer cover and check the fan for rubbing on the housing as it rotates. Replace fan if the condition exists.
If the fan motor runs but the element does not get hot (Dryer blows cold air)	Disconnect the power and remove the dryer cover. Check for loose or damaged wires. Remove the blower housing. Check the element for signs of burning or breakage. Damaged element must be replaced. If the element does not appear damaged, disconnect it at the CBM and check element wire continuity (see tech spec). An open circuit indicates damage to the element wire and to the integral temperature limit control (TLC). Separate the TLC and test for open circuit. If this is the case, replace the element and/or the thermostat.
If the motor makes ticking/winding noise when it runs	Disconnect the power. Remove the dryer cover and check the brushes for worn condition (less than 25/64" (10mm) graphite remains) and replace them, if necessary. Purchase rebuild kit to perform repair.

Hand Dryer

Operating Instructions and Parts Manual
Surface-mounted ADA-compliant hand dryer



AMERICAN SPECIALTIES INC.
441 Saw Mill River Road
Yonkers, NY 10701-4913
914.476.9000 | Fax 914.476.0688

Repair parts list

Key Part #	Description	Key Part #	Description
1 A0001	Rubber grommet -Base (4 reqd.)	28 A0032	Barrier plate - LH
2 A0002	Base plate	29 A0033	Barrier plate - RH
3 A0003	Blower housing - RH	30 A0034	Access hole plug
4 A0004	Motor	31 -	Screw (5 reqd. 1/4"x8mm), philips pan head
5 A0005	Rubber grommet -Motor (4 reqd.)	32 -	Screw (4 reqd. 1/4"x1-1/2"), philips pan head
6 A0006	Motor bracket	33 -	Screw (4 reqd. 5/16"x10mm), philips pan head
7 A0007	Nylon washer (4 reqd.)	34 -	Screw (6 reqd. 1/4"x10mm), philips pan head
8 A0008	Cover	35 -	Screw (2 reqd. 3/16"x6mm), philips pan head
9 A0009	Circuit Board Module (CBM)	36 -	Screw (4 reqd. 5/16"x12mm), philips pan head
10 A0010	Terminal block	37 -	Screw (2 reqd. 5/16"x10mm), philips pan head
11 A0011	Grounding screw with cup washer	38 -	Screw (4 reqd. 1/4"x6mm), philips pan head
12 A0012	Cable clamp	39 -	Screw (1 reqd. 1/4"x6mm), headless set (with 2mm hex key)
13 A0013	Thermostat (TLC)	40 -	Screw (2 reqd. 3/16"x16mm), philips pan head
14 A0014	Blower housing - LH	41 -	Screw (1 reqd. 1/4"x10mm), philips pan head with external tooth lock washer
15 A0015	Blower wheel	42 -	Mylar shield with L1,N/L2,G marked
16 A0016	Heater assembly	43 -	Wire nuts (2 reqd.) not shown
17 A0017	Air intake	44 -	Cable ties (4 reqd.) not shown
18 A0018	Security hex screw with lock washer (2 reqd.)		
19 A0019	Sensor Module, 10-5/8" cable		
20 A0024	Power Transistor (part of item 22)		
21 A0020	Security hex wrench		
22 A0027	Wire harness (not shown)		
23 A0026	Motor brush (2 reqd.)		
24 A0028	Metal washer (4 reqd.)		
25 A0029	Nylon bushing (4 reqd.)		
26 A0030	Circuit diagram label (not shown)		
27 A0031	Rating label		

Hand Dryer

Operating Instructions and Parts Manual
Surface-mounted ADA-compliant hand dryer



AMERICAN SPECIALTIES INC.
441 Saw Mill River Road
Yonkers, NY 10701-4913
914.476.9000 | Fax 914.476.0688

Diagram Patented No. D 543,661 S

