 


Installation and Maintenance Guide

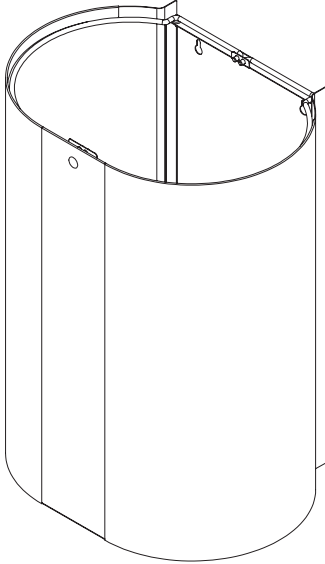

Elvari™ Waste Receptacles, Surface-Mounted

3B1 Series

Table of Contents

Safety Information	2
Dimensions.....	2
Installing the Waste Receptacle.....	3
Cleaning and Maintenance.....	3



[Scan or click code to view
Installation Guide \(English\)](#)



[Scan or click code to view
Installation Guide \(French\)](#)



[Scan or click code to view
Installation Guide \(Spanish\)](#)



**Read the instructions in this manual before beginning installation.
Save these instructions and refer to them for operation and maintenance information.**


For questions regarding the operation, installation, or maintenance of this product, visit bradleycorp.com or call 800.BRADLEY (800.272.3539).
Product warranties and parts information may also be found under “Resources” on our website at bradleycorp.com.

P20-258 Rev. A: ECO 22-15-029
© 2023 Bradley
Page 1 of 3 10/31/2023

P.O. Box 309
Menomonee Falls, WI 53052 USA
800 BRADLEY (800 272 3539)
+1 262 251 6000
bradleycorp.com



Safety Information

 **WARNING**

The waste receptacles are no stronger than the anchors and walls to which they are attached, and therefore, must be firmly secured in order to support the intended load requirements. To avoid potential injury, the building owner or maintenance personnel should remove the waste receptacle from service if the mounting is not adequately secured to the wall or if there are any observed product defects.

 
IMPORTANT

Read this entire installation manual to ensure proper installation. When installation is complete, file this manual with the owner or maintenance department. Compliance and conformity to local codes and ordinances is the responsibility of the installer.

Separate parts from packaging and make sure all parts are accounted for before discarding any packaging material. If any parts are missing, do not begin installation until you obtain the missing parts.


Dimensions

(mm)

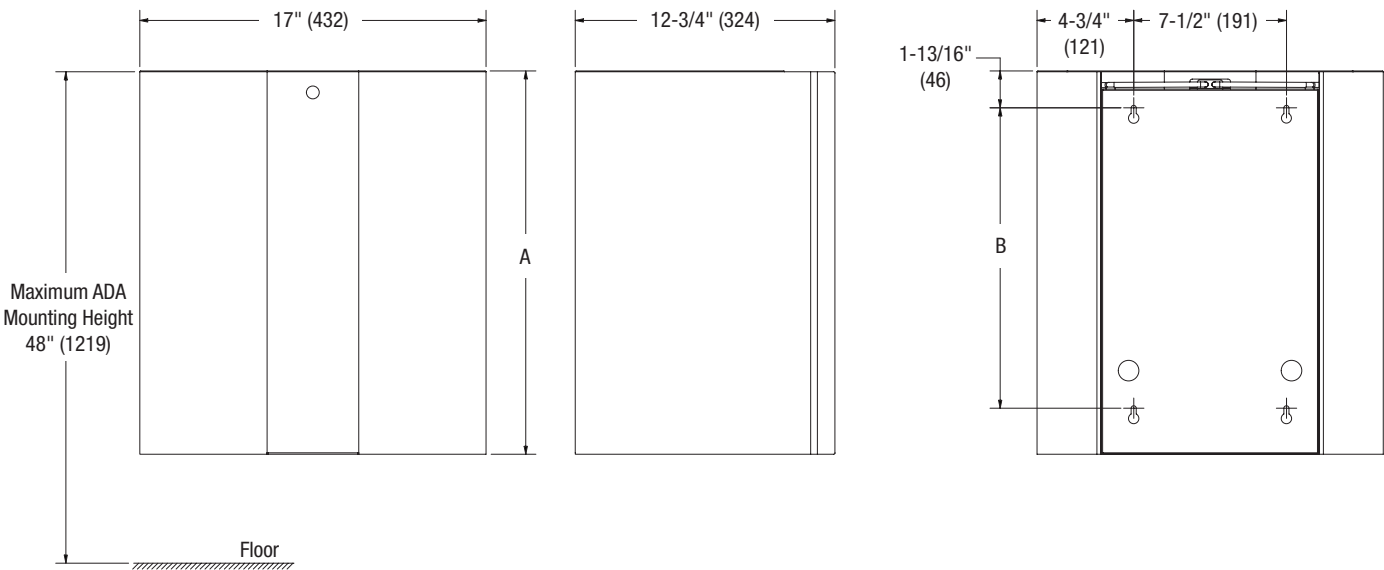

Waste Receptacle Capacity Size	Dim "A" (mm)	Dim "B" (mm)
Small	13-5/16" (338)	9-1/4" (235)
Medium	18-13/16" (478)	14-3/4" (375)
Large	23-5/16" (592)	19-1/4" (489)

Installing the Waste Receptacle

 
 Coordinate installation with architect and contractor to avoid protrusion from opposite wall or pipes, vents, conduits, electrical wiring, etc., in wall.

Follow all applicable local building codes. If installing where unit projects above top of wainscot, provide aluminum channel or other filler to prevent gap from finished wall and flange of unit. For block walls, use metal expansion shields (not included).

A Drill the top and bottom mounting holes and set the anchors (not included) per the mounting hole locations shown in the illustrations and table on the previous page.

C Slide the receptacle down onto the screws. For a removable waste receptacle, leave the mounting screws slightly loose so the receptacle can be removed using the handle. For permanent installation of waste receptacle, fully tighten all screws.

B Insert screws into the top and bottom mounting holes. Be sure to leave a small gap between the screw heads and the mounting surface to install the receptacle.

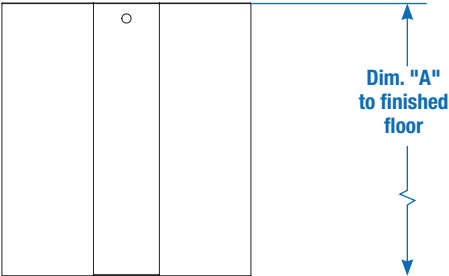

Dim. "A" Key Surface:	For Dim. "A"	Small Capacity 3B1-113400	Medium Capacity 3B1-110000	Large Capacity 3B1-113600
		Bottom of Waste Receptacle to Finished Floor		
Waste receptacle top lip to finished floor	36" (914)	22-3/4" (577)	17-1/4" (437)	12-3/4" (323)
	32" (813)	18-3/4" (476)	13-1/4" (336)	8-3/4" (222)
	28" (711)	14-3/4" (374)	9-1/4" (234)	4-3/4" (120)

Cleaning and Maintenance

Cleaning Stainless Steel

Scan or click the QR code below to view the Stainless Steel Washroom Accessories document.

