

Elkay Aqua Sentry Filter System Kit (Coolers + Fountains) Model(s) LF2

# PRODUCT SPECIFICATIONS

Elkay Aqua Sentry Filter System Kit (Coolers + Fountains). Overall dimensions are 2" x 2" x 11-1/2".

Dimensions:	2" x 2" x 11-1/2"
Shipping Weight:	1 lbs.
Capacity:	500 gal. (1893 L)
Flow Rate:	0.5 GPM (1.9 L/m)
Temperature:	35-100°F (2-38°C)
Initial Pressure Drop:	2-5 PSI (14-34 kPa)
Maximum Pressure:	100 PSI (689 kPa)
Minimum Pressure:	20 PSI (138 kPa)
Water Inlet:	1/4" (6.4mm) O.D. tube
Water Outlet:	1/4" (6.4mm) O.D. tube

Special Note: In-Line filter for use with coolers + fountains - Order 56192C as replacement filter.

- Agua Sentry Retrofit Filter Kit for unfiltered Elkay drinking . solution products (Coolers + Fountains).
- Filter should be replaced every 500 gallons or 6 months after installation.
- Equipped with Quick-Disconnect fittings on each end of the in-line filter.
- Designed to reduce cysts such as cryptrosporidium and giardia, lead, particles and chlorine. Also reduces odors and discoloration from incoming water.
- Filter is certified to NSF 42 and 53 for cyst, lead, atrazine, lindane, particulate class 1, chlorine, taste and odor reduction.

## **KIT INCLUDES**

- Filter
- Mounting bracket
- 1/4" polytubing
- 3/8" copper tube
- 1/4" x 3/8" quick connect union
- 1/4" quick connect stem elbow



# **Included with Product:**

## 500 gal filter cartrige, kit components

AMERICAN PRIDE. A LIFETIME TRADITION. Like your family, the Elkay family has values and traditions that endure. For almost a century, Elkay has been a family-owned and operated company, providing thousands of jobs that support our families and communities.

**Product Compliance:** 

**NSF 53** NSF 372 (lead free)

**NSF 42** 



INSTALLATION INSTRUCTIONS The filter must be installed in compliance with all state and local laws and regulations governing the installation and use of this product. Disconnect electrical power and close water supply valve before proceeding. The filter must be installed on the water inlet line. Flow indicator (arrow) on filter should point in the same direction as the water flow. After installing new filter, open water supply valve and check for leaks. Flush system sufficiently (approximately 3 minutes) to effectively remove small residue of carbon fines.

NOTE: A water shutoff valve should be installed on the incoming water line to aid in future servicing of filter.

### CAUTION

Filter is designed to reduce lead from incoming water to levels below EPA requirements. Do not use with water that is microbiologically unsafe or with water of unknown quality without adequate disinfection before or after the

system. • Use on water inlet line only. Do not allow installed filter to freeze. Do not attach hot water line to filter. • Filter should be replaced every 500 gallons (1,893 liters) or approximately 6 months after installation.



PART:	QTY:
PROJECT:	
CONTACT:	
DATE:	
NOTES:	
APPROVAL:	

### **RESTROOM**DIRECT

### WWW.RESTROOMDIRECT.COM 704.937.2673 129 Oakpark Dr., Unit A, Mooresville, NC 28115

In keeping with our policy of continuing product improvement, Elkay reserves the right to change product specifications without notice. Please visit elkay.com for the most current version of Elkay product specification sheets. This specification describes an Elkay product with design, quality, and functional benefits to the user. When making a comparison of other producers' offerings, be certain these features are not overlooked.