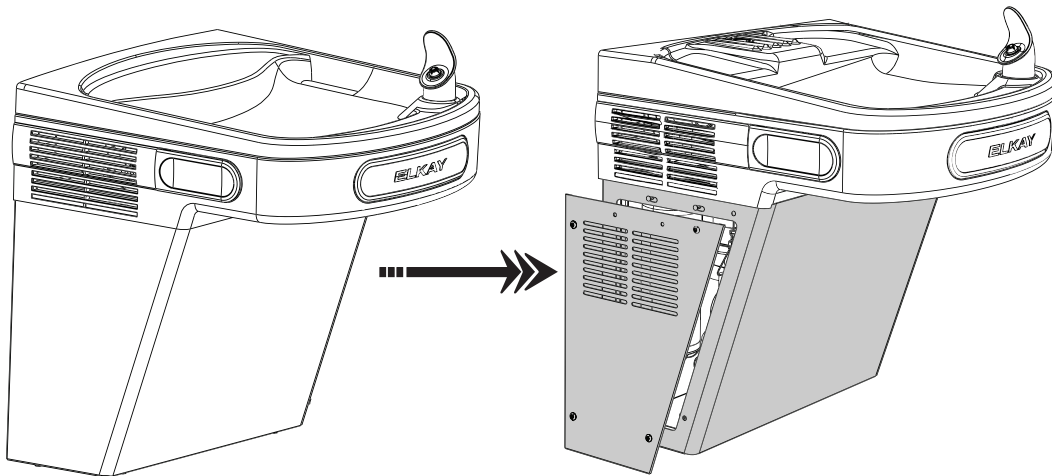


**ELKAY**<sup>®</sup>

INSTALLATION MANUAL

**EZ FILTER MAINTENANCE KIT****IMPORTANT**

THIS IS AN INDOOR APPLICATION ONLY. ALL SERVICE TO BE PERFORMED BY AN AUTHORIZED SERVICE PERSON.

**TOOLS REQUIRED****BUT NOT PROVIDED:**

GLOVES  
SAFETY GLASSES  
5/16 NUT DRIVER (HIGHLY RECOMMENDED)  
OR FLAT HEAD SCREWDRIVER

**IMPORTANT! INSTALLER PLEASE NOTE.**

**INSTALLER**

To insure you install this Kit easily and correctly, PLEASE READ THESE SIMPLE INSTRUCTIONS BEFORE STARTING THE INSTALLATION. CHECK YOUR INSTALLATION FOR COMPLIANCE WITH PLUMBING, ELECTRICAL, AND OTHER APPLICABLE CODES.


Patent [zurn-elkay.com/patents](http://zurn-elkay.com/patents)

⚠ **WARNING:** Cancer and Reproductive Harm - [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)

⚠ **ADVERTENCIA:** Cáncer y daño reproductivo - [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)


⚠ **AVERTISSEMENT:** Cancer et effets néfastes sur la reproduction - [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)

EZFMK, EZFMTLK, EZFMP, EZFMTLP  
Rough in

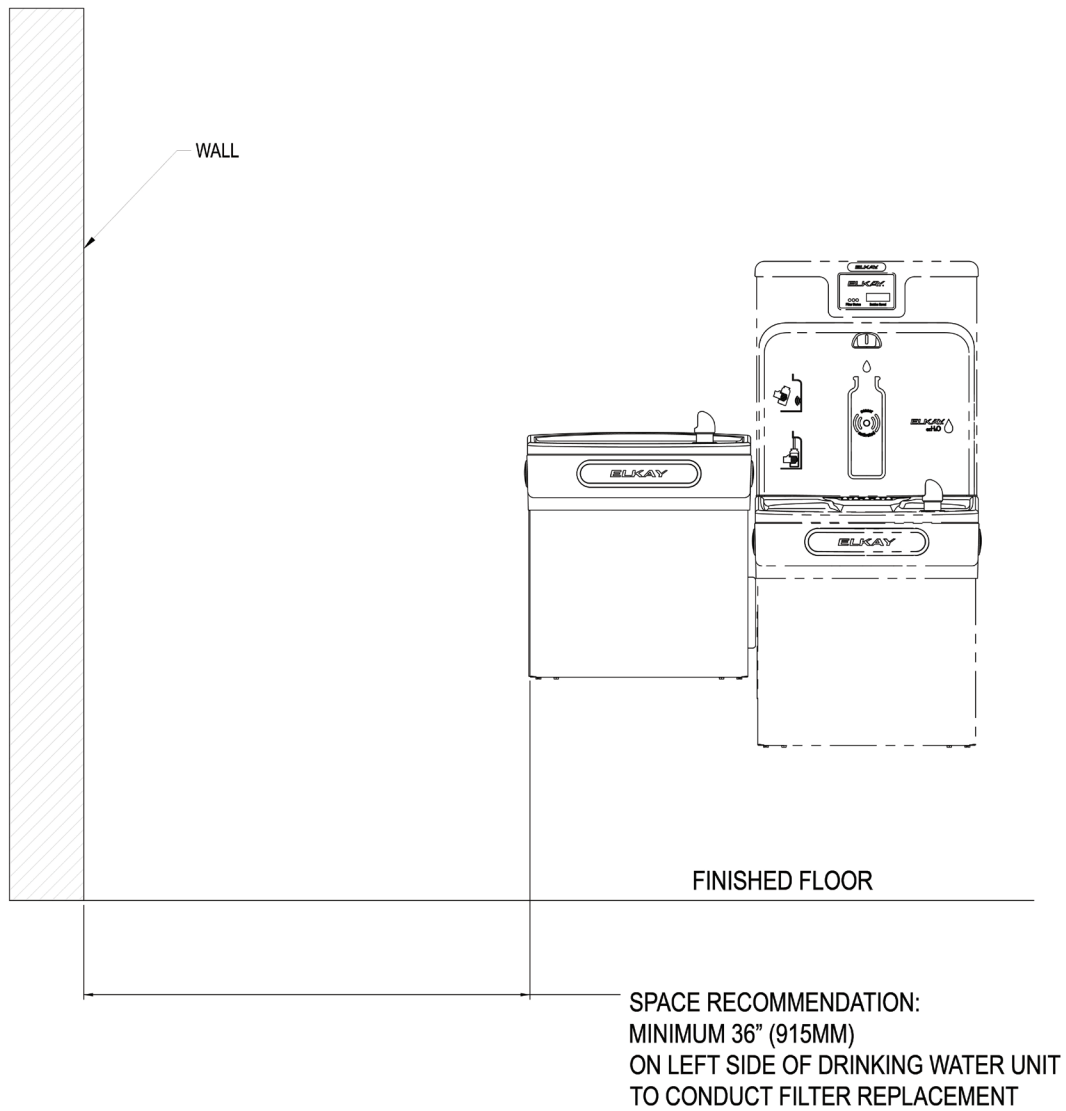


NOTE: APPLIES TO BOTH SINGLE AND BI-LEVEL KITS

EZFMK, EZFMTLK , EZFMP, EZFMTLP  
Wrappers

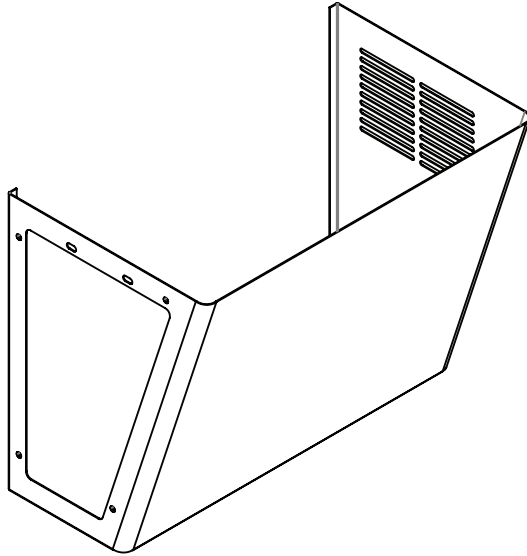


LEFT SIDE

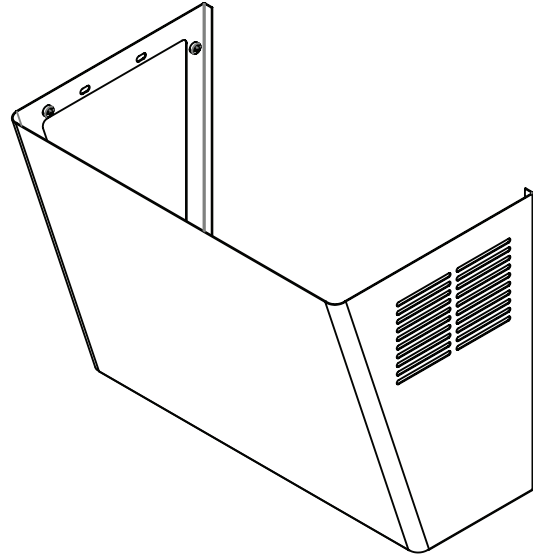


RIGHT SIDE

EZFMK WRAPPER  
EZFMP WRAPPER

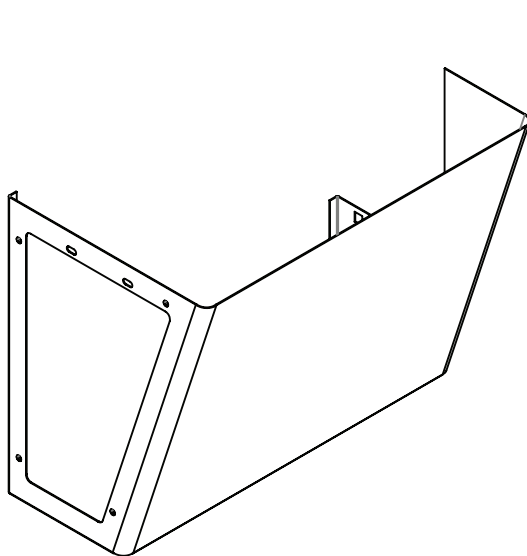

LEFT SIDE

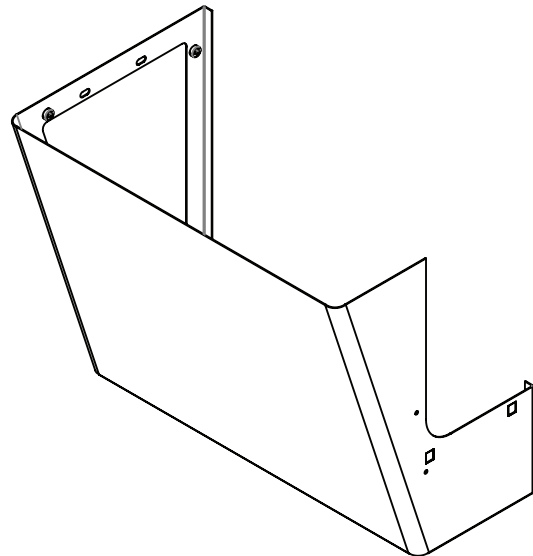


RIGHT SIDE


EZFMTLK WRAPPER  
EZFMTLP WRAPPER

# 1. Installation Procedure - Single level EZ coolers

1. Remove existing lower wrapper on the cooler by removing the (4) screws using a 5/16 nut driver.

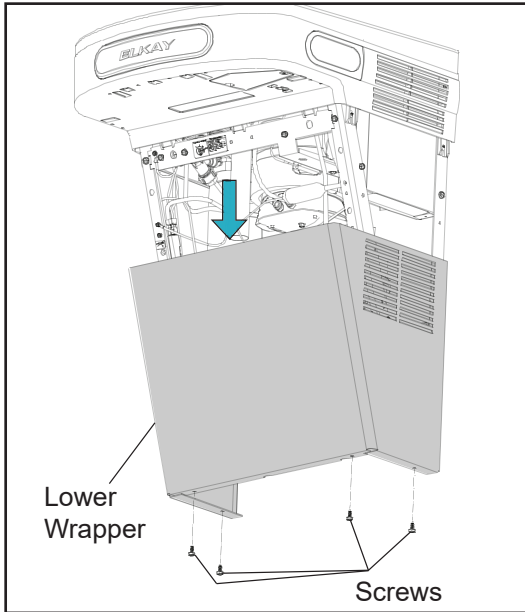

**Note:** While the side access wrapper is being secured, verify the upper profile (left, front, and right side) of the wrapper frame slides up and under the plastic basin shroud assembly for a tight fit (as shown).

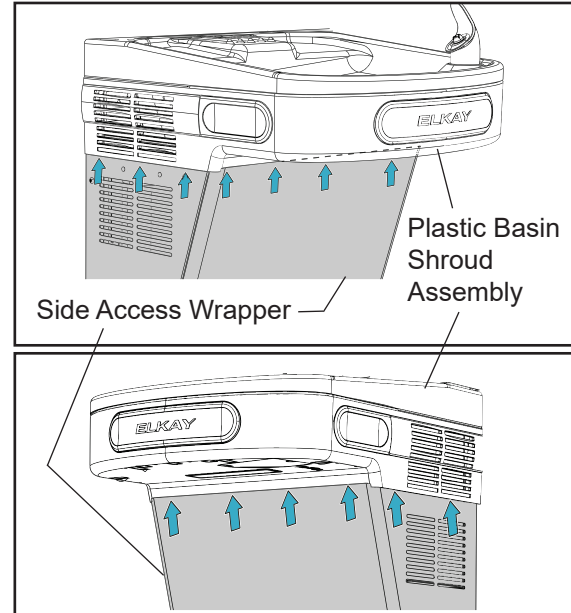


2. If you are replacing the filter, do that now with the lower wrapper removed. Refer to the Filter Replacement Instructions in Section 2, Step 3 or instruction sheet included with the replacement filter. If not, skip to the next step.
3. Unpack new side access wrapper from the box, peel off protective wrap and install it using the (4) supplied screws.

4. Dispose of old lower wrapper. It can be brought to a scrap metal recycler. Please check with your local waste hauler prior to placing scrap metal into a municipal recycling cart.




**CAUTION** Do not operate unit with access panel removed.

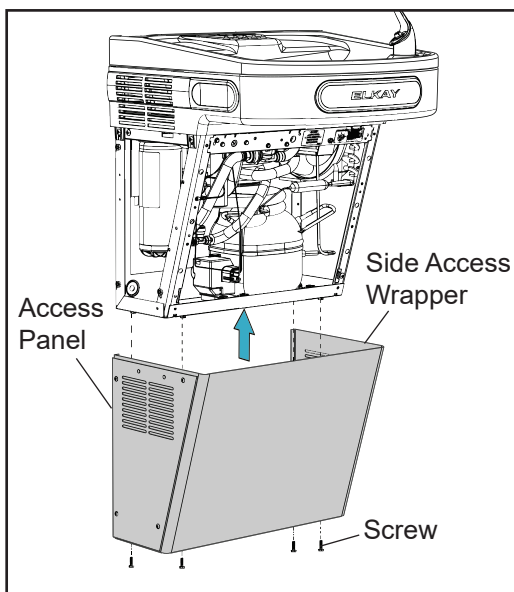

## 2. Installation Procedure - Bi-level EZ coolers


1. Remove existing lower wrapper on the cooler by removing the (4) screws using a 5/16 nut driver. Remove and retain the trim kit pieces that are attached to the lower wrapper for re-installation on the new wrapper.

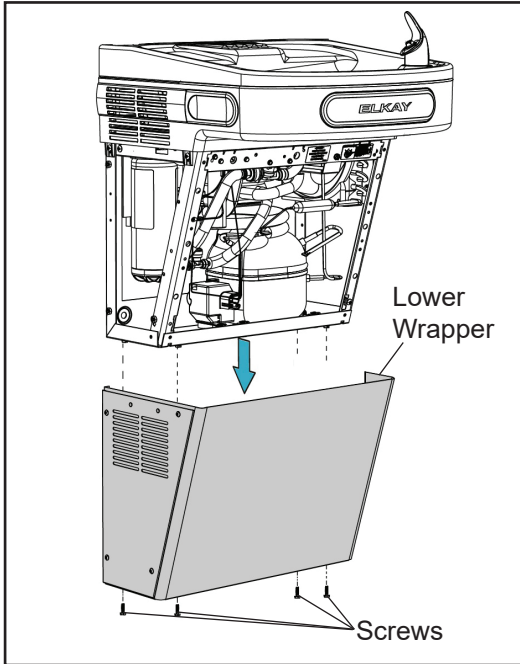


2. If you are replacing the filter, do that now with the lower wrapper removed. Refer to the Filter Replacement Instructions in Section 2, Step 3 or instruction sheet included with the replacement filter. If not, skip to the next step.

3. Unpack new side access wrapper from the box, peel off protective wrap and install it using the (4) supplied screws. Reapply trim kit to the new wrapper (if necessary) For Versatile wrapper trim kit instructions refer to the original installation instruction manual provided the Bi-Level unit.

**⚠ CAUTION** Do not operate unit with access panel removed.

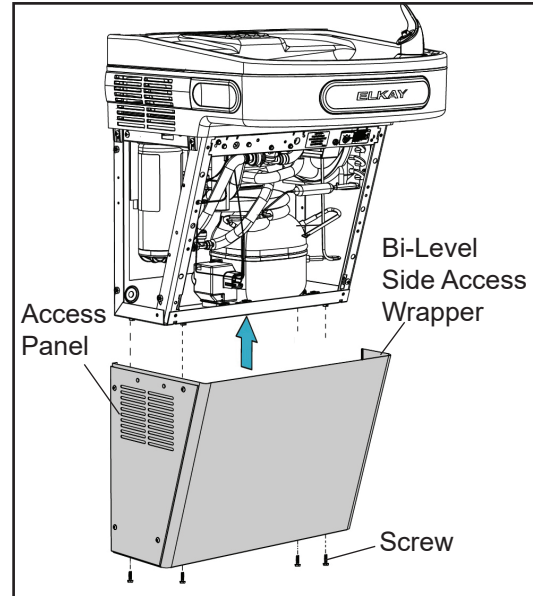


**Note:** While the side access wrapper is being secured, verify the upper profile (left, front, and right side) of the wrapper frame slides up and under the plastic basin shroud assembly for a tight fit (as shown).

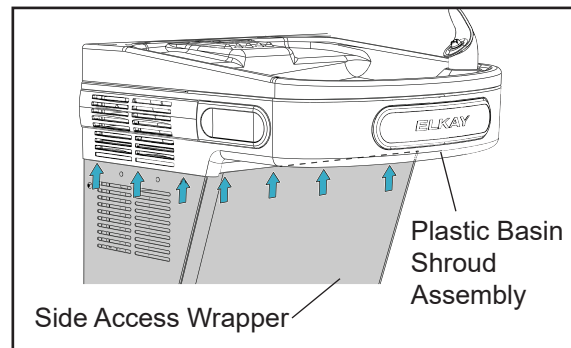

4. Dispose of old lower wrapper. It can be brought to a scrap metal recycler. Please check with your local waste hauler prior to placing scrap metal into a municipal recycling cart.

### 3. Future Filter Replacement Steps (Side Access)

1. Remove (4) security Torx screws using Torx T25 bit (included).

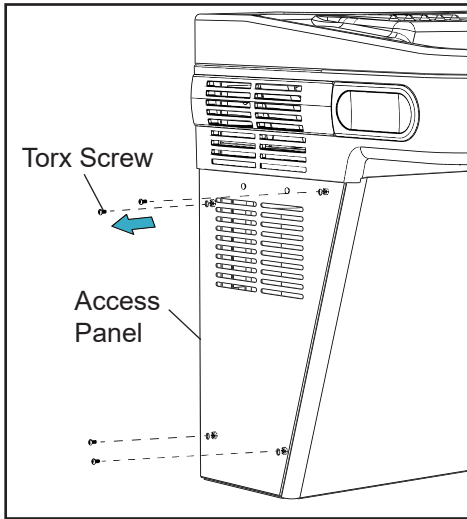


2. Remove side access panel and set it aside.
3. Refer to the following filter replacement steps.

**⚠ CAUTION** To avoid danger of an electric shock hazard, disconnect power to your unit before replacing the filter.

- Turn off water supply; dispense water to relieve pressure.
- Turn used filter counterclockwise 1/4 turn to remove from filter head.
- Remove cap from new filter and use to seal used filter.
- Write the date of filter installation on the label. Insert new filter into exiting filter head and turn fully clockwise so the label with date is clearly visible.
- Turn on water supply and run water for 10 minutes to purge air and fine carbon particles from filter.
- Reset the filter monitor, if necessary. See the Use Manual of the dispenser for instructions.

4. Take the side access panel and place it back on opening of the side access wrapper. Align the access panel by inserting the alignment pins on the back side of the panel into the alignment slots above wrapper frame opening (as shown).

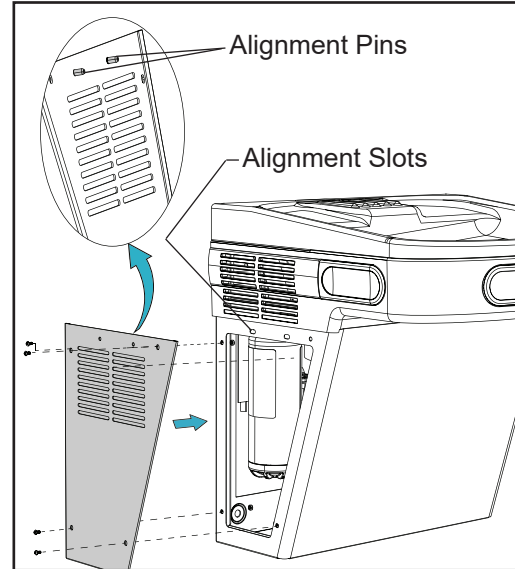

5. Once the access panel is set in place, refasten the (4) security Torx screws bits starting by hand and firmly secure each screw in place.

**⚠ CAUTION** Do not operate unit with access panel removed.

Replacement Parts	
Part Number	Description
2000000859	Wrapper Frame Assembly - Single - EZFMK
2000001072	Wrapper Frame Assembly - Bi-Level - EZFMTLK
2000000853	Kit - Replacement Filter Access Door W/Hardware
1000000888	Kit - Panel Wrapper Stainless TL
75520C	Bit - Pinned Torx T-25
51300C	Replacement Filter - 3000 Gallons
51600C	Replacement Filter - 6000 Gallons (Compatible with Enhanced ezH2O Bottle Filling Stations)

PRINTED IN U.S.A.

FOR PARTS, CONTACT YOUR LOCAL DISTRIBUTOR OR CALL 1.800.834.4816  
REPAIR SERVICE INFORMATION TOLL FREE NUMBER 1.800.260.6640

ELKAY MANUFACTURING COMPANY • 1333 BUTTERFIELD ROAD SUITE 200 DOWNERS GROVE, IL 60515 • 630.574.8484 • www.elkay.com