ELKAY®

Enhanced

INSTALLATION & USE MANUAL

LZ™ Series Bottle Filling Stations & Coolers



*Versatile cooler design allows units to be installed either left-hand high and right-hand low or left-low and right high. Basin change may be required. See desired rough-in to help determine if the basin change is necessary.

Important: The refrigerated coolers must be hung on the right side.

2000002208

BERL'S COMMERCIAL SUPPLY BERLS.COM (800) 409-3131

ATTENTION:
If the product serial number is before 190424189, please refer to archived documents section of Elkay.com for the most accurate parts list. (www.elkay.com/archived-documents)

MODELS COVERED WITH THIS MANUAL
LZSTL8WSLK
LZSTL8WSSK
LZSTL8WSVRSK
LZSTL8WSLP
LZSTL8WSSP
LZSTL8WSSP-PF
LZSTL8WSSP-W1
LZSTL8WSMP
LZSTL8WSMP-PF
LZSTL8WSMP-W1
LZSTL8WSAP
LZSTL8WSAP-PF
LZSTL8WSAP-W1

Pre-installation steps Connected models only

Install Zurn Gateway and Register Product in plumbSMART


1. Install Zurn Gateway (required and sold separately) per the gateway instructions manual, if an existing gateway is not within communication range.
2. Be sure the gateway is powered on and connected (per gateway installation instructions) prior to installing your bottle filler. Serial number located on back of the Gateway , is required to register the gateway to your tenant.
3. If you have not already set up an tenant account and your administrator access, request at 844-987-6737 or zurnconnectedproducts@zurn.com
4. Log into plumbsmart.zurn.com
5. Register Connected product in plumbSMART using PlumbSMART Registration ID located on PlumbSMART ID Registration Label, (See Fig. 10, Pg. 9). (Watch How-To videos to get started. Located in the support section inside the portal.)

BERL'S COMMERCIAL SUPPLY BERLS.COM (800) 409-3131

STANDARD ROUGH-IN FOR LEFT-HAND HIGH, BOTTLE FILLER LOW MODELS

BOSQUEJO ESTÁNDAR PARA MODELOS CON LA LLENADORA DE BOTELLAS BAJA Y LA PARTE IZQUIERDA ALTA

DISPOSITION DE CANALISATIONS STANDARD, POUR INSTALLATION GAUCHE HAUTE ET REMPLISSEUSE DE BOUTEILLE BASSE

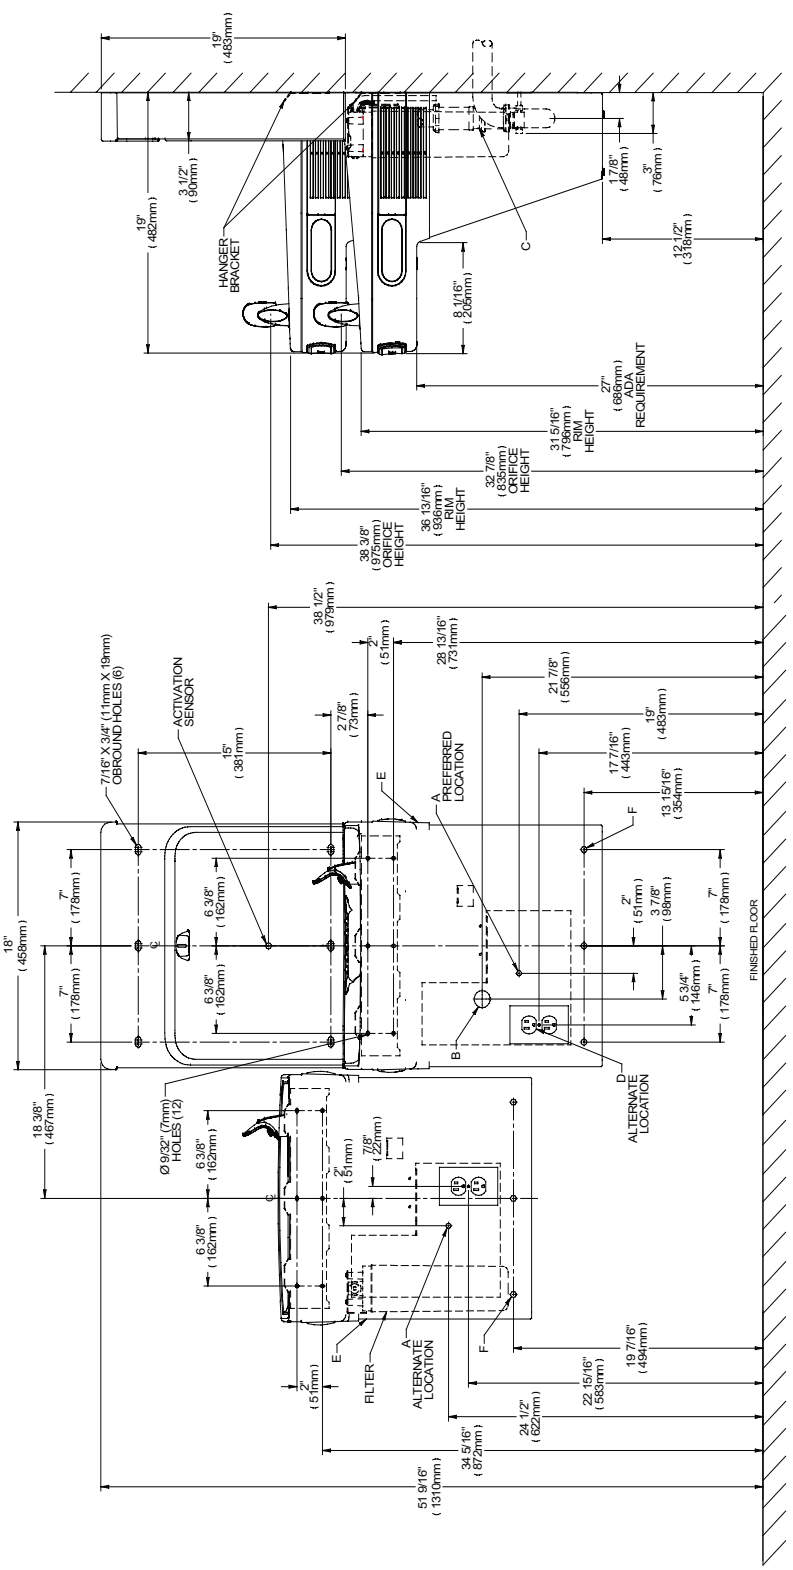

NOTE: REFRIGERATED COOLER MUST ALWAYS BE INSTALLED ON THE RIGHT SIDE

REDUCE HEIGHT BY 3 INCHES FOR INSTALLATION OF CHILDREN'S ADA COOLER
REDUZCA LA ALTURA EN 76 mm (3") PARA LA INSTALACIÓN DEL BEBEDERO CON CLASIFICACIÓN ADA PARA NIÑOS
RÉDUIRE LA HAUTEUR DE 76 mm (3 PO) POUR LES INSTALLATIONS À LA NORME ADA ENFANTS

LEGEND/LEYENDA/LÉGENDE
A = RECOMMENDED WATER SUPPLY LOCATION 3/8 O.D. UNPLATED COPPER TUBE CONNECT STUB WITH SHUT OFF (BY OTHERS) 3 IN. (76mm)
MAXIMUM OUT FROM WALL. MAXIMUM WATER SUPPLY PRESSURE: 105 PSI (0.73 MPa)
UBICACIÓN RECOMENDADA DEL SUMINISTRO DE AGUA. TUBERÍA DE COBRE SIN REVESTIMIENTO DE 3/8" DE DIÁM. EXT. ADAPTADOR DE CONEXIÓN CON VÁLVULA DE CIERRE (DE TERCEROS) MÁXIMO A 76 mm (3") DE LA PARED.
PRESIÓN MÁXIMA DE SUMINISTRO DE AGUA: 105 PSI (0.73 MPa)
EMPLACEMENT RECOMMANDÉ DE L'ARRIVÉE D'EAU. TUBE EN CUIVRE NON PLAQUÉ DE 3/8 PO DE DIA. EXT. RACCORDER À LA CONDUITE D'ALIMENTATION AVEC UN ROBINET D'ARRÊT (NON FOURNI) À 76 MM (3 PO) MAXIMUM DU MUR
PRESSION MAXIMALE D'ALIMENTATION EN EAU: 105 PSI (0.73 MPa).
B = RECOMMENDED LOCATION FOR WASTE OUTLET 1-1/2" O.D. DRAIN STUB 2 IN. OUT FROM WALL.
UBICACIÓN RECOMENDADA DE LA SALIDA DE DESECHOS. ADAPTADOR DE DESAGÜE DE 1-1/2" DE DIÁM. EXT., A 51 mm (2") DE LA PARED.
EMPLACEMENT RECOMMANDÉ DE LA SORTIE D'ÉCOULEMENT. CONDUITE D'ÉVACUATION DE 1-1/2 PO DE DIA. EXT. DÉPASSANT DE 51 mm (2 PO) HORS DU MUR
C = 1-1/2" TRAP NOT FURNISHED
NO SE INCLUYE SIFÓN DE 1-1/2"
SIPHON DE 1-1/2 PO NON FOURNI


LEGEND/LEYENDA/LÉGENDE
D = ELECTRICAL SUPPLY (3) WIRE RECESSED BOX DUPLEX OUTLET**
SUMINISTRO ELÉCTRICO (3) CAJA ENCHUFE DE ALAMBRE SALIDA DÚPLEX
ALIMENTATION ÉLECTRIQUE (3) BOÎTIER ENCASTRÉ
E = INSURE PROPER VENTILATION BY MAINTAINING 6" (152 mm) (MIN.) CLEARANCE FROM CABINET LOUVERS TO WALL.
PARA GARANTIZAR LA VENTILACIÓN ADECUADA, MANTENGA 152 mm (6") (MÍN.) DE SEPARACIÓN DESDE LAS REJILLAS DEL GABINETE HASTA LA PARED.
POUR ASSURER UNE AÉRATION SUFFISANTE, PRÉVOIR UN DÉGAGEMENT DE 152 mm (6 PO) (MIN.) ENTRE LES ÉVENTS DE L'ENCEINTE ET LE MUR.
F = 7/16 BOLT HOLES FOR FASTENING UNIT TO WALL
ORIFICIOS PARA PERNOS DE 7/16, PARA FIJAR LA UNIDAD A LA PARED
TROUS DE VIS DE 7/16 PO POUR LA FIXATION DE L'APPAREIL AU MUR
****NEW INSTALLATIONS MUST USE GROUND FAULT CIRCUIT INTERRUPTER (GFCI)**
****Las nuevas instalaciones deben usar un interruptor de circuito de falla a tierra (GFCI, por sus siglas en inglés)**
****Les nouvelles installations doivent comporter un disjoncteur différentiel (GFCI)**
NOTE: It is highly recommended that the circuit be dedicated and the load protection be sized for 20 amps.
NOTA: Es muy recomendable que el circuito esté dedicado y que la protección de carga tenga un tamaño de 20 amperios.
REMARQUE: Il est fortement recommandé de dédier le circuit et de dimensionner la protection de charge à 20 ampères.

FIG. 1

ALTERNATE ROUGH-IN FOR RIGHT-HAND HIGH, BOTTLE FILLER LOW MODELS – REQUIRES BASIN ASSY CHANGE

BOSQUEJO ALTERNATIVO PARA MODELOS CON LA LLENADORA DE BOTELLAS BAJA Y LA PARTE DERECHA ALTA: REQUIERE CAMBIAR EL CONJUNTO DE TARJA

AUTRE DISPOSITION DE CANALISATIONS, POUR INSTALLATION DROITE HAUTE ET REMPLISSEUSE DE BOUTEILLE BASSE – MODIFICATION DE LA FONTAINE REQUISE

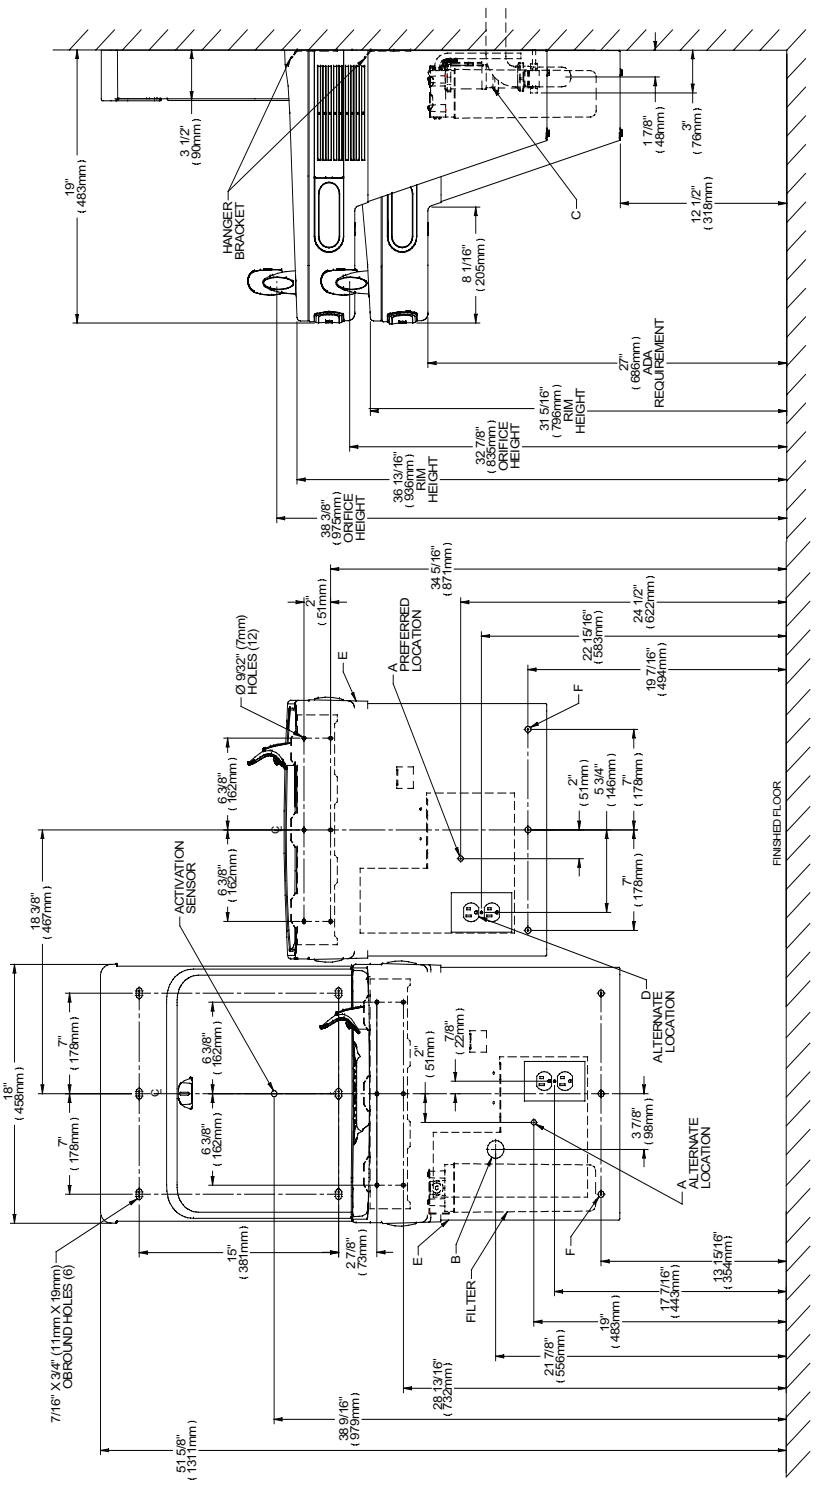

NOTE: REFRIGERATED COOLER MUST ALWAYS BE INSTALLED ON THE RIGHT SIDE

REDUCE HEIGHT BY 3 INCHES FOR INSTALLATION OF CHILDREN'S ADA COOLER
REDUZCA LA ALTURA EN 76 mm (3") PARA LA INSTALACIÓN DEL BEBEDERO CON CLASIFICACIÓN ADA PARA NIÑOS
RÉDUIRE LA HAUTEUR DE 76 mm (3 PO) POUR LES INSTALLATIONS À LA NORME ADA ENFANTS

NOTE: TO COMPLETE THIS OPTION, THE VERSATILE BF BASIN KIT (VERSATILEBFKIT) MUST BE ORDERED SEPARATELY.
NOTA: PARA COMPLETAR ESTA OPCIÓN, SE DEBE PEDIR POR SEPARADO EL KIT DE LAVABO VERSÁTIL BF (VERSATILEBFKIT).
REMARQUE : POUR COMPLÉTER CETTE OPTION, LE KIT DE LAVABO POLYVALENT BF (VERSATILEBFKIT) DOIT ÊTRE COMMANDÉ SÉPARÉMENT.

LEGEND/LEYENDA/LÉGENDE
A = RECOMMENDED WATER SUPPLY LOCATION 3/8 O.D. UNPLATED COPPER TUBE CONNECT STUB WITH SHUT OFF (BY OTHERS) 3 IN. (76mm) MAXIMUM OUT FROM WALL, MAXIMUM WATER SUPPLY PRESSURE: 105 PSI (0.73 MPa)
UBICACIÓN RECOMENDADA DEL SUMINISTRO DE AGUA. TUBERÍA DE COBRE SIN REVESTIMIENTO DE 3/8" DE DIÁM. EXT. ADAPTADOR DE CONEXIÓN CON VÁLVULA DE CIERRE (DE TERCEROS) MÁXIMO A 76 mm (3") DE LA PARED.
PRESIÓN MÁXIMA DE SUMINISTRO DE AGUA: 105 PSI (0.73 MPa)
EMPLACEMENT RECOMMANDÉ DE L'ARRIVÉE D'EAU. TUBE EN CUIVRE NON PLAQUÉ DE 3/8 PO DE DIA. EXT. RACCORDER À LA CONDUITE D'ALIMENTATION AVEC UN ROBINET D'ARRÊT (NON FOURNI) À 76 mm (3 PO) MAXIMUM DU MUR
PRESSION MAXIMALE D'ALIMENTATION EN EAU: 105 PSI (0.73 MPa)
B = RECOMMENDED LOCATION FOR WASTE OUTLET 1-1/2" O.D. DRAIN STUB 2 IN. OUT FROM WALL
UBICACIÓN RECOMENDADA DE LA SALIDA DE DESECHOS. ADAPTADOR DE DESAGÜE DE 1-1/2" DE DIÁM. EXT., A 51 mm (2") DE LA PARED.
EMPLACEMENT RECOMMANDÉ DE LA SORTIE D'ÉCOULEMENT. CONDUITE D'ÉVACUATION DE 1-1/2 PO DE DIA. EXT. DÉPASSANT DE 51 mm (2 PO) HORS DU MUR
C = 1-1/2" TRAP NOT FURNISHED
NO SE INCLUYE SIFÓN DE 1-1/2"
SIPHON DE 1-1/2 PO NON FOURNI

LEGEND/LEYENDA/LÉGENDE
D = ELECTRICAL SUPPLY (3) WIRE RECESSED BOX DUPLEX OUTLET**
SUMINISTRO ELÉCTRICO (3) CAJA ENCHUFE DE ALAMBRE SALIDA DÚPLEX
ALIMENTATION ÉLECTRIQUE (3) BOÎTIER ENCASTRÉ
E = INSURE PROPER VENTILATION BY MAINTAINING 6" (152 mm) (MIN.) CLEARANCE FROM CABINET LOUVERS TO WALL.
PARA GARANTIZAR LA VENTILACIÓNADECUADA, MANTENGA 152 mm (6") (MÍN.) DE SEPARACIÓN DESDE LAS REJILLAS DEL GABINETE HASTA LA PARED.
POUR ASSURER UNE AÉRATION SUFFISANTE, PRÉVOIR UN DÉGAGEMENT DE 152 mm (6 PO) (MIN.) ENTRE LES ÉVENTS DE L'ENCEINTE ET LE MUR.
F = 7/16 BOLT HOLES FOR FASTENING UNIT TO WALL
ORIFICIOS PARA PERNOS DE 7/16, PARA FIJAR LA UNIDAD A LA PARED
TROUS DE VIS DE 7/16 PO POUR LA FIXATION DE L'APPAREIL AU MUR
****NEW INSTALLATIONS MUST USE GROUND FAULT CIRCUIT INTERRUPTER (GFCI)**
****Las nuevas instalaciones deben usar un interruptor de circuito de falla a tierra (GFCI, por sus siglas en inglés)**
****Les nouvelles installations doivent comporter un disjoncteur différentiel (GFCI)**
NOTE: It is highly recommended that the circuit be dedicated and the load protection be sized for 20 amps.
NOTA: Es muy recomendable que el circuito esté dedicado y que la protección de carga tenga un tamaño de 20 amperios.
REMARQUE: Il est fortement recommandé de dédier le circuit et de dimensionner la protection de charge à 20 ampères.

FIG. 2

ALTERNATE ROUGH-IN FOR LEFT-HAND LOW, BOTTLE FILLER HIGH MODELS

BOSQUEJO ALTERNATIVO PARA MODELOS CON LA LLENADORA DE BOTELLAS ALTA Y LA PARTE IZQUIERDA BAJA
AUTRE DISPOSITION DE CANALISATIONS, POUR INSTALLATION GAUCHE BASSE ET REMPLISSEUSE DE BOUTEILLE HAUTE

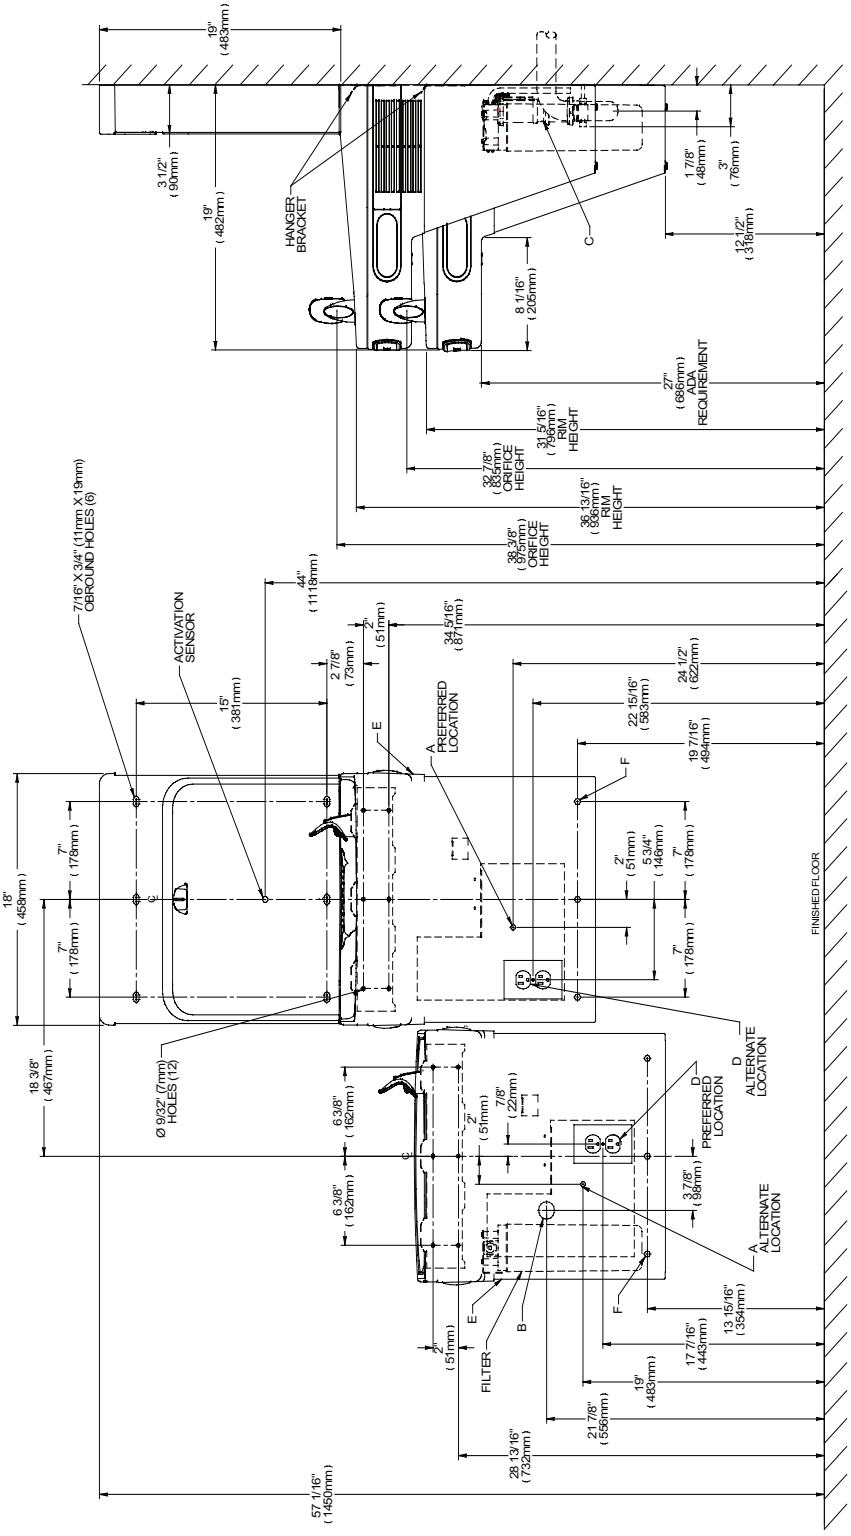


FIG. 3

NOTE: REFRIGERATED COOLER MUST ALWAYS BE INSTALLED ON THE RIGHT SIDE

REDUCE HEIGHT BY 3 INCHES FOR INSTALLATION OF CHILDREN'S ADA COOLER
REDUZCA LA ALTURA EN 76 mm (3") PARA LA INSTALACIÓN DEL BEBEDERO CON CLASIFICACIÓN ADA PARA NIÑOS
RÉDUIRE LA HAUTEUR DE 76 mm (3 PO) POUR LES INSTALLATIONS À LA NORME ADA ENFANTS

LEGEND/LEYENDA/LÉGENDE
A = RECOMMENDED WATER SUPPLY LOCATION 3/8 O.D. UNPLATED COPPER TUBE CONNECT STUB WITH SHUT OFF (BY OTHERS) 3 IN. (76mm) MAXIMUM OUT FROM WALL. MAXIMUM WATER SUPPLY PRESSURE: 105 PSI (0.73 MPa)
UBICACIÓN RECOMENDADA DEL SUMINISTRO DE AGUA. TUBERÍA DE COBRE SIN REVESTIMIENTO DE 3/8" DE DIÁM. EXT. ADAPTADOR DE CONEXIÓN CON VÁLVULA DE CIERRE (DE TERCEROS) MÁXIMO A 76 mm (3") DE LA PARED.
PRESIÓN MÁXIMA DE SUMINISTRO DE AGUA: 105 PSI (0,73 MPa)
EMPLACEMENT RECOMMANDÉ DE L'ARRIVÉE D'EAU. TUBE EN CUIVRE NON PLAQUÉ DE 3/8 PO DE DIA. EXT. RACCORDER À LA CONDUITE D'ALIMENTATION AVEC UN ROBINET D'ARRÊT (NON FOURNI) À 76 mm (3 PO) MAXIMUM DU MUR
PRESSION MAXIMALE D'ALIMENTATION EN EAU: 105 PSI (0,73 MPa)
B = RECOMMENDED LOCATION FOR WASTE OUTLET 1-1/2" O.D. DRAIN STUB 2 IN. OUT FROM WALL
UBICACIÓN RECOMENDADA DE LA SALIDA DE DESECHOS. ADAPTADOR DE DESAGÜE DE 1-1/2" DE DIÁM. EXT., A 51 mm (2") DE LA PARED.
EMPLACEMENT RECOMMANDÉ DE LA SORTIE D'ÉCOULEMENT. CONDUITE D'ÉVACUATION DE 1-1/2 PO DE DIA. EXT. DÉPASSANT DE 51 mm (2 PO) HORS DU MUR.
C = 1-1/2" TRAP NOT FURNISHED
NO SE INCLUYE SIFÓN DE 1-1/2"
SIPHON DE 1-1/2 PO NON FOURNI


LEGEND/LEYENDA/LÉGENDE
D = ELECTRICAL SUPPLY (3) WIRE RECESSED BOX DUPLEX OUTLET**
SUMINISTRO ELÉCTRICO (3) CAJA ENCHUFE DE ALAMBRE SALIDA DÚPLEX
ALIMENTATION ÉLECTRIQUE (3) BOÎTIER ENCASTRÉ
E = INSURE PROPER VENTILATION BY MAINTAINING 6" (152 mm) (MIN.) CLEARANCE FROM CABINET LOUVERS TO WALL.
PARA GARANTIZAR LA VENTILACIÓN ADECUADA, MANTENGA 152 mm (6") (MÍN.) DE SEPARACIÓN DESDE LAS REJILLAS DEL GABINETE HASTA LA PARED.
POUR ASSURER UNE AÉRATION SUFFISANTE, PRÉVOIR UN DÉGAGEMENT DE 152 mm (6 PO) (MIN.) ENTRE LES ÉVENTS DE L'ENCEINTE ET LE MUR.
F = 7/16 BOLT HOLES FOR FASTENING UNIT TO WALL
ORIFICIOS PARA PERNOS DE 7/16, PARA FIJAR LA UNIDAD A LA PARED
TROUS DE VIS DE 7/16 PO POUR LA FIXATION DE L'APPAREIL AU MUR
****NEW INSTALLATIONS MUST USE GROUND FAULT CIRCUIT INTERRUPTER (GFCI)**
****Las nuevas instalaciones deben usar un interruptor de circuito de falla a tierra (GFCI)**
****Les nouvelles installations doivent comporter un disjoncteur différentiel (GFCI)**

BERL'S COMMERCIAL SUPPLY
BERLS.COM
(800) 409-3131

ALTERNATE ROUGH-IN FOR RIGHT-HAND LOW, BOTTLE FILLER HIGH MODELS – REQUIRES BASIN ASSY CHANGE

BOSQUEJO ALTERNATIVO PARA MODELOS CON LA LLENADORA DE BOTELLAS ALTA Y LA PARTE DERECHA BAJA: REQUIERE CAMBIAR EL CONJUNTO DE TARJA

AUTRE DISPOSITION DE CANALISATIONS, POUR INSTALLATION DROITE BASSE ET REMPLISSEUSE DE BOUTEILLE HAUTE – MODIFICATION DE LA FONTAINE REQUISE

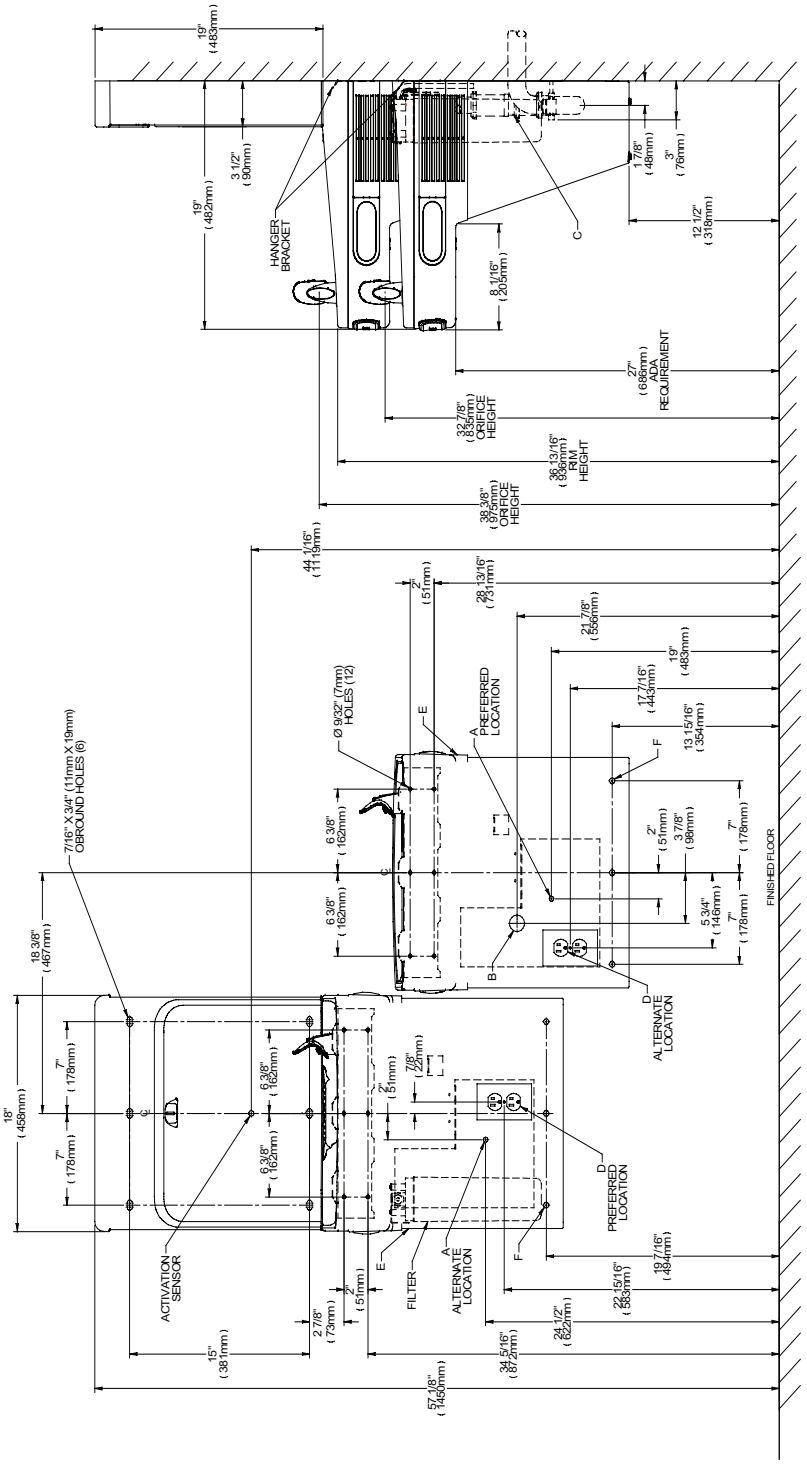

NOTE: REFRIGERATED COOLER MUST ALWAYS BE INSTALLED ON THE RIGHT SIDE

REDUCE HEIGHT BY 3 INCHES FOR INSTALLATION OF CHILDREN'S ADA COOLER
REDUZCA LA ALTURA EN 76 mm (3") PARA LA INSTALACIÓN DEL BEBEDERO CON CLASIFICACIÓN ADA PARA NIÑOS
RÉDUIRE LA HAUTEUR DE 76 mm (3 PO) POUR LES INSTALLATIONS À LA NORME ADA ENFANTS

NOTE: TO COMPLETE THIS OPTION, THE VERSATILE BF BASIN KIT (VERSATILEBFKIT) MUST BE ORDERED SEPARATELY.
NOTA: PARA COMPLETAR ESTA OPCIÓN, SE DEBE PEDIR POR SEPARADO EL KIT DE LAVABO VERSÁTIL BF (VERSATILEBFKIT).
REMARQUE : POUR COMPLÉTER CETTE OPTION, LE KIT DE LAVABO POLYVALENT BF (VERSATILEBFKIT) DOIT ÊTRE COMMANDÉ SÉPARÉMENT.

LEGEND/LEYENDA/LÉGENDE
A = RECOMMENDED WATER SUPPLY LOCATION 3/8 O.D. UNPLATED COPPER TUBE CONNECT STUB WITH SHUT OFF (BY OTHERS) 3 IN. (76mm) MAXIMUM OUT FROM WALL, MAXIMUM WATER SUPPLY PRESSURE: 105 PSI (0.73 MPa)
UBICACIÓN RECOMENDADA DEL SUMINISTRO DE AGUA. TUBERÍA DE COBRE SIN REVESTIMIENTO DE 3/8" DE DIÁM. EXT. ADAPTADOR DE CONEXIÓN CON VÁLVULA DE CIERRE (DE TERCEROS) MÁXIMO A 76 mm (3") DE LA PARED.
PRESIÓN MÁXIMA DE SUMINISTRO DE AGUA: 105 PSI (0.73 MPa)
EMPLACEMENT RECOMMANDÉ DE L'ARRIVÉE D'EAU. TUBE EN CUIVRE NON PLAQUÉ DE 3/8 PO DE DIA. EXT. RACCORDER À LA CONDUITE D'ALIMENTATION AVEC UN ROBINET D'ARRÊT (NON FOURNI) À 76 mm (3 PO) MAXIMUM DU MUR
PRESSION MAXIMALE D'ALIMENTATION EN EAU: 105 PSI (0,73 MPa)
B = RECOMMENDED LOCATION FOR WASTE OUTLET 1-1/2" O.D. DRAIN STUB 2 IN. OUT FROM WALL
UBICACIÓN RECOMENDADA DE LA SALIDA DE DESECHOS. ADAPTADOR DE DESAGÜE DE 1-1/2" DE DIÁM. EXT., A 51 mm (2") DE LA PARED.
EMPLACEMENT RECOMMANDÉ DE LA SORTIE D'ÉCOULEMENT. CONDUITE D'ÉVACUATION DE 1-1/2 PO DE DIA. EXT. DÉPASSANT DE 51 mm (2 PO) HORS DU MUR
C = 1-1/2" TRAP NOT FURNISHED
NO SE INCLUYE SIFÓN DE 1-1/2"
SIPHON DE 1-1/2 PO NON FOURNI

LEGEND/LEYENDA/LÉGENDE
D = ELECTRICAL SUPPLY (3) WIRE RECESSED BOX DUPLEX OUTLET**
SUMINISTRO ELÉCTRICO (3) CAJA ENCHUFE DE ALAMBRE SALIDA DÚPLEX
ALIMENTATION ÉLECTRIQUE (3) BOÎTIER ENCASTRÉ
E = INSURE PROPER VENTILATION BY MAINTAINING 6" (152 mm) (MIN.) CLEARANCE FROM CABINET LOUVERS TO WALL.
PARA GARANTIZAR LA VENTILACIÓN ADECUADA, MANTENGA 152 mm (6") (MÍN.) DE SEPARACIÓN DESDE LAS REJILLAS DEL GABINETE HASTA LA PARED.
POUR ASSURER UNE AÉRATION SUFFISANTE, PRÉVOIR UN DÉGAGEMENT DE 152 mm (6 PO) (MIN.) ENTRE LES ÉVENTS DE L'ENCEINTE ET LE MUR.
F = 7/16 BOLT HOLES FOR FASTENING UNIT TO WALL
ORIFICIOS PARA PERNOS DE 7/16. PARA FIJAR LA UNIDAD A LA PARED
TROUS DE VIS DE 7/16 PO POUR LA FIXATION DE L'APPAREIL AU MUR
****NEW INSTALLATIONS MUST USE GROUND FAULT CIRCUIT INTERRUPTER (GFCI)**
****Las nuevas instalaciones deben usar un interruptor de circuito de falla a tierra (GFCI)**
****Les nouvelles installations doivent comporter un disjoncteur différentiel (GFCI)**

FIG. 4

INSTRUCTIONS FOR REMOVING WRAPPER

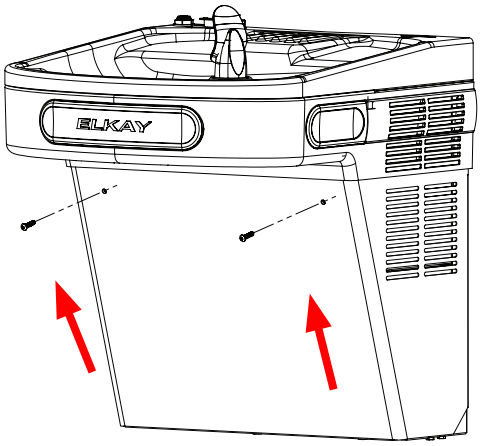
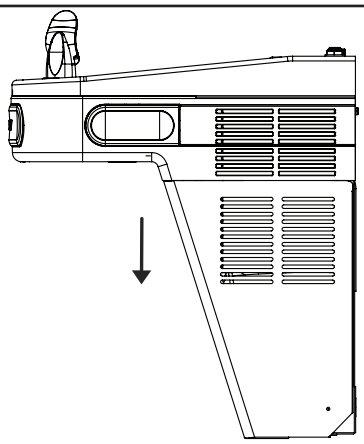


Fig. D(i)



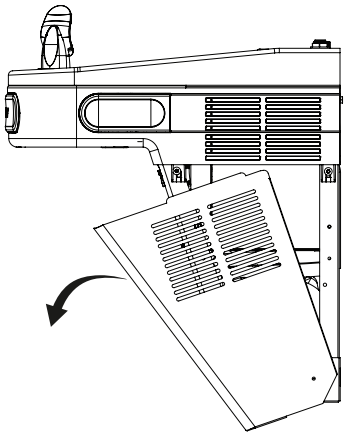


Fig. D(ii)

1) Remove the two security screws (size T25) from the front panel. (see Fig D(i)).
   NOTE: SCREW THREADS INTO BUSHING WHILE ANGLED. DO NOT ATTEMPT TO THREAD SCREW INTO BUSHING HORIZONTALLY.
2) Gently pull the wrapper down and rotate the wrapper to a downward position (see Fig D(ii)).
3) To remove the wrapper, hold each side and gently pull wrapper up and out of pivoting bracket (see Fig D(iii)).

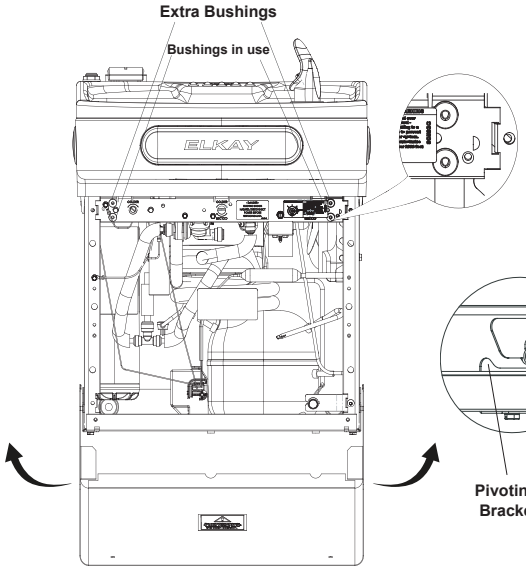


Fig. D(iii)

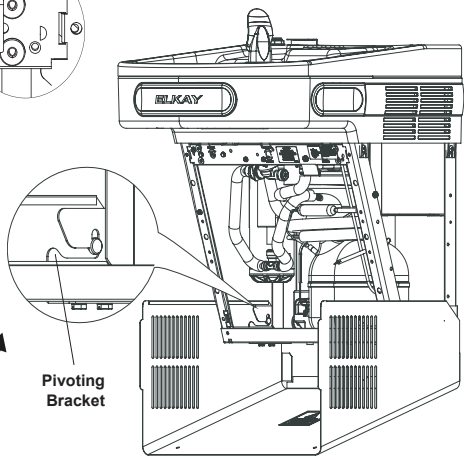


Fig. D(v)

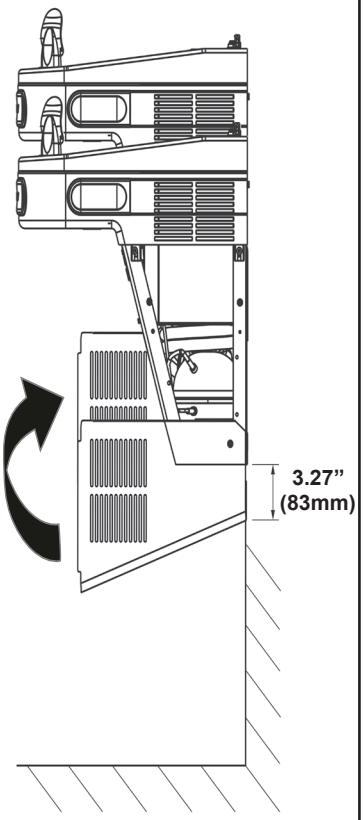


Fig. D(iv)

⚠ **CAUTION**: WRAPPER DROPS AND SWINGS WHEN SECURITY SCREWS ARE REMOVED.

⚠ **CAUTION**: DO NOT LEAN ON WRAPPER.

⚠ **CAUTION**: DO NOT USE POWER TOOL TO TIGHTEN. DO NOT OVERTIGHTEN.

NOTE:

1. Ensure that there are no plumbing or external objects below the wrapper in the specified dimension. The specified (3.27”) minimum distance is required for the wrapper to swing out (see Fig D(iv)).
2. Removing the wrapper from the pivoting bracket when servicing the unit is recommended. The wrapper may be left in place for quick serviceability (see Fig D(iii)).
3. When re-attaching wrapper, ensure each side of wrapper is engaged to pivoting bracket (see Fig D(v)).
4. Once the wrapper is in place, rotate wrapper up and under the shroud. Ensure thru holes on wrapper are aligned with plastic bushing threads on the frame prior to engaging security screws. Ensure screw is angled relative to the ground and perpendicular to wrapper surface prior to engagement. Hand tighten prior to using hand tool to avoid cross-threading.
5. Four plastic bushings are located in the cross brace of the frame. The lower two bushings align with wrapper holes and the top two bushings are extras in case of replacement (see Fig D(iii)).

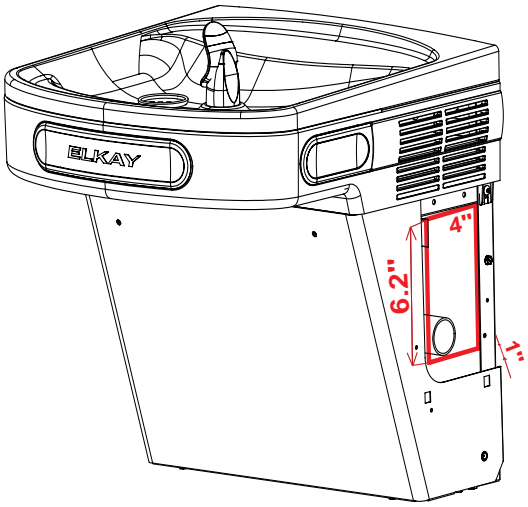


Fig. E

NOTE:
The highlighted portion in red color is acceptable plumbing rough-in for installation.

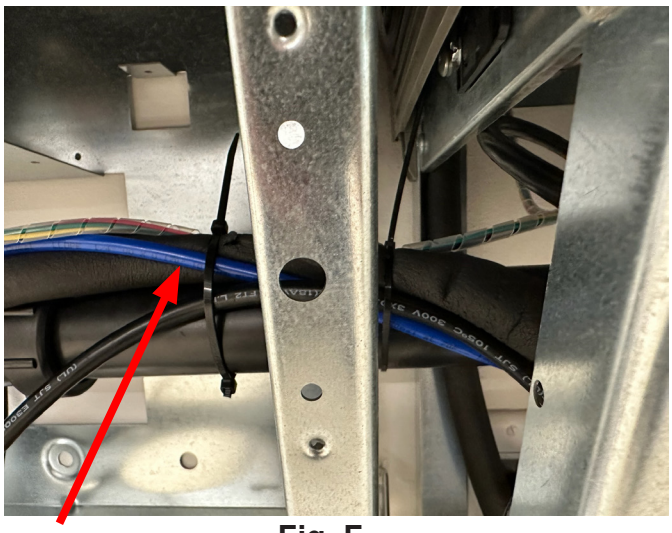


Fig. F

NOTE:
To mitigate the wrapper rotation interferences, zip tie lines (plumbing and electrical) running between the cooler units to the waste line (PVC pipe).

HANGER BRACKETS INSTALLATION

1) Remove hanger bracket fastened to back of coolers by removing one (1) screw.
2) Determine your mounting configuration from the figures shown on pages 3 - 6. Refrigeration unit must be on right hand side.

IMPORTANT NOTE: If the Bottle Filler is to be mounted on the left hand cooler, a basin assembly change will be needed Determine your configuration by referring to the Configuration Instructions on page 10 prior to continuing.

3) Mount the hanger bracket as shown in Figures 1 - 4 (Pages 3 - 6).
NOTE: Hanger Bracket MUST be supported securely. Add fixture support carrier if wall will not provide adequate support. Anchor hanger securely to wall using all six (6) 1/4 in. dia. mounting holes.

IMPORTANT: 5-7/8 in. (150 mm) dimension from wall to centerline of trap must be maintained for proper fit.

INSTALLATION OF COOLER

4) Refer Fig D(i) to D(iv), Pg. 7 for wrapper removing instructions.
5) Hang only the refrigerated cooler on the hanger bracket. Be certain hanger bracket is properly in the slots on the cooler backs as shown in Figures 1 (Pg. 3), 2 (Pg.4), 3 (Pg. 5), and 4 (Pg. 6).
6) Hang the non-refrigerated cooler on the hanger bracket. Be certain hanger bracket is engaged properly in the slots on the cooler backs as shown in Figures 1 (Pg. 3), 2 (Pg. 4), 3 (Pg. 5), and 4 (Pg. 6).
7) Unband the loose wires in the refrigerated cooler for the filter communication board. Stretch it out and thread through the left side of the refrigerated cooler and into the right side of the non-refrigerated cooler. Plug into the filter communication board that is behind the filter head.
8) Secure each cooler frame to wall by installing (2) screws and washers (not supplied) in lower holes. See pictures below.

Make sure the screws engage in a structural member.

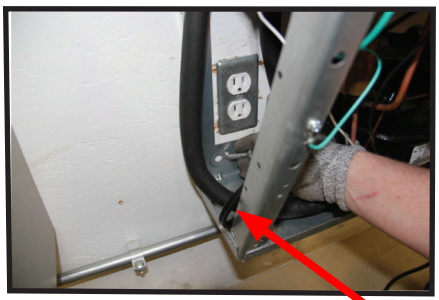


FIG. 5



FIG. 6

9) Connect the supply water to the filter 3/8” copper inlet tube.
10) Connect the waterline from the outlet of the filter to the inlet of the evaporator in the refrigerated cooler by inserting it into the quick connector.
11) Connect the waterline from the solenoid in the non-refrigerated cooler to the open 1/4” inch tee fitting in the refrigerated cooler.
12) Find your cooler configuration on page 13 and connect the drain assembly together.
13) Install trap.

IMPORTANT: If it is necessary to cut the drain, loosen the screw at the black rubber boot and remove tube, check for leaks after re-assembly.

BERL'S COMMERCIAL SUPPLY BERLS.COM (800) 409-3131

BOTTLE FILLER INSTALLATION

14) Remove two (2) mounting screws with 5/32" Allen wrench holding Bottle Filler to wall mounting plate (See Fig. 10). Note do not discard mounting screws, they will be needed to secure Bottle Filler to wall mounting plate.
15) Remove wall mounting plate from Bottle Filler (See Fig. 7). Place wall mounting plate against wall on top of basin. Center the wall mounting plate side to side with the basin. Mark the six (6) mounting holes with a pencil (See Fig. 5, Pg. 8). Place tape over wiring harness connection on top of cooler to prevent debris from falling into Connection.
16) Remove wall mounting plate from wall. **NOTE**: Mounting plate **MUST** be supported securely. Add fixture support carrier if wall will not provide adequate support.
17) Install wall mounting plate to wall using six (6) 7/16" obround mounting holes (mounting bolts not included) (See Fig. 6, Pg. 8). Use appropriate fasteners for your wall type.
18) Install gasket on bottom of Bottle Filler with gasket support bracket & (2) screws. (See Fig. 7).

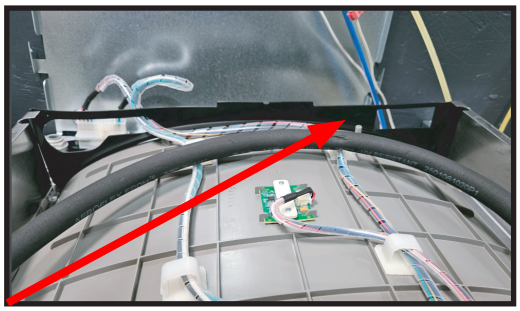


FIG. 7

19) Route 3/8" tubing through the opening in the bottle filler gasket and plug into bulkhead fitting in basin. Route the wiring harness through the gasket and plug into the connector on the top of the basin. Water line should be cut to length prior to attaching to bulkhead fitting.
20) Place Bottle Filler on the four (4) hooks on the mounting plate installed on wall.

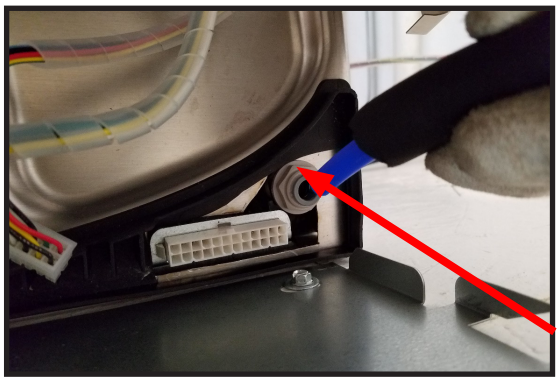


Fig. 8

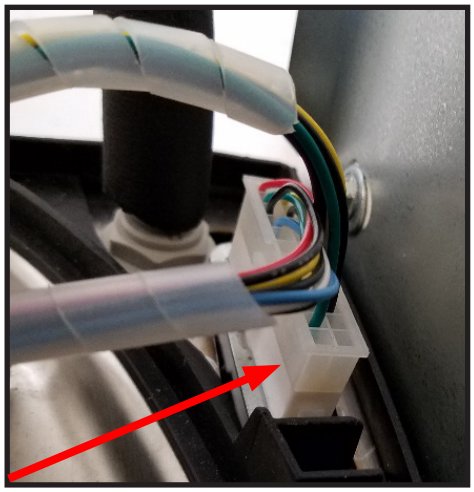


Fig. 9

Connected Models Only

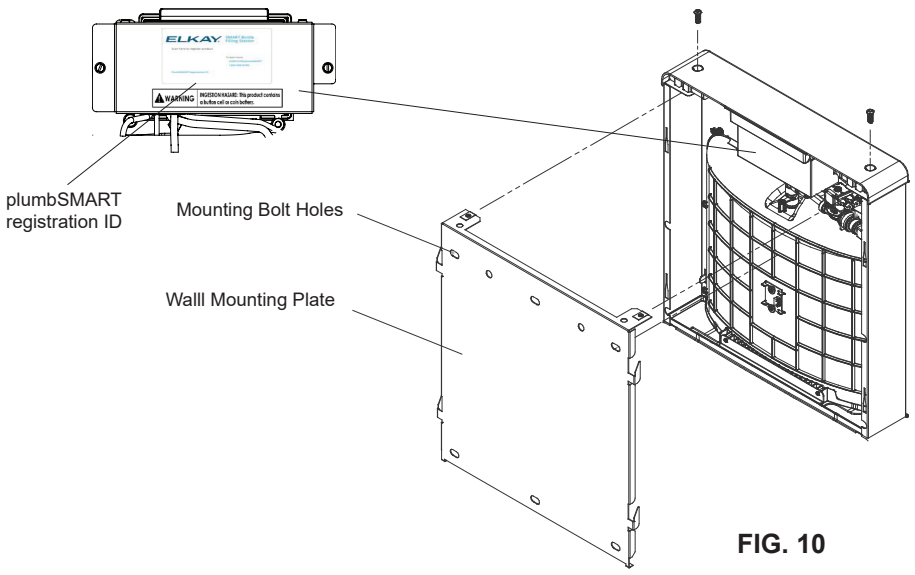


FIG. 10
Bottle Filling Unit

FINAL INSTALLATION (FILTER)

21) Remove filter from carton, remove protective cap, attach filter to filter head by firmly inserting into head and rotating filter clockwise. Ensure that front facing label can be read when filter is installed. (See Fig. 11)
22) Turn water supply on and inspect for leaks. In both cooler and Bottle Filler. Fix all leaks before continuing.
23) Once cooler and bottle filter have been inspected for leaks and any leaks corrected, plug cooler into wall.
24) Reinstall two mounting screws from first step above. Caution do not over tighten screws.
25) Once power is applied to the cooler the BLUE LED light will illuminate on the bottle filler showing good filter status along with the LCD Bottle Counter.
26) Verify proper dispensing by placing cup, hand, or any opaque object in front of sensor area and verify that the water dispenses. Note: the first initial dispenses might have air in line which may cause a sputter and hazy appearance. Run water and flush filter to purge air and fine carbon particles from filter before use. This will be eliminated when all air is purged from the line.
27) Once unit tests out, install Lower Panels back on water coolers. (See pages 14-15 for versatile wrapper installation).
28) When re-attaching wrapper, push wrapper up and under the shroud. Make sure wrapper and bushing holes are aligned prior to inserting screw. Units are now ready for use.



Front of Filter Back of Filter

FIG. 11

Note: Danger! Electrical shock hazard. Disconnect power before servicing unit.

Note: For models with a Secop compressor verify 0.0V across the capacitor terminals before servicing

INSTRUCTIONS FOR REPLACING FILTERS

1) Refer Fig D(i) to D(iv), Pg. 7 for wrapper removing instructions.
2) Turn off water supply; dispense water to relieve pressure.
3) Disconnect electrical power by unplugging unit's power cord.
4) Turn used filter counterclockwise 1/4 turn to remove from filter head.
5) Remove cap from new filter and use to seal used filter.
6) Insert new filter into existing filter head and turn fully clockwise. Make sure you can read the label on the front of the filter once it is installed. (See Fig. 12).
7) Connect electrical power by plugging in unit's power cord.
8) Turn on water supply and run water and flush filter to purge air and fine carbon particles from filter before use. Visit elkay.com/filtration for additional details. Also run water through bottle filler until all air is removed and water flow is clear.
   Note: Filter status light will automatically reset once new filter is installed.

INSTRUCTIONS TO ACCESS PROGRAMMING BUTTON

1) Remove lower cover on refrigerated unit by removing (2) screws.
2) Button is located in lower right corner of unit (See Fig. 12).

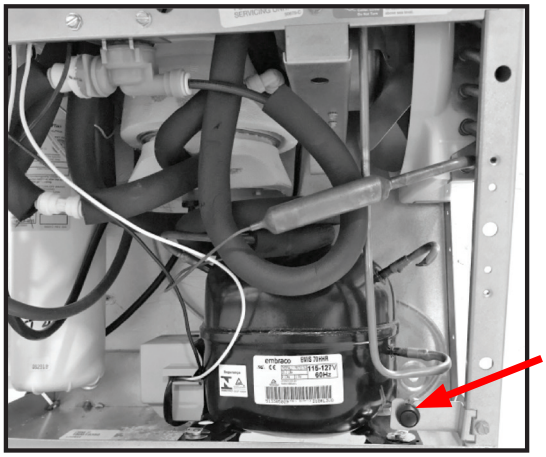


FIG. 12

BERL'S COMMERCIAL SUPPLY BERLS.COM (800) 409-3131

CONFIGURATION INSTRUCTIONS
INSTRUCTIONS TO MOVE THE BOTTLE FILLER & BASIN TO THE LEFT SIDE (NON-REFRIGERATED) FOR ALTERNATE MOUNTING VERSATILE BI-LEVEL

NOTE: TO COMPLETE THIS OPTION, THE VERSATILE BF BASIN KIT (VERSATILEBFKIT) MUST BE ORDERED SEPARATELY.



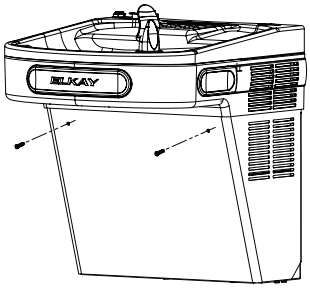


Fig. A

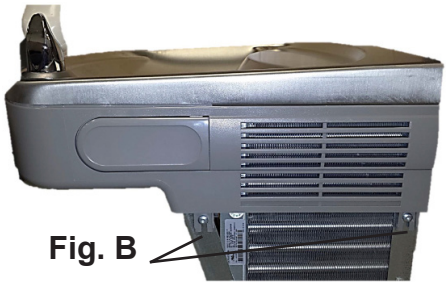


Fig. B

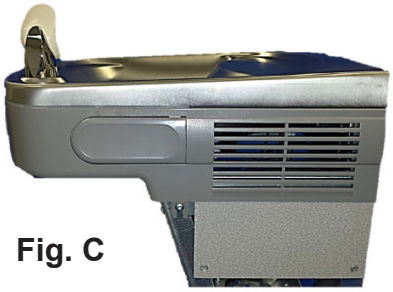


Fig. C

1. Refer Fig D(i) to D(iv), Pg. 7 for wrapper removing instructions.
2. Remove filler panel from cooler using a 5/16” socket.
3. Using a T25 (6-point star) bit, loosen the shroud screws on both sides of both coolers.
4. Lift the basin/shroud assembly from each cooler. Disconnect the water line from the solenoid and the shroud wires from the wiring harness and solenoid. Set aside.
5. Unfasten the electrical harness connector from the electrical bracket. Using a T25 (6-point star) bit, remove the electrical bracket from the mounting bracket. Snap the electrical harness connector into the cutout of the mounting bracket with the connector facing down. (See Fig 13.)
6. Install the electrical bracket on the filter bracket of the non-refrigerated cooler by removing the two screws towards the front of the cooler and reinstalling them through the bracket. Attach the female end of the bi-level extension into the electrical bracket.
7. Only move the filler panel and J-clip to the refrigerated (right) cooler if the right side will be mounted high.
8. Install the non-bottle filler basin on the refrigerated cooler. Connect the water line to the solenoid and the electrical connections to the wiring harness and solenoid. Tighten the (4) T25 screws.
9. Mount the refrigerated cooler on the right-hand hanger bracket. Secure to wall.
10. Install the bottle filler basin on the non-refrigerated cooler. Connect the water line to the solenoid and the electrical connections to the wiring harness and solenoid. Be certain the electrical connector is protruding through the cutout in the top of the basin. Tighten the (4) T25 screws.
11. Mount the non-refrigerated cooler on the left-hand hanger bracket. Secure to wall.
12. Route the bi-level extension through the coolers and connect to the refrigerated electrical harness mounted in the mounting bracket (See Figs. 14 & 15).
13. Hook up the drains using the attached drain kit.
14. Make all water and electrical connections.
15. Reinstall wrappers using (2) screws for each wrapper.

ONLY move the filler panel and j-clip to the refrigerated (right) side if right side will be mounted “high”

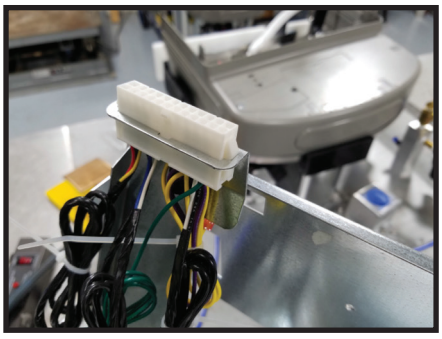


FIG. 13

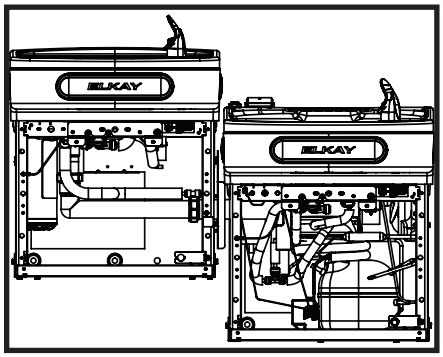


FIG. 14



FIG. 15

Refrigerated Cooler side:

Carefully lift and tip the shroud/basin assembly off the cooler frame.

Only disconnect the (2) black wires coming from the shroud assembly that go to the solenoid valve and to the cold control.

Disconnect the water line at the solenoid valve. Reference (See Fig. 21, Pg.18) for the operation of the quick connect fittings.

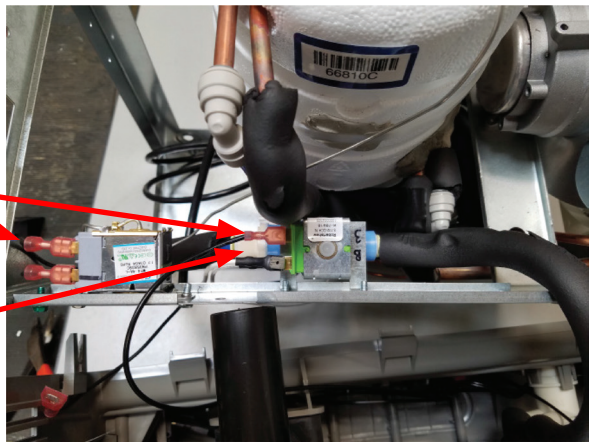


FIG.16

Non-Refrigerated Cooler side:

Carefully tip the shroud/basin assembly toward the cooler frame.

Connect one of the black wires to the solenoid valve and one to the power cord.

Re-connect the water line at the solenoid. Reference (See Fig. 21, Pg.18) for the operation of the quick connect fittings.

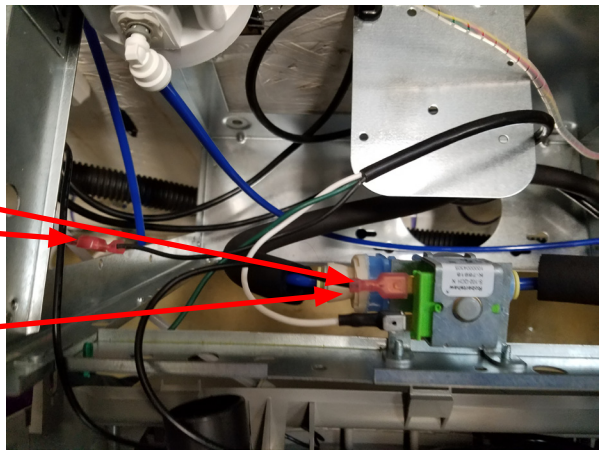


FIG.17

Swap drain parts in shroud: **Loosen each hose clamp retaining the drain pieces. Remove each drain piece and swap to other basin. Tighten each hose clamp.**


Enhanced EZH2O Error Codes

Error Code	Error Description	Corrective Action
	Please clear Bottle Filler	• Remove obstruction • Clean lens on IR sensor • Unplug unit for at least 30 seconds and restart • If error repeats, replace IR sensor
E013	Missing or Incompatible Filter	• Check that filter is installed correctly (label facing forward, round blue tag facing NFC Board) • Unplug unit for at least 30 seconds and restart • Replace filter • Replace filter head assembly with repair kit • If error repeats, contact certified service professional
EO13 & EO14	Missing/Unplugged NFC Board	• Unplug unit for at least 30 seconds and restart • Verify cable connector is plugged into NFC board on filter head assembly • Replace filter head assembly with repair kit • If error repeats, contact certified service professional


BERL'S COMMERCIAL SUPPLY BERLS.COM (800) 409-3131

PLUMBING DIAGRAMS
VERSATILE BI-LEVEL




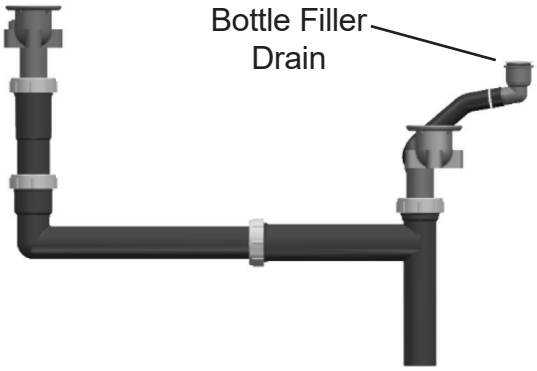




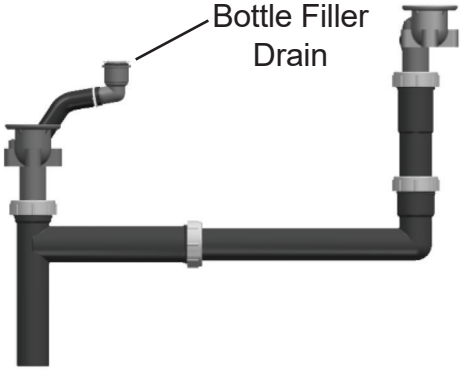



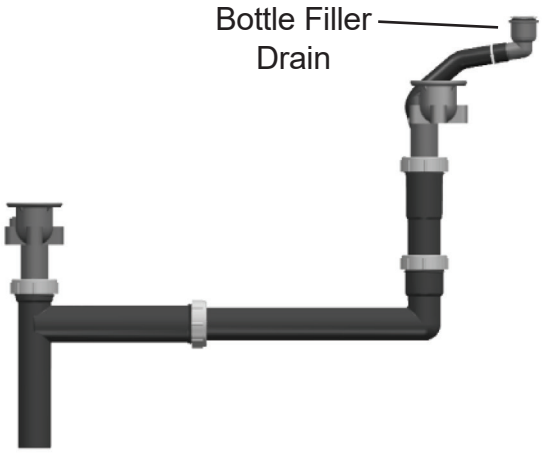



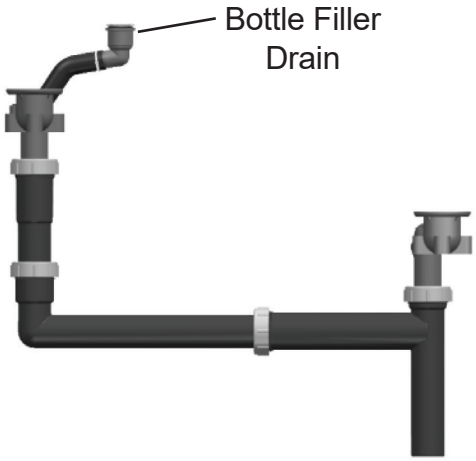


BERL'S COMMERCIAL SUPPLY BERLS.COM (800) 409-3131


Versatile Wrapper Installation Instructions

Right Hand Wrapper (**Low** Side)
1) Remove the (2) screws from the wrapper, rotate the wrapper down, and remove.
2) Clip cover plate, sliding until plate sits flush with the wall.
3) Re-install wrapper with (2) screws.
4) Dispose of unused trim piece.

Revestimiento del lado derecho (Lado **bajo**)
1) Retire los (2) tornillos del envoltorio, gire el envoltorio hacia abajo, y quitar.
2) Sujete la placa de la cubierta, deslizándola hasta que quede alineada con la pared.
3) Vuelva a instalar el revestimiento con los (2) tornillos.
4) Deseche la pieza de acabado que no usa.

Enveloppe droite (côté **gauche**)
1) Retirez les (2) vis de l'emballage, faites pivoter l'emballage vers le bas, et supprimer.
2) Encliqueter la plaque de fermeture, en la glissant jusqu'au ras du mur.
3) Remonter l'enveloppe avec quatre (2) vis.
4) Jeter la pièce de garniture inutilisée.

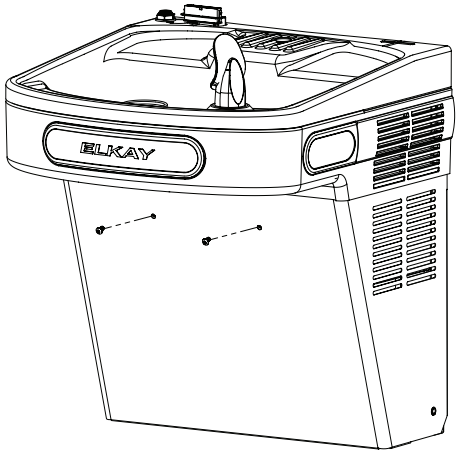


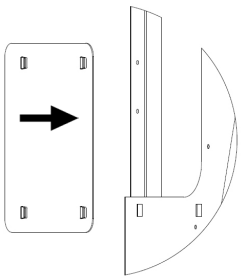

Wrapper Fill Piece Location (Left Side High)

Ubicación de la pieza de llenado del recubrimiento (lado izquierdo alto)

Emplacement de la pièce de fermeture d'enveloppe (côté gauche haut)

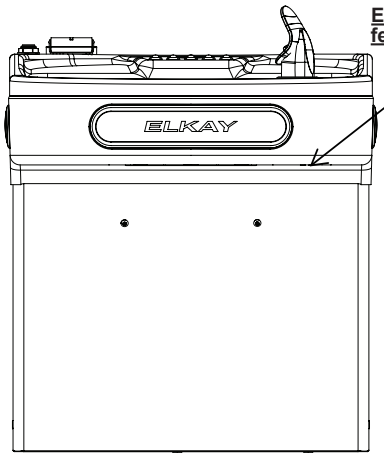

BERL'S COMMERCIAL SUPPLY BERLS.COM (800) 409-3131

Versatile Wrapper Installation Instructions continued. . .

Instrucciones de instalación de envoltura versátil continuadas. . .
Instructions d'installation de l'enveloppe polyvalente (suite). . .

Left Hand Wrapper (**Low Side**)
1) Remove the (2) screws from the wrapper, rotate the wrapper down, and remove.
2) Clip cover plate, sliding until plate sits flush with the wall.
3) Re-install wrapper with (2) screws.
4) Dispose of unused trim piece.


Revestimiento del lado izquierdo (**Lado bajo**)
1) Retire los (2) tornillos de la envoltura, gírela hacia abajo y retírela.
2) Sujete la placa de la cubierta, deslizándola hasta que quede alineada con la pared.
3) Vuelva a instalar el revestimiento con los (2) tornillos.
4) Deseche la pieza de acabado que no usa.


Enveloppe gauche (**côté bas**)
1) Retirez les (2) vis de l'emballage, faites pivoter l'emballage vers le bas, et supprimer.
2) Encliqueter la plaque de fermeture, en la glissant jusqu'au ras du mur.
3) Remonter l'enveloppe avec quatre (2) vis.
4) Jeter la pièce de garniture inutilisée.


Wrapper Fill Piece Location (Right Side High)

Ubicación de la pieza de llenado del recubrimiento (lado derecho alto)

Emplacement de la pièce de fermeture d'enveloppe (côté droit haut)

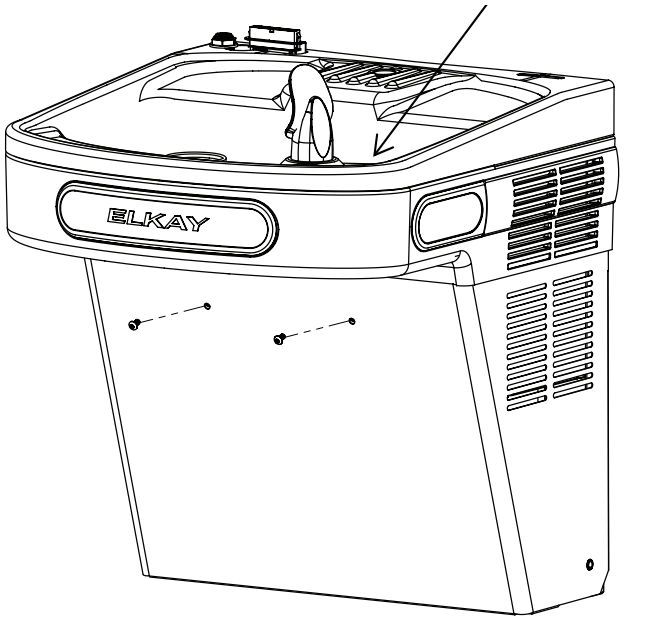

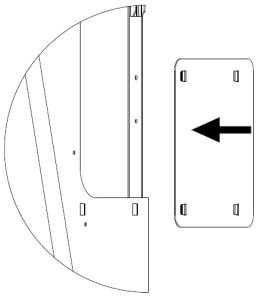

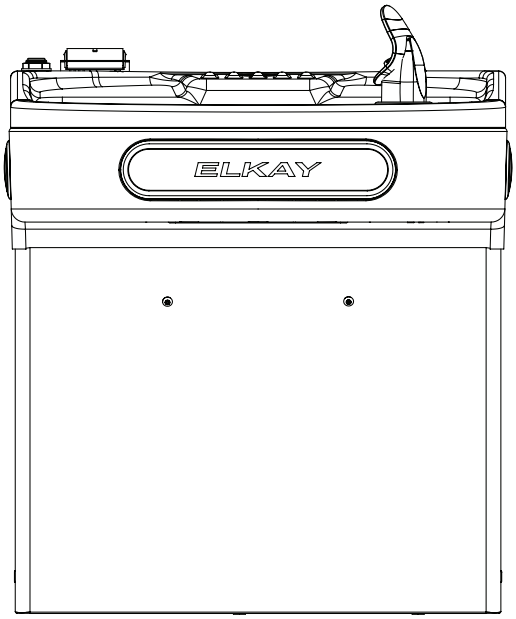

BERL'S COMMERCIAL SUPPLY BERLS.COM (800) 409-3131

115V Refrigerated Wiring Diagram with Alpha/Numeric Display

Enhanced Bottle Filling Station Electrical Diagram

LZSTL8WSLP
LZSTL8WSSP
LZSTL8WSSP-PF
LZSTL8WSAP
LZSTL8WSAP-PF
LZSTL8WSMP
LZSTL8WSMP-PF
LZSTL8WSSP-PF

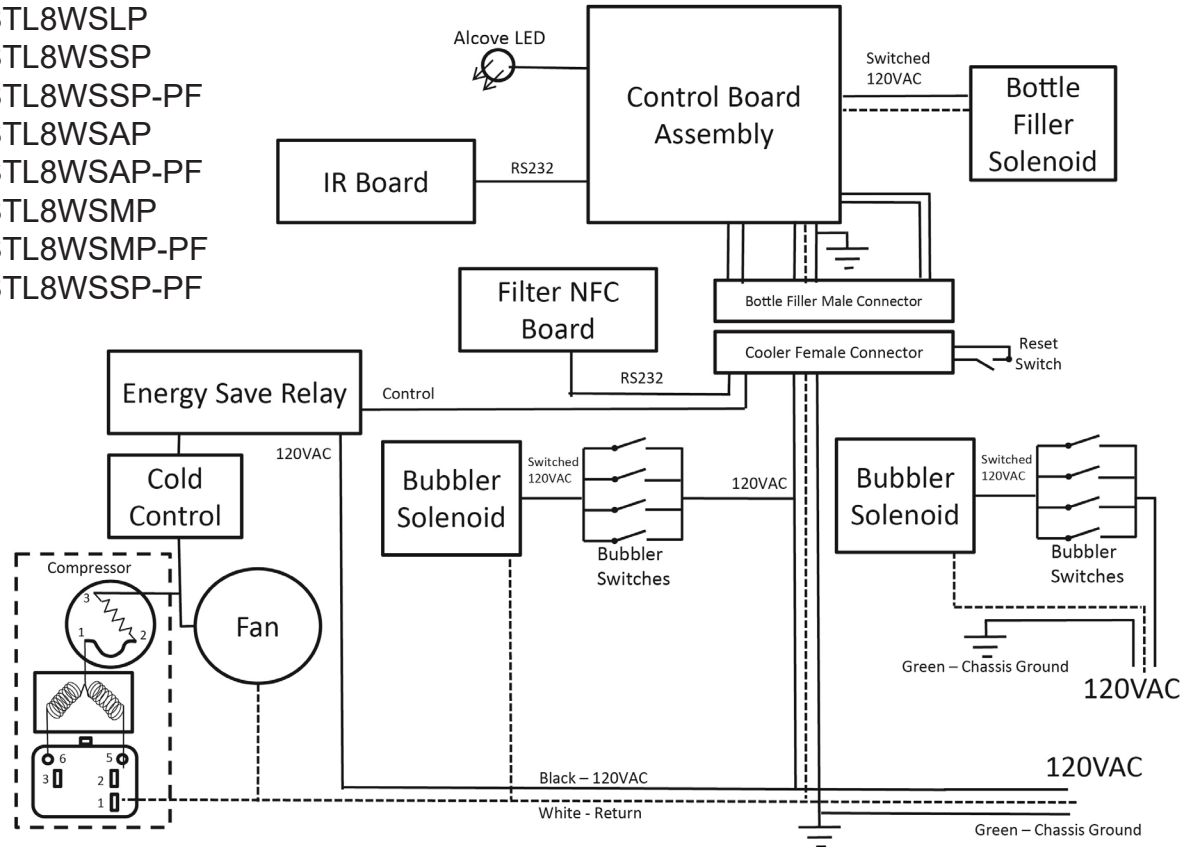


Fig. 18

⚠ WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours.**
- **KEEP** new and used batteries **OUT OF REACH of CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



BERL'S COMMERCIAL SUPPLY BERLS.COM (800) 409-3131

115V Refrigerated Wiring Diagram with Alpha/Numeric Display

Enhanced Bottle Filling Station Electric Diagram

LZSTL8WSLK
LZSTL8WSSK

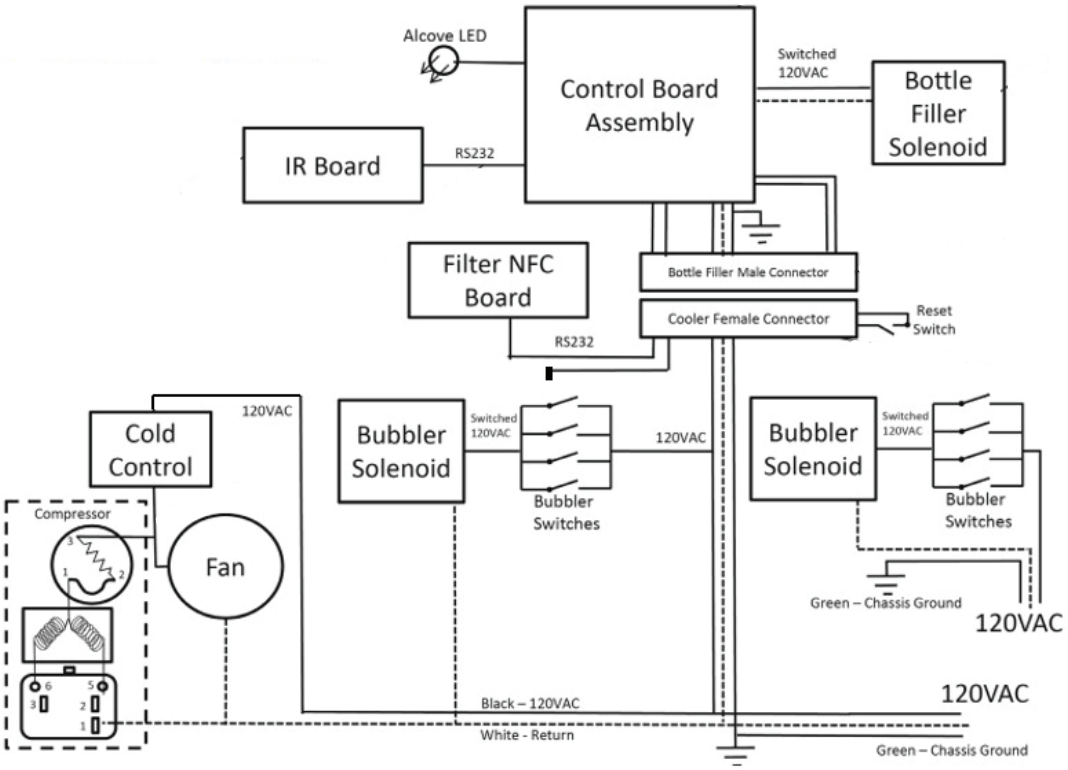


Fig. 19

BERL'S COMMERCIAL SUPPLY
BERLS.COM
(800) 409-3131

115V Refrigerated Wiring Diagram with Alpha/Numeric Display Connect-Ready - Enhanced Bottle Filler

LZSTL8WSSP-W1
LZSTL8WSAP-W1
LZSTL8WSMP-W1

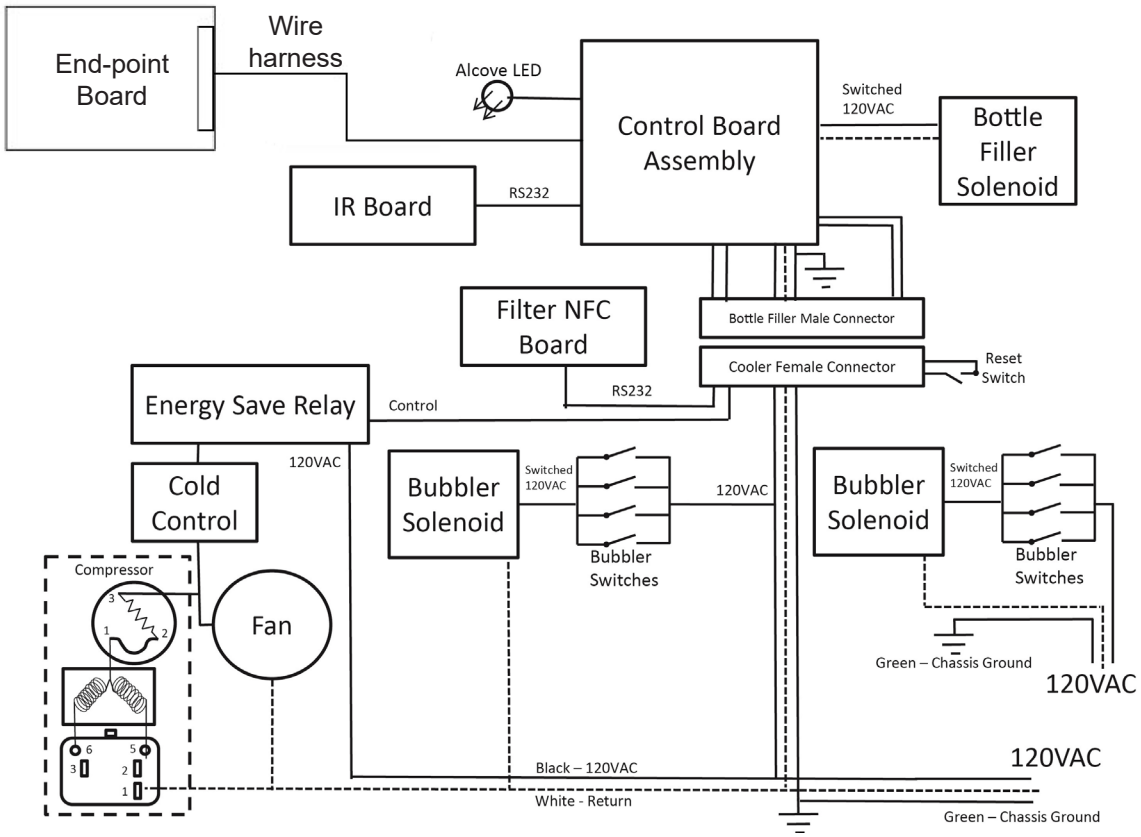


Fig. 20

OPERATION OF QUICK CONNECT FITTINGS

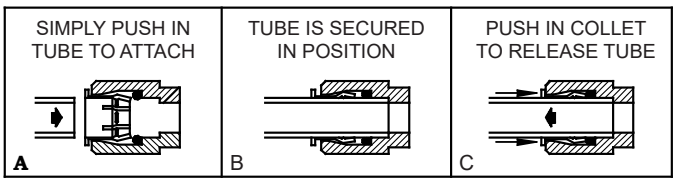


Fig. 21

BERL'S COMMERCIAL SUPPLY
BERLS.COM
(800) 409-3131

115V Refrigerated Wiring Diagram with Alpha/Numeric Display For models with the Secop Compressor

Enhanced Bottle Filling Station Electric Diagram

LZSTL8WSLK (Rev. 1B)
LZSTL8WSSK (Rev. 1B)

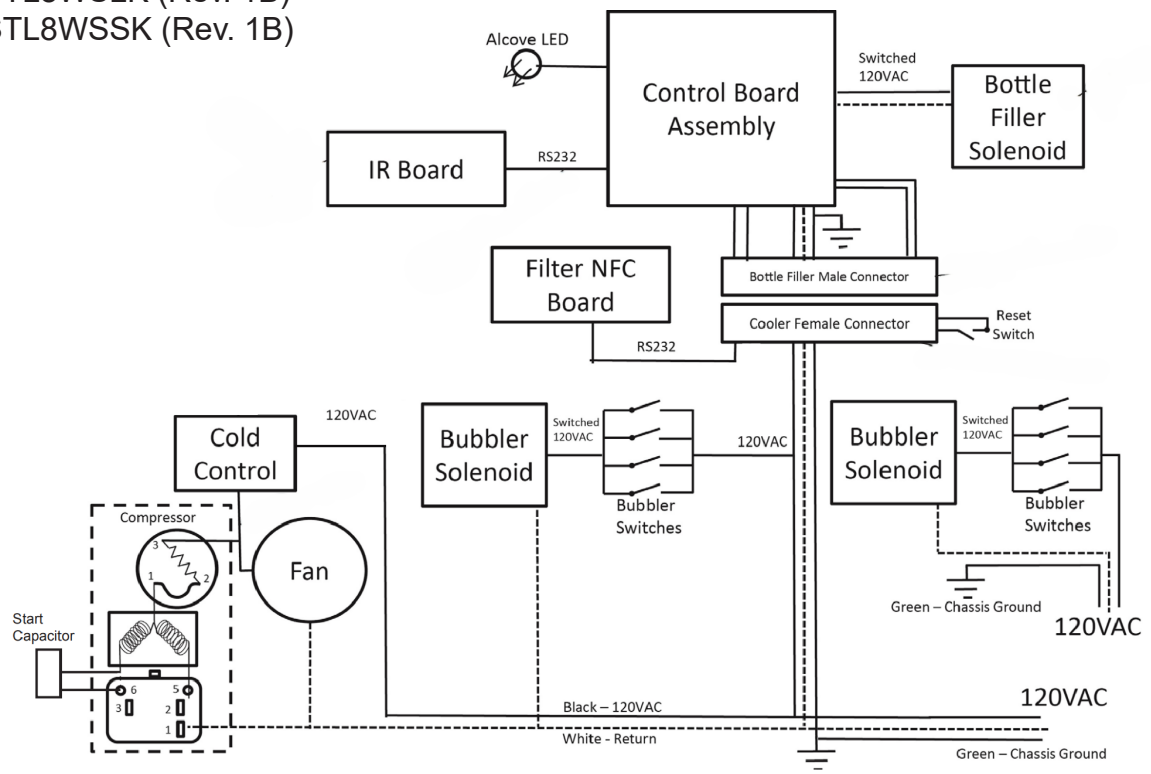


Fig. 22

Identify Your Compressor Before Ordering Replacement Parts

Water coolers may be equipped with one of two compressor models. Before purchasing replacement parts, locate the compressor nameplate label and compare it with the images below. Confirming the compressor model will help ensure you select the correct replacement components and avoid unnecessary delays or returns.

SECOP COMPRESSOR

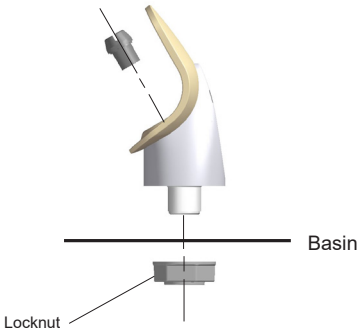


Fig. 23

EMBRACO COMPRESSOR



Fig. 24



BUBBLER DETAIL

Fig. 25

NOTE:
When installing replacement bubbler and pedestal, tighten nut only to hold parts snug in position. Do Not Overtighten.



Fig. 26

Note:
The filter status indicator shows the filter condition using colors. Blue indicates normal operation, no immediate attention needed. Red indicates immediate attention required to maintain proper function.

Scan for trouble shooting and to sign up for auto replenishment of authentic Elkay filters.

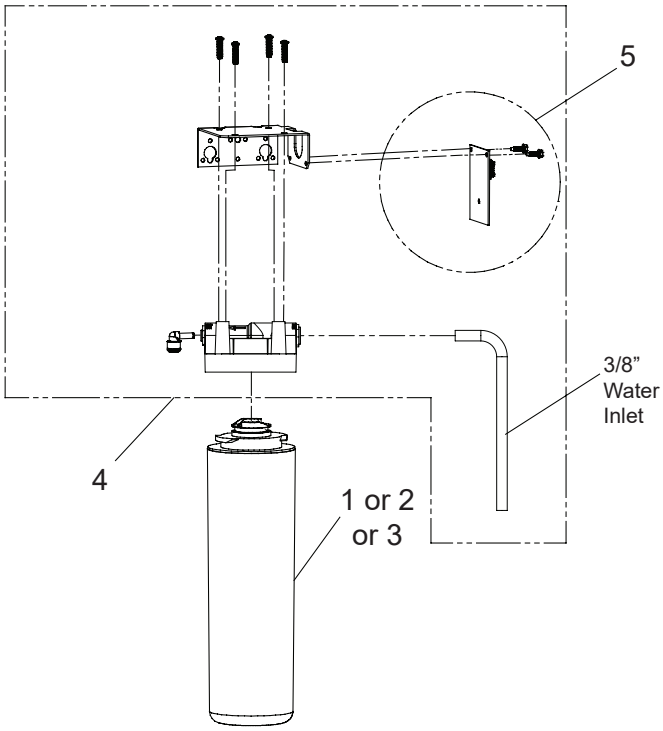


Fig. 27

WATERSENTRY® Filter Detail

WATERSENTRY® FILTER PARTS LIST		
ITEM NO.	PART NO.	DESCRIPTION
1	51300C	Filter 3000 Gal (standard)
2	51600C	Filter 6000 Gal (high capacity)
3	71300C	Filter 2250 Gal (PFOA/PFOS)
4	2000003042	K+ Filter Head Kit
5	1000004409	Kit - NFC Board

BERL'S COMMERCIAL SUPPLY BERLS.COM (800) 409-3131

Note: Danger! Electrical shock hazard. Disconnect power before servicing unit.

Note: For models with a Secop compressor verify 0.0V across the capacitor terminals before servicing

Service Instructions

Lower and Upper Shroud

To access the refrigeration system and plumbing connections, remove two (2) screws from front of cooler to remove the lower shroud. To remove the upper shroud for access to the pushbars, regulator, solenoid valve or other components located in the top of the unit, remove lower shroud, disconnect drain, remove four screws from tabs along lower edge of upper shroud, unplug two wires and water tube.

Bubbler

To remove the bubbler, first disconnect the power supply. The underside of the bubbler can be reached through the access panel on the underside of the upper shroud. Remove the access panel by removing the retaining screw. To remove the bubbler, loosen locknut from the underside of the bubbler and remove the tubing from the quick connect fitting per the Operation Of Quick Connect Fittings section in the General Instructions. After servicing, replace the access panel and retaining screw.

Switches Behind the Push Bar

The regulator in an EZ cooler is always held fully open by the use of a single regulator nut.
Water is not dispensed until the pushbar is depressed to activate a switch which then opens a solenoid valve.

To remove sidebars, from the inside compress the flared tabs and pull out carefully. To reinstall side pushbars, the front of the pushbar is inserted first. While keeping the switch depressed, snap the rear of the pushbar into position.

Cleaning

Stainless Steel

- General cleaning: use an ordinary mild detergent and soft cloth, rinse and towel dry.
- Steel soap pads should never be used; particles can adhere to a stainless steel basin surface and will eventually rust.
- Light scratches are normal for stainless steel basins; over time they will blend into the uniform finish pattern.
- Do not use cleaners containing acids or chlorides, these will cause the stainless steel to oxidize.

Plastic Components


- General cleaning: use an ordinary mild detergent and soft cloth, rinse and towel dry.
- Wiping the surface clean to remove debris or build up will not hurt the antimicrobial properties.

Temperature Control

- Factory set at 50°F (+/- 5°F) under normal conditions. For altitude adjustments, refer to sticker on left side of top bar.

Stream Height Adjustment

VIEW OF UNDERSIDE OF BASIN SHROUD

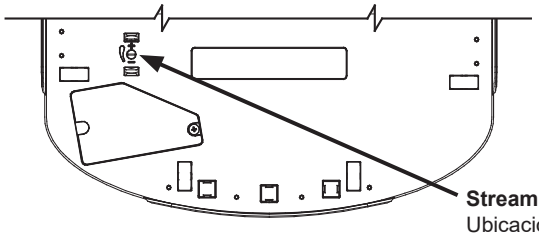

Stream Height Adjustment Location
Ubicación de ajuste de altura de corriente
Emplacement de réglage hauteur Stream

Programming Instruction

Depress Button for 3 seconds to activate main menu - release

Cycles thru main menu items 2 seconds each for 2 cycles then exits menu unless selected

Cycles thru sub menu items 2 seconds each for 2 cycles then returns to main menu unless selected

Selections are saved when the menu is exited

Top level	Action	Sub Menu 1	Action	Sub Menu/action	Action	Sub Menu/ action	Action	Sub Menu/ action	Notes	End Action
Info	Momentary	Scrolls through all the settings on unit								Returns to Main Menu
Info	Momentary	Flashes error code								Returns to Main Menu
Set time	Momentary									Drops to next level when selected
		Day (Sunday-Saturday	Momentary						Use push button to select the day on the display	Drops to next level when selected
		AM/PM	Momentary						Use push button to select AM or PM	Drops to next level when selected
		Hour (12 hour)	Momentary						Use push button to select Hour	Drops to next level when selected
		Min 0-69 in 5 minute incre-ments	Momentary						Use push button to select closest minute	Returns to Main Menu
Filter	Momentary									Drops to next level when selected
		No	Momentary	Turn off filter status and errors					No Filter unit - Error codes related to filter status turned off	Returns to Main Menu
		Yes	Momentary	Default setting - Turn on filter status and errors					Filter status has default ON / Default has read write to filter, LED status display, filter error capability	Returns to Main Menu
Refrig	Momentary									Drops to next level when selected
		No	Momentary	Disables E/S relay sets bottle fill time to 1.5gpm					Refrigeration off	Returns to Main Menu
		Yes	Momentary	Default setting - Enables E/S relay - sets time to 1.1gpm					Refrigeration on	Returns to Main Menu
Range	Momentary								The lower the number, the closer to the sensor the bottle needs to be to activate	Drops to next level when selected
		1-10	Momentary	Default setting 5 - Adjusts distance from sensor the bottle needs to be before turning before turning on or off the bottle filler						Returns to Main Menu
B-Light	Momentary								The settings are for the brightness of the display and night light	Drops to next level when selected
		25%	Momentary							Returns to Main Menu
		50%	Momentary							Returns to Main Menu
		75%	Momentary	Default Setting						Returns to Main Menu
		100%	Momentary							Returns to Main Menu
EnerSave	Momentary									Drops to next level when selected
		Off	Momentary	Default Setting						Returns to Main Menu
		On	Momentary	Set Energy Save Schedule						Drops to next level when selected
						Select Weekday				Drops to next level when selected
							Momentary	Select time on	24 hours – 1-12AM and 1-12PM	Drops to next level when selected
							Momentary	Select time off	24 hours – 1-12AM and 1-12PM	Drops to next level when selected
						Select Week-end				Drops to next level when selected
							Momentary	Select time on	24 hours – 1-12AM and 1-12PM	Drops to next level when selected
							Momentary	Select time off	24 hours – 1-12AM and 1-12PM	Returns to Main Menu

Note: Danger! Electrical shock hazard. Disconnect power before servicing unit.

Uses HFC-134A refrigerant
Usa refrigerante HFC-134A
Utilise du fluide frigorigéne HFC-134A

Bi-Level Cooler Combo
Refrigerated Side

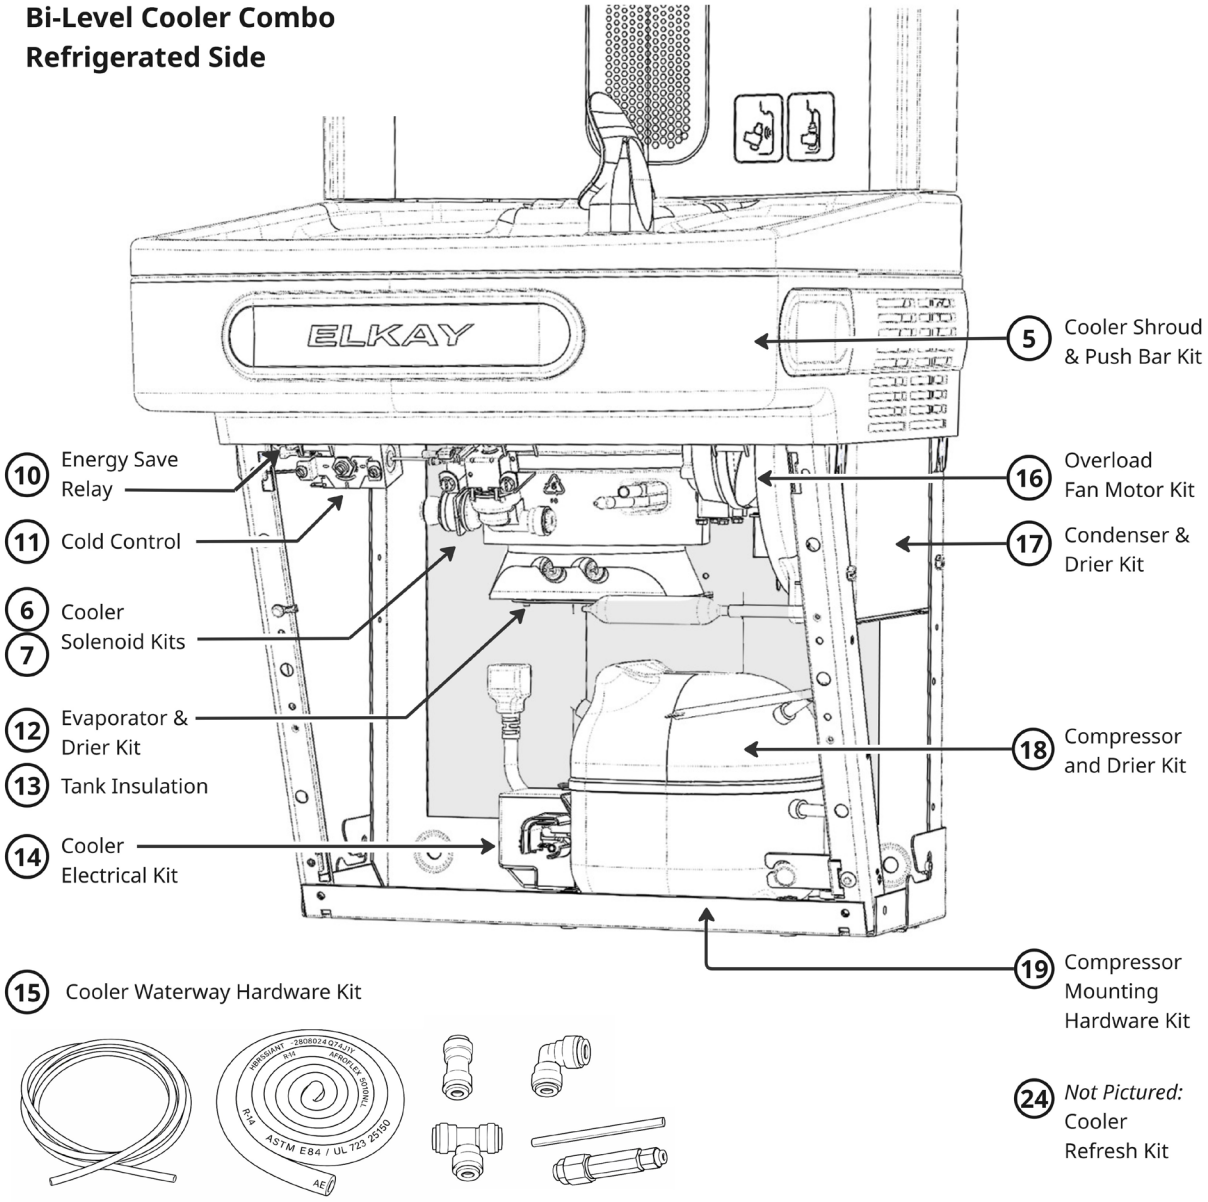


Fig. 28

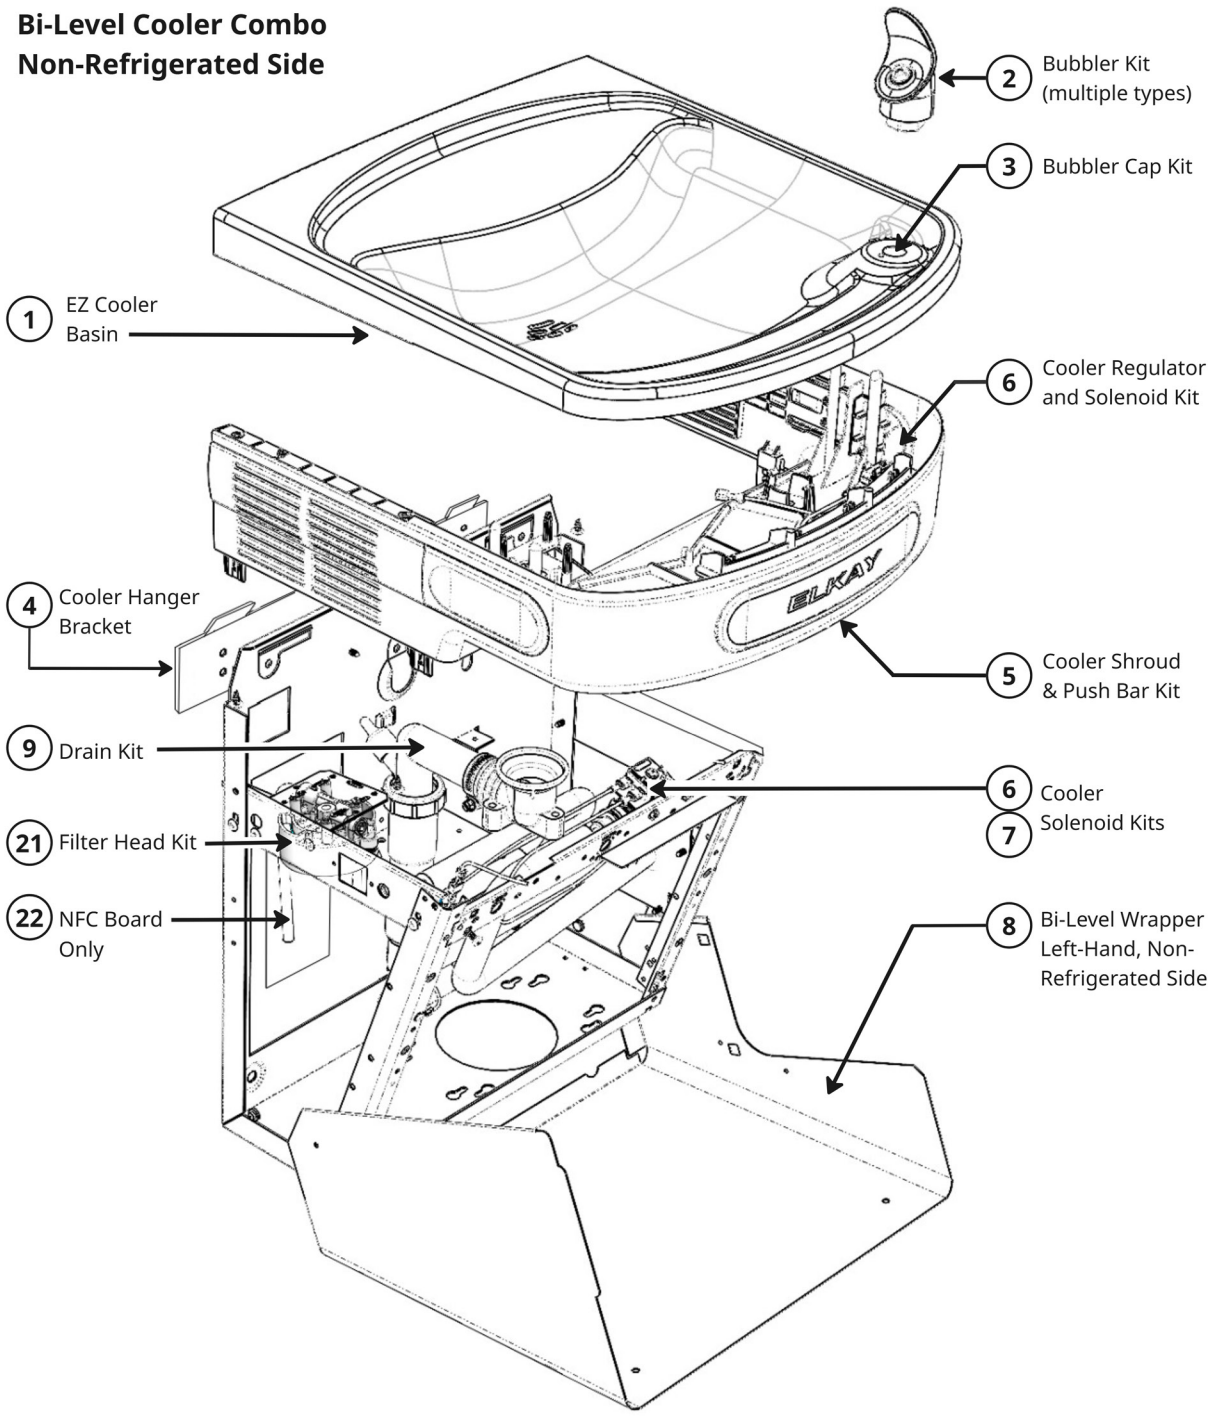


Fig. 29

BERL'S COMMERCIAL SUPPLY BERLS.COM (800) 409-3131

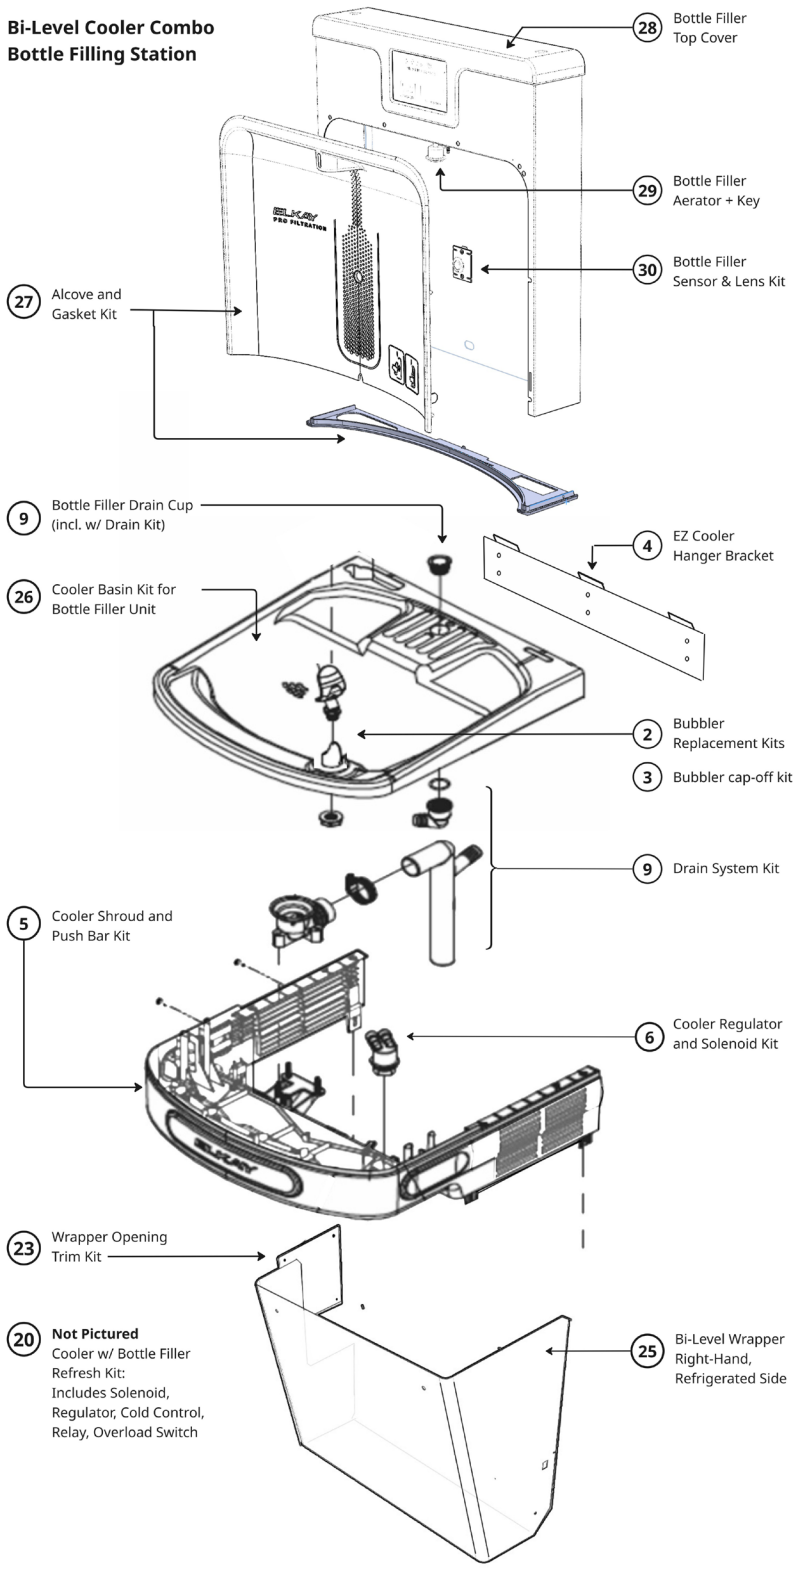


Fig. 30

BERL'S COMMERCIAL SUPPLY
BERLS.COM
(800) 409-3131

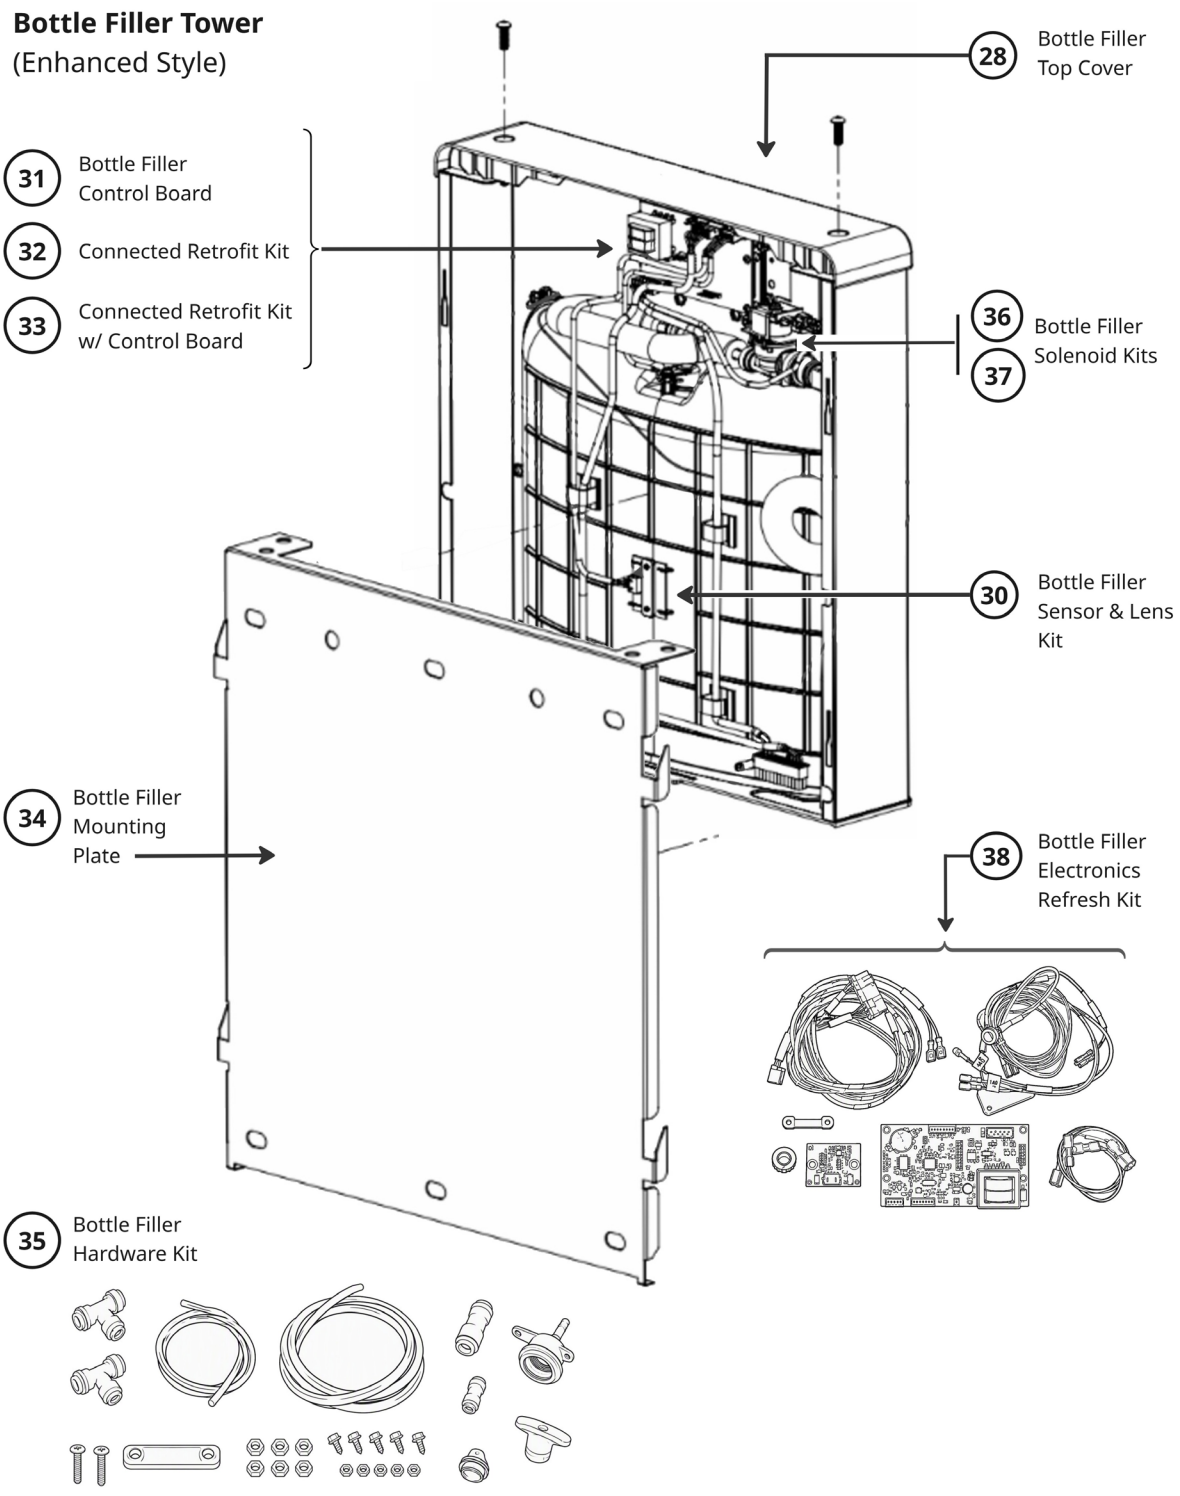


Fig. 31

BERL'S COMMERCIAL SUPPLY BERLS.COM (800) 409-3131

ATTENTION:
If the product serial number is before 190424189, please refer to archived documents section of Elkay.com for the most accurate parts list. (www.elkay.com/archived-documents)

Enhanced Cooler

Call Out Number	Part Number	Description	Model Number
1	55001109	EZ Basin Kit	ALL
2	92715C	Flexi-Guard Safety Bubbler Replacement Kit	LZSTL8WSL(K)(P), LZSTL8WSS(K)(P) (PF)
2	2000002067	Arctic White Flexi Bubbler kit	LZSTL8WSAP, LZSTL8WSAP-PF
2	2000002096	Midnight Black Flexi Bubbler kit	LZSTL8WSMB, LZSTL8WSMB-PF
2	2000003158	VR Bubbler Kit	ALL
3	2000003106	Bubbler/Glass Filler Cap Kit	ALL
4	28401C	EZ Hanger Bracket	ALL
5	2000001859	Midnight black upper cooler shroud assembly	LZSTL8WSMB, LZSTL8WSMB-PF
5	2000001554	Arctic White upper cooler shroud assembly	LZSTL8WSAP, LZSTL8WSAP-PF
5	2000003031	EZ Gray Upper Shroud Kit	LZSTL8WSL(K)(P), LZSTL8WSS(K)(P) (PF)
6	2000003032	Water Cooler Solenoid / regulator Replacement Kit	ALL
7	2000003126_D	Water Cooler Solenoid Distributor Kit (10 Pack)	ALL
8	2000002083	Light Gray EZTLD left hand Drop Down Wrapper	LZSTL8WSL(K)(P)
8	1000000759	Light Grey EZTLD Left Hand Wrapper Kit (Non drop down)	LZSTL8WSL(K)(P)
8	1000000758	Stainless Steel EZTLD left Hand Wrapper Kit (Non drop down)	LZSTL8WSS(K)(P) (PF)
8	2000001274	Stainless Steel left hand LZTLD drop Down Wrapper kit	LZSTL8WSS(K)(P) (PF)
8	2000002004	Midnight Black Drop DZTLD left hand Down Wrapper	LZSTL8WSMB, LZSTL8WSMB-PF
9	2000003052	EZS/EZSTL Drain Kit	ALL
10	1000014548	Enhanced bottle filler energy save Relay	ALL (P models)
11	98773C	Cold Control for Coolers with 8 GPH Cooling Capacity Kit	ALL
12	2000003037	8-Gallon Evaporator And Drier Kit	ALL
13	97707C	Kit - NSF Tank Insulation (Optional)	ALL
14*	2000003024	EZ Cooler Electrical Kit (Embraco Compressor)	ALL
14**	2000003292	EZ Cooler Electrical Kit (Secop Compressor)	ENKLZ8WS_IB
15	2000003044	Cooler Hardware Kit	ALL
16	2000003039	Water Cooler OverLoad, Fan Motor & Cold Control Kit	ALL
17	2000003156	8-Gallon Condenser / Drier Kit	ALL
18**	2000003036	8-Gallon Compressor And Drier Kit (Embraco Compressor)	ALL
18**	2000003290	8-Gallon Compressor And Drier Kit (Secop Compressor)	ENKLZ8WS_IB
19	98777C	Compressor Mounting Hardware Kit	ALL
20	2000002541	EZ / LZ Cooler With Bottle Filler Refresh Kit	ALL
21	2000003042	Enhanced Filter Head Kit	ALL
22	1000004409	Enhanced bottle filler Filter NFC Board	ALL
23	1000002254	Light Grey EZTL Universal Trim kit	LZSTL8WSL(K)(P)
23	1000002253	Stainless Steel EZTL Universal Trim kit	ALL
24	2000002540	EZ / LZ Cooler Refresh Kit	ALL
25	1000000888	EZTL Right Hand Wrapper - Stainless Kit (Non drop down)	LZSTL8WSS(K)(P) (PF)
25	2000001267	Stainless Steel right hand TL Drop Down Wrapper kit	LZSTL8WSS(K)(P) (PF)
25	1000000944	EZTL Right Hand Wrapper - Light Grey Kit (Non drop down)	LZSTL8WSL(K)(P)
25	2000002080	Light Grey TL right hand Drop Down Wrapper	LZSTL8WSL(K)(P)
25	2000002081	Midnight Black TL right hand drop down wrapper	LZSTL8WSMB, LZSTL8WSMB-PF
26	000001337	EZ cooler Bottle filler Basin	ALL

* See Figure 24 page 19 for compressor
** See Figure 23 page 19 for compressor

Enhanced Bottle Filler

Call Out Number	Part Number	Description	Model Number
27	2000003056	Bottle Filler Alcove/Gasket Replacement Kit	ALL
28	2000002072	Kit - Arctic White Top Cover Assy (BF)	LZSTL8WSAP, LZS8WSAP-PF
28	2000002071	Kit - Midnight Black Top Cover Assy (BF)	LZSTL8WSMB, LZSTL8WSMB-PF
28	1000002433	Kit-Top Cover Assembly (Next Gen)	LZSTL8WSL(K)(P), LZSTL8WSSP (PF)
29	2000003108_D	Bottle Filler Aerator and Key Distributor Kit (10 each)	ALL
30	2000003145_D	Enhanced Bottle Filler Sensor Distributor Kit (10 Pack)	ALL
31	2000003755_D	Enhanced Bottle Filler Control Board Distributor Kit (10 Pack)	ALL
32	PLZSRK-W1	Connected Retrofit Kit with Endpoint Board for Enhanced Filtration	ALL
33	PLZSRK	Enhanced Bottle Filler Smart Connected-Ready Retrofit Kit	ALL
34	2000003123	Enhanced Bottle Filler Mounting Plate Kit	ALL
35	2000003040	Bottle Filler Hardware Kit	ALL
36	2000003025	120V Bottle Filler Solenoid Kit (Single solenoid)	ALL
37	2000003139_D	Bottle Filler Solenoid Distributor Kit (10 Pack)	ALL
38	2000003048	Enhanced Bottle Filler Kit (Includes control board and sensor)	ALL

FCC COMPLIANCE STATEMENT

CAUTION: Changes or modifications not expressly approved could void your authority to use this equipment
This device complies with Part 15 of the FCC Rules. Operation to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.

The device shall be used in such a manner that the potential for human contact normal operation is minimized. This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body. This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

INDUSTRY CANADA STATEMENT

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de license. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

The device shall be used in such a manner that the potential for human contact normal operation is minimized. This equipment complies with RSS-102 radiation exposure limits. This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body. This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

Le dispositif doit être utilisé de manière à minimiser le potentiel de fonctionnement normal par contact humain. Cet équipement est conforme aux limites d'exposition au rayonnement RSS-102. Cet équipement doit être installé et utilisé avec une distance minimale de 20 cm entre le radiateur et votre corps. Cet appareil et son (ses) antenne (s) ne doivent pas être co-localisés ou utilisés conjointement avec une autre antenne ou un autre émetteur.

Patent zurnelkay.com/patents

FOR PARTS, CONTACT YOUR LOCAL DISTRIBUTOR OR CALL 1.800.834.4816
PARA PIEZAS, CONTACTE A SU DISTRIBUIDOR LOCAL O LLAME AL 1.800.834.4816
POUR OBTENIR DES PIÈCES, CONTACTEZ VOTRE DISTRIBUTEUR LOCAL OU COMPOSEZ LE 1.800.834.4816

REPAIR SERVICE INFORMATION TOLL FREE NUMBER 1.800.260.6640
NÚMERO GRATIS DE SERVICIO 1.800.260.6640
INFORMATIONS POUR LE SERVICE PAR NUMERO SANS FRAIS 1.800.260.6640

PRINTED IN U.S.A.
IMPRESO EN LOS E.E.U.U.
IMPRIMÉ AUX É.-U.

ELKAY MANUFACTURING Co. • 1333 BUTTERFIELD ROAD SUITE 200 DOWNERS GROVE, IL 60515 USA • 630.574.8484 • www.elkay.com

BERL'S COMMERCIAL SUPPLY
BERLS.COM
(800) 409-3131