





**9806-22**

**For Installation of Grab Bar Through Toilet Partition Panel.  
One "Back-to-Back" Kit required for one Grab Bar**

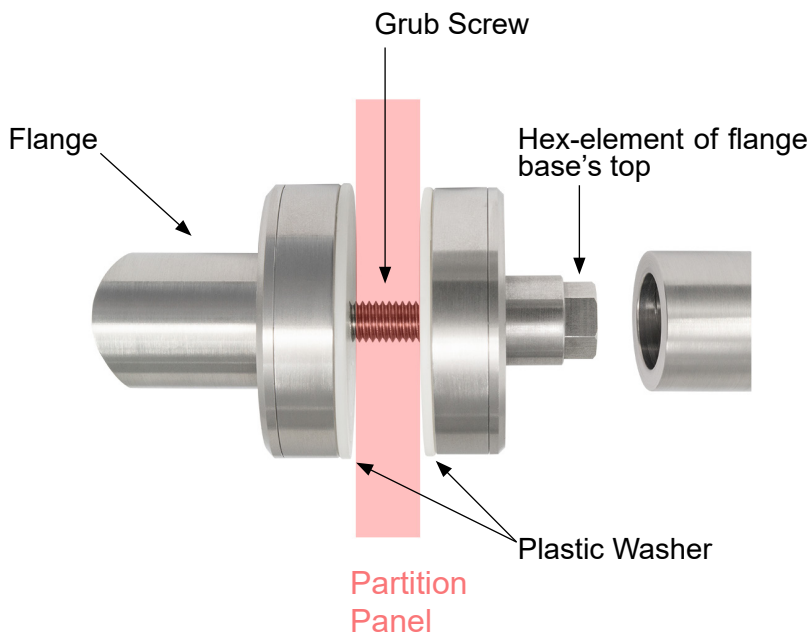

- Kit contains :
- 4 Back to Back washers (2 pairs)
  - 2 M8 x 40 flat point set/grub screw
  - 2 M8 x 50 flat point set/grub screw
  - 2 M8 x 60 flat point set/grub screw

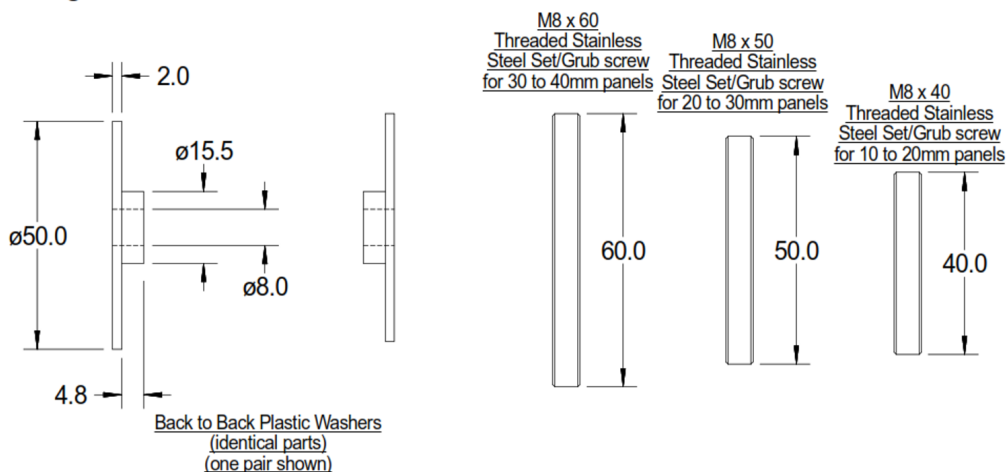

ALL DIMENSIONS IN MILLIMETRES

**MATERIAL :**

- a. 2 pairs of "Back-to-Back" PU-shoulder-washers
- b. 2 pcs. of grub screws M8x40mm for partitions of 1/2" panel thickness
- c. 2 pcs. of grub screws M8x50mm for partitions between 1/2" and 1" panel thickness
- d. 2 pcs. of grub screws M8x60mm for partitions between 1" and 1-1/2" panel thickness

continued . . .

**INSTALLATION:**

Drill a pair of holes between 16mm (41/64") and 19mm (3/4") through the panels for the grub screws going through the partition-panel. Use centre of flange base as template to mark drilling points

NOTE : for Glass-Partitions, please inform the partition-manufacturer for respected hole size accordingly

Put the PU-shoulder-washers into the holes with the shoulder facing into the hole — 1 pcs. from each side of the holes.

Mount flange bases against each others by applying a spanner or similar at the hex-element of flange base's top.

**SPECIFICATION:**

Grab bar Back-to-Back kit shall have two PU shoulder washers to protect the partition panel and a grub screw prepared for 4mm (1/8") Allen wrench.

**Grab Bar Back-to\_Back Kit shall be No.9806-22 of Bobrick Washroom Equipment, Inc., Clifton Park, New York; Jackson, Tennessee; Los Angeles, California; Bobrick Washroom Equipment Company, Scarborough, Ontario; Bobrick Washroom Equipment Pty. Ltd., Australia; and Bobrick Washroom Equipment Limited, United Kingdom.**