

BERLS.COM

Troubleshooting Guide

for Bobrick B-840, B-842, B-845, B-846 or B-848

Designer Series Counter-Mounted Automatic, Top Fill Bulk Foam Soap Dispenser


Step	1: To determine cause: Unplug	g unit and reconnect unit look for Green	LED light and sound of motor. Activate soap dispenser continually f	ive times.	
	If motor running and LED does not stop flashing consistently when hand is in the activation zone.				
Unit Not Dispensing	Likely Cause	Action	Instruction	Replacement Part/Kit Needed	
	Fiber Optic Nut may be thread too tight onto connector port in the Bottom Housing.	Check Fiber Optic Nut to see if nut has been overtightened	Tighten Fiber Optic Connector Nut hand tight and then rotate nut counterclockwise by 1/4 turn (90°).	n/a	
	No change.	All steps above completed.	Contact Bobrick Customer Service.	n/a	
	If motor running and LED stops flashing when hand is in the activation zone.				
	Likely Cause	Action	Instruction	Replacement Part/Kit Needed	
	Clogged Nozzle Tip.	Remove Nozzle Tip.	Clean with warm water and replace. Flush whole system. If Nozzle continutes to be clogged replace.	828-310	
	Soap may be too viscous.	Ensure that soap meets specified viscosity range. Viscosity less than 100cps (CPS = centerpoise) Adjust viscosity and Flush system.	Flush whole system. Replace with soap that is within recommended viscosity range.	n/a	
	If unit requires multiple (more than 5) activations to dispense foam. Duckbill inside Foam Mixer Housing may be stuck open.	Flush whole system.	If still requires multiple activations, order new Foam Mixer Housing.	828-322	
Unit	No change.	All steps above completed.	Contact Bobrick Customer Service.	n/a	
	If motor not running and LED stops flashing when hand is in the activation zone.				
	Likely Cause	Action	Instruction	Replacement Part/Kit Needed	
	Gear jamming.	Check for dried soap. Purge system.	Open Cover, pour warm water, and then purge by pressing Automatic System Flush Button.	n/a	
	Flashing red LED. Indicates sensor obstruction.	Ensure all obstructions have been removed from sensor path.	Refer to mounting template 824-307.	n/a	
	No change.	All steps above completed.	Contact Bobrick Customer Service.	n/a	
	If motor not running No LED light.				
	Likely Cause	Action	Instruction	Replacement Part/Kit Needed	
	No power to the unit	Check A/C adapter connection.	If LED lights up then follow the steps listed under "If motor not running and LED stops flashing when hand is in the activation zone"	n/a	
	No change.	All steps above completed.	Contact Bobrick Customer Service.	n/a	
	Likely Cause	Action	Instruction	Replacement Part/Kit Needed	
Unit Leaking	Loose Stem connection to Bottle Cap.	Unscrew Stem Locking Nut.	Push the Bottle Assembly up onto the Stem until it stops. While pushing upwards on the Bottle, thread the Stem Locking Nut down onto the Bottle Cap threads. Reference Instruction Sheet 848-191.	n/a	
Unit]	Leaking from bottom of Bottom Housing.	Locate leak if from bottom of Bottom Housing.	Unit needs to be returned. Replace with Bottom Housing Replacment Kit.	848-250	
	Likely Cause	Action	Instruction	Replacement Part/Kit Needed	
	Foam Soap too Airy.	Adjust portion control knob. Also check Nozzle Tip Mesh Screen.	Turn knob clockwise for less air in foam. Clean Mesh Screen and /or replace.	828-310	
Soap	Foam Soap too Liquidy/ Watery.	Adjust portion control knob. Also check Nozzle Tip Mesh Screen.	Turn knob counter clockwise. If Mesh Screen is torn replace.	828-310	

Parts List:

Item Description

- 1 Top Assembly with Spout, Door and Stem
- 2 **LED Light Pipe**
- 3 Foam Nozzle Tip with Mesh
- 4 **Fiber Optic Insert with Sensor Lenses**
- 5 **Rubber Counter Gasket**
- 6 **Wave Washer**
- 7 **Mounting Nut**
- 8 **Stem Locking Nut**
- 9 **Foam Mixer Housing**
- 10 **Bottom Housing Assembly (includes** Soap Bottle)
- (3) Fiber Optic Cables for Sensor and LED 11 **Light Pipe**
- 12 **Fiber Optic Connector Tip Assembly**
- 13 **Fiber Optic Nut**
- 14 **Portion Control Knob**
- 15 **Automatic System Flush Button**
- **Key Hole** 16
- 17 **BobKey**
- 18 **Air Tube Adapter**
- 19 **Air Tube**
- 20 A/C Adapter Kit with U.S. Plug, order Part No. 3974-57.

For outlets not compatible with U.S. plugs, order Part No. 3974-58

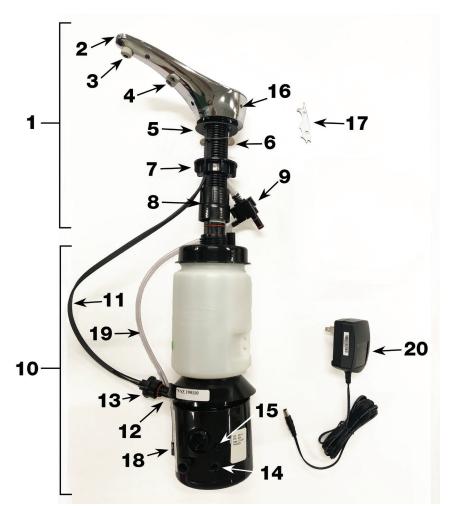



Replacement Parts List			
Description	Part #		
A/C Adapter	3974-57		
International AC Adapter Plug Kit (U. K., Europe, Australia)	3974-58		
Mack Gasket Kit (To secure Top Assembly under the counter due to irregular counter surface)	824-167		
External A/C Multi Adapter Kit	824-201		
Nozzle Tip Replacement Kit Foam	828-310		
Foam Mixer Housing	828-322		
Installation Hardware Packet with Foam Mixer Housing (Includes Wave Washer, Counter Gasket, Mounting Nut, BobKey, Stem Locking Nut)	828-443		
Bottom Housing Assembly Foam	848-250		
Top Housing Assembly Foam, Polished Brass*	840-225		
Top Housing Assembly Foam, Matte Black*	842-225		
Top Housing Assembly Foam, Brushed Nickel*	845-225		
Top Housing Assembly Foam, Polished Nickel*	846-225		
Top Housing Assembly Foam, Polished Chrome*	848-225		

^{*}Top Housing Assemblies include Installation Hardware Packet and Foam Mixer Housing

Recommended Foam Soaps			
Kutol Foaming Luxury Hand Soap			
Kutol Foaming Antibacterial Handsoap			
Chemcor Foaming Antibacterial Handsoap			
State Chemical Gentle Fresh Foaming Hand Soap			
State Chemical Gentle Fresh Defense Foaming Antibacterial Hand Soap			
SCJ Professional - Refresh Azure Foam			
Hillyard Cucumber-Melon, Premium Foam Soap			
Hillyard Green Select, Foaming Hand Soap			
otal Solutions, Green Apple Foam Soap			
vo Antibacterial Foaming Hand Soap, Lemon Scented			
Spartan Lite'n Foamy, Citrus Fresh			
Germ-X Antibacterial Foaming Hand Wash			
Germ-X Green Foaming Hand Soap			
etco Pink Foaming Skin Cleanser			
BETCO Green Earth Clear Foaming Skin Cleanser			
Enviro-Chem Foam Care Hand Soap			
DAYCON Foaming Hand Soap			
Recommended soaps are for reference only and do not constitute an endorsement of named manufacturer(s). All registrations and trademarks are the sole property of manufacturer.			

