

# Encore® Foam\*eeze® and ClearVu® Foam\*eeze® liquid and foam soap dispensers

Vea el reverso (desdoblar) para leer las instrucciones en español

## Opening the Dispenser:

**ClearVu® -** To open the dispenser lid, insert key into slot at back, right side of lid and push in on key (see figure 1). Back of lid will pop off.

**ClearVu Encore® -** Hold dispenser with thumbs near front of lid and pop lid up using tabs near the back of the dispenser (see figure 2). No key is necessary.

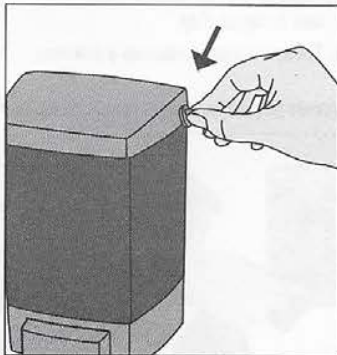


figure 1

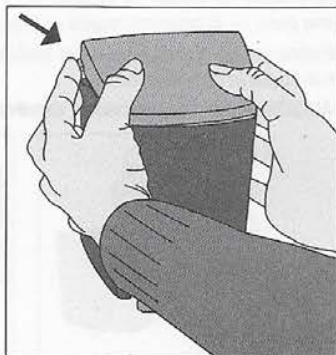


figure 2

## Filling Instructions:

**CAUTION:** For dispenser to work properly, use foam soap only for foaming soap dispensers and liquid soap only for liquid soap dispensers. Foam soap dispensers handle foam soaps from 0-14 centipoise (cps).

1. Remove lid (see page 1).
2. Fill with appropriate soap and replace lid.
3. Priming the dispenser will take 6-10 strokes.

**DISCLAIMER:** Not responsible for inappropriate soap use that results in ineffective dispenser operation or clogging. Soap containing any type of scrubbers will cause the dispenser to leak or eventually fail.

## Maintenance Instructions:

It is important to clean and maintain dispenser on a regular, scheduled basis. Failure to do so can result in dispenser malfunction.

- Open dispenser (see page 1). Flush tank and pump mechanism with warm water to remove residue and contaminants. Refill with new soap and replace lid. (see figure 5.a).
- Cleaning all touch-points on dispenser with a disinfectant should be part of a regular cleaning schedule. (see figure 5.b)
- Periodically give the dispenser an overall cleaning. All internal and external parts should be cleaned thoroughly.

**CAUTION:** Never use abrasive cleansers when cleaning soap dispensers.

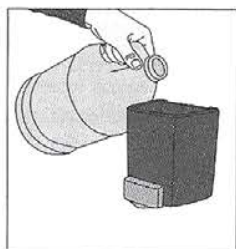


figure 5.a

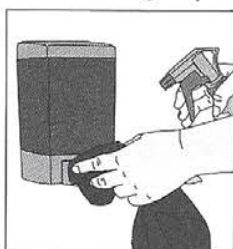


figure 5.b

3

## Mounting Instructions:

- Use included TAPE on glazed tile, painted metal or unpainted metal walls. Tape will not perform satisfactorily if wall surface is porous like brick or wood.
- On all other wall surfaces, use SCREWS AND ANCHORS (not included) or other appropriate hardware based on surface type.
- Locate dispenser above a sink or counter. Recommend never locating where spillage can fall on floor creating hazardous condition.
- Installer will be held responsible for proper installation.
- To be in compliance with ADA regulations, the dispenser should be mounted no more than 48" from the ground.

## Mounting with double-sided tape:


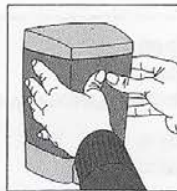


figure 3

1. Thoroughly clean wall surface and let dry completely. For silicone build-up, use a pumice-type cleaner or grout cleaner to clean the surface.
2. Peel off paper from back of tape (supplied). Press dispenser firmly to the wall and hold for at least 30 seconds to make sure tape has completely adhered to the wall (see figure 3).
3. Wait **24 hours** before filling with soap to ensure that the tape has completely adhered to the wall before adding weight.

## Mounting with screws and anchors:

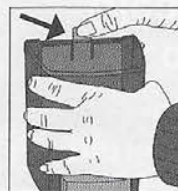


2

figure 4

1. Remove lid (see page 1). Push latch out and detach dispenser from backplate. (see figure 4)
2. Using the backplate as a template, mark hole locations on wall.
3. Drill 3/16" diameter holes for anchors and screws or other hardware. Attach dispenser to backplate and replace lid.


## Included:

Dispenser, double-sided tape (attached to dispenser) (ClearVu® only).

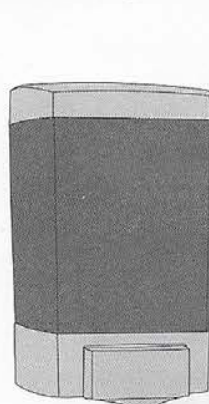

ClearVu®  
46 oz. tank

9346k  
key

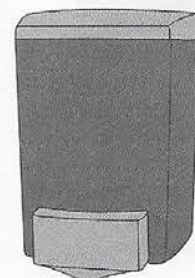

ClearVu® Encore®  
30 oz. tank

## CAUTION:

It is the responsibility of the installer to completely read and understand all instructions and caution statements before proceeding with installation. Following these instructions will ensure proper function and safety.