

INSTRUCTIONS FOR REPLACING 3974-350, AUTOMATIC UNIVERSAL ROLL TOWEL DISPENSER MODULE

BOBRICK MODELS B-3974, AND B-3979 CONVERTIBLE AUTOMATIC ROLL TOWEL DISPENSER AND WASTE RECEPTACLE

REMOVING EXISTING MODULAR HOUSING ASSEMBLY

1. Unlock and open the door of the Modular Housing Assembly.
2. Remove the paper towel roll if applicable.
3. Loosen but do not remove the Washer Lock Nuts located on the left and right sides of the Modular Housing Assembly until the Carriage Bolt can be moved. The Hex Lock Nut should not be removed from the Carriage Bolt, ensuring that the Carriage Bolt will not fall into the wall cavity. (See Figure 1)
4. Remove the mounting hardware, the Carriage Bolt with the Washer Lock Nut, by sliding them toward the hole until the head of the carriage bolt can move through the round portion of the keyhole slot. Put aside, four places.
5. Repeat Steps 3 and 4 for the mounting screws at the top of the Modular Housing Assembly while holding the Housing in place with one hand.
6. Carefully remove the housing from the cabinet.

INSTALLING NEW MODULAR HOUSING ASSEMBLY

1. Unlock and open the door of the Modular Housing Assembly.
2. Carefully slide new Modular Housing Assembly into the cabinet and support it from underneath with one hand. (See Figure 2)
3. Insert one set of mounting hardware, the Carriage Bolt with the Washer Lock Nut, into the round portion of the upper right or left side keyhole slot from the inside of the housing with the head of the Carriage Bolt going in first. Position the square shoulder of the Carriage Bolt so that it is parallel with the straight sides of the keyhole slot and slide the entire assembly as far over as it will go. The square shoulder of the Carriage Bolt should be in contact with the end of the rectangular portion of the key slot to ensure proper seating of the mounting hardware. (See Figures 3 & 4)
4. Tighten down the Washer Lock Nut with a wrench. The mounting hardware should not move when tugged and the Modular Housing Cabinet should be tight to the cabinet. Do Not overtighten the washer lock nuts.
5. Install the rest of the mounting hardware as described in steps 3 & 4 for the other keyhole slots.

NOTE: Waste capacity of these units can be changed by ordering Bobrick part numbers:
367-60 (12-Gallon Waste Receptacle Module)
368-60 (18-Gallon Waste Receptacle Module)

TOOL REQUIRED TO REMOVE LOCK NUT

TOOL NAME	TOOL SIZE
Socket, open end or box end wrench	3/8"

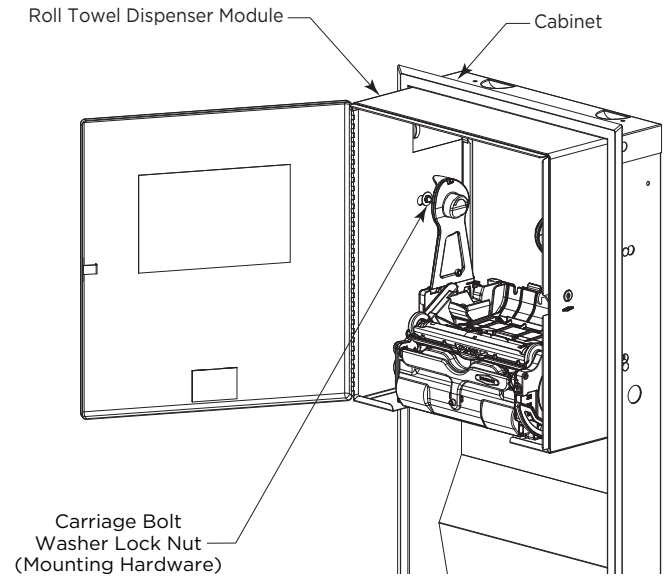


Figure 1

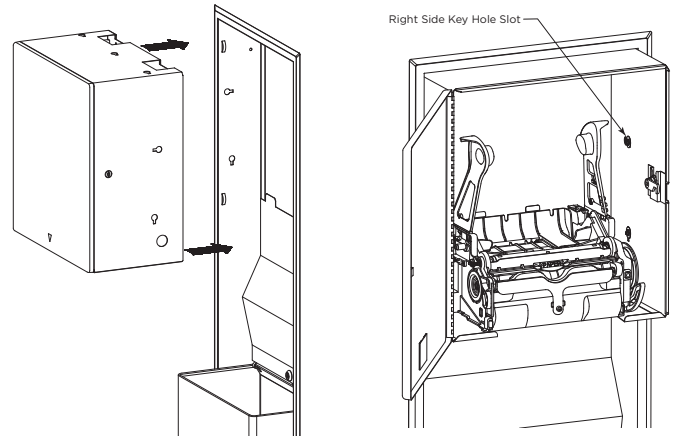


Figure 2

Figure 3

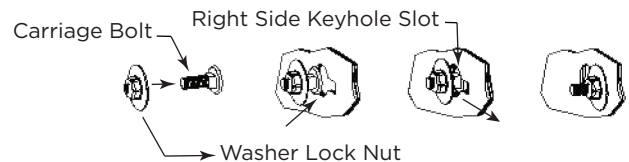


Figure 4



In the U.S.A.: BOBRICK WASHROOM EQUIPMENT, INC.

Los Angeles: 6901 Tujunga Ave., North Hollywood, CA 91605-6213; Tel: (818) 982-9600, Fax: (818) 503-1102
New York: 200 Commerce Drive, Clifton Park, NY 12065-1350; Tel: (518) 877-7444, Fax: (518) 877-5029,
or e-mail: customerservice@bobrick.com

In Canada: BOBRICK WASHROOM EQUIPMENT COMPANY

45 Rolark Drive, Scarborough, Ontario M1R 3B1 • Eastern Canada: Tel: (877) 423-6555, Fax: (877) 423-8555
• Western Canada: Tel: (877) 423-6444 • Fax: (877) 423-8444 or e-mail: customerservice@bobrick.com

INSTRUCTIONS FOR RETROFITTING 3974-350 AUTOMATIC ROLL TOWEL MODULE

BOBRICK MODELS B-3974, B-39747 AND B-3979 CONVERTIBLE AUTOMATIC ROLL TOWEL DISPENSER AND WASTE RECEPTACLE

PREPARE NEW 3974-350 FOR INSTALLATION

1. Remove the existing Roll Towel Module per the instructions on Sheet 1 of this Installation Instruction sheet.
2. Use 3974-43 Drilling Template included in the kit to drill two (2) .15" diameter holes in the bottom of the Roll Towel Module per the dimensions Figure 1 below.

INSTALLING NEW MODULAR HOUSING ASSEMBLY USING 3974-85 RETROFIT KIT.

1. Use the 3974-42 Sheet Metal Screws to attach the 3974-41 Retrofit Angle to the bottom of the Roll Towel Module. Then install the 3974-350 Automatic Roll Towel Module into the towel dispenser wall frame per the instructions on Sheet 1 of this Installation Instruction sheet and Figure 2 below.

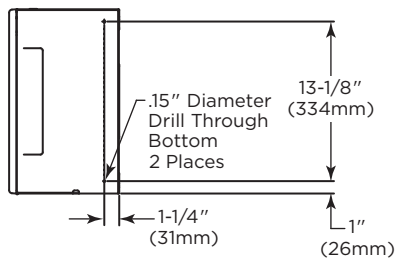


Figure 1

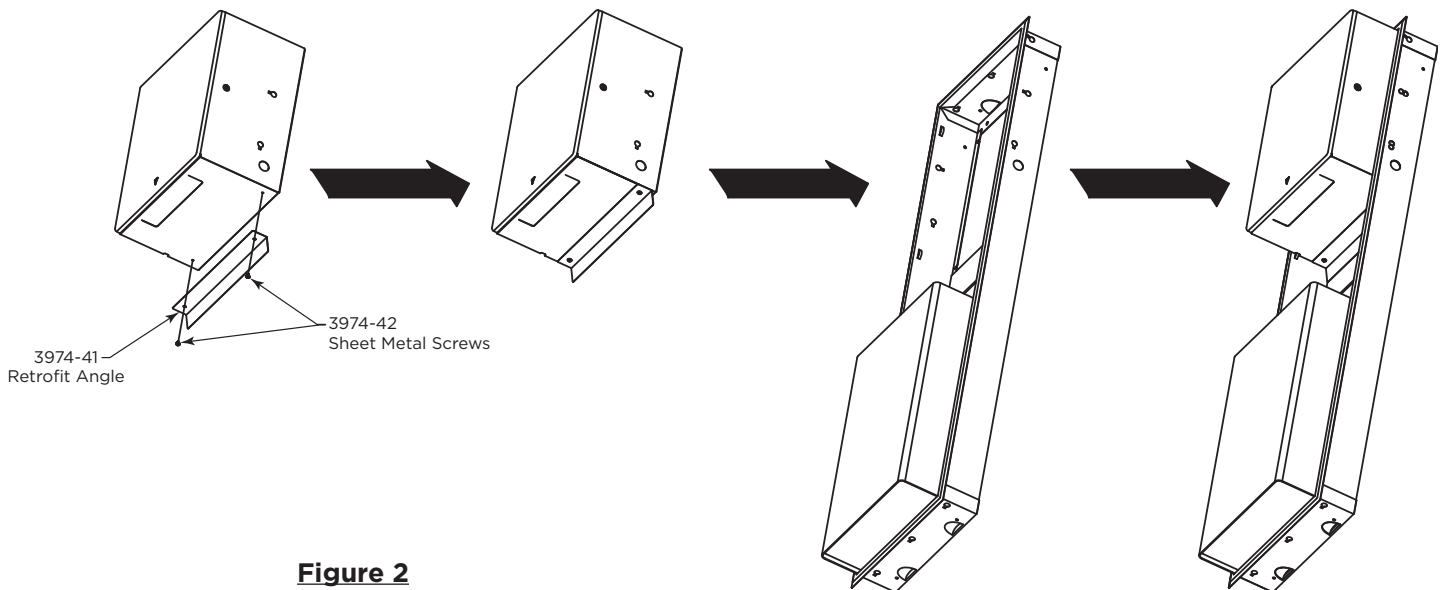


Figure 2



In the U.S.A.: BOBRICK WASHROOM EQUIPMENT, INC.

Los Angeles: 6901 Tujunga Ave., North Hollywood, CA 91605-6213; Tel: (818) 982-9600, Fax: (818) 503-1102
New York: 200 Commerce Drive, Clifton Park, NY 12065-1350; Tel: (518) 877-7444, Fax: (518) 877-5029,
or e-mail: customerservice@bobrick.com

In Canada: BOBRICK WASHROOM EQUIPMENT COMPANY

45 Rolark Drive, Scarborough, Ontario M1R 3B1 • Eastern Canada: Tel: (877) 423-6555, Fax: (877) 423-8555
• Western Canada: Tel: (877) 423-6444 • Fax: (877) 423-8444 or e-mail: customerservice@bobrick.com

INSTRUCTIONS FOR CONVERTING

B-3974, B-39747, B-3979, B-2974, B-29744 AND B-72974 FROM BATTERIES TO AC POWER

WITH 3974-57, AC ADAPTER KIT (DOES NOT INCLUDE INTERCHANGEABLE PLUGS FOR U.K., EUROPE, AND AUSTRALIA. IF NEEDED, ORDER AC ADAPTER KIT, PART. NO. 3974-55 TO FIT CORRESPONDING PLUG)

Bobrick Part Number 3974-57, AC Adapter Kit includes:

- 3974-18 AC to DC Switching Power Supply
- 3974-19 Expandable 1" Grommet
- 3974-20 U.S. AC Adapter Plug

(Note: Other materials may be required for proper installations such as rubber hole grommets, cable ties, conduit, etc.)

This kit is supplied with a cULus, CE, GS listed, double insulated AC to DC switching power supply. The power supply is equipped with a 117" (2971.8 mm) low voltage outlet cord terminated with a barrel connector for attachment with a mating jack located in the dispenser. The power supply is equipped with an interchangeable standard 2 pole NEMA plug intended for direct mounting into a standard 120V NEMA duplex outlet. For warranty purposes, it is required that the power converter must plug into an AC outlet that is not accessible to the dispenser user. If not available, consult a licensed electrical contractor. The power supply output is to be routed through the mounting wall as a low voltage, energy limited circuit, similar to a thermostat wire, with no requirement for electrical box or attachment strain relief. Use only the power supply supplied with this unit. Any substitution could damage the unit and will void any warranty.


1. Unlock and open the door of the Dispenser Cabinet Assembly. Remove any batteries that are in the unit.
2. Locate the 1" access hole in the back of the cabinet and in the module mounting plate behind the AC to DC power jack on the underside of the roll towel module.
3. Locate or provide an AC outlet that is not accessible to the dispenser user.
4. See a qualified, licensed electrician for the proper installation of a standard 120V NEMA duplex outlet, if one is required, and for the proper routing of the 3974-18 AC to DC Switching Power Supply. The installation must comply with local building code.

DO NOT BRING HIGH VOLTAGE POWER INTO THE CABINET FOR ANY REASON.

5. Route the power converter cord through the hole in the back of the Roll Towel Module cabinet (3974-208, 2974 or 29744) and plug the barrel plug end of the 3974-18 AC to DC Switching Power Supply into the AC to DC power jack in the Roll Towel Module. If necessary, the cord can be brought into the dispenser from a hole in the top or side of the cabinet by drilling a 1/2" to 1" hole and running the AC adapter cord under the module toward the back of the module.


Note: Module must be removed to plug in AC Adapter. Follow detailed instructions for doing so later in this instruction sheet

6. Take care to protect the cord from any edges of the stainless steel cabinet.
7. No extra cord length should be accessible inside the cabinet. Extra cord should be stored in a location inaccessible to the dispenser user.
8. Mount or remount the unit onto or into the wall making sure the cord is not pinched or damaged.
9. Plug 3974-18 AC to DC Switching Power Supply into an outlet and allow 30 seconds for the unit to calibrate. The indicator light will flash to show that the unit is receiving the power.

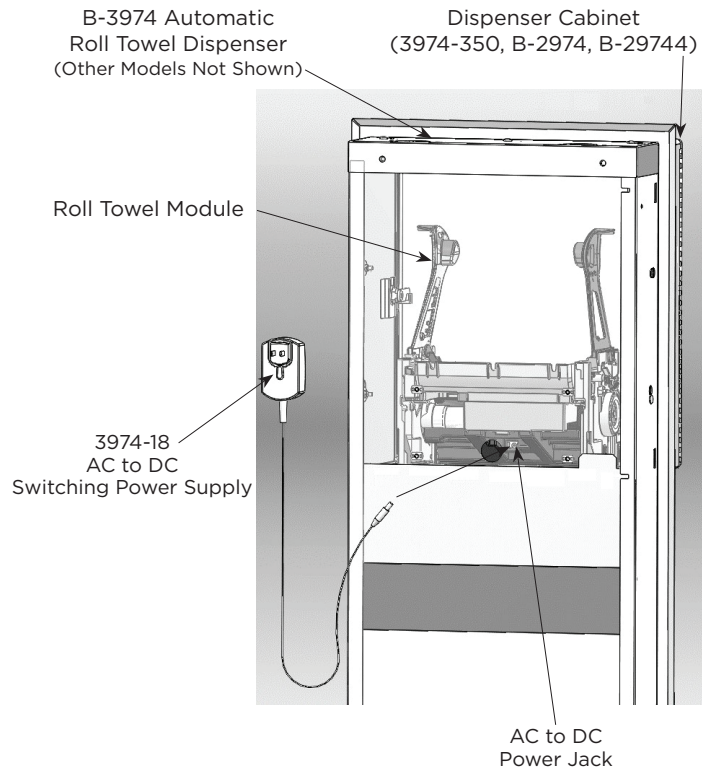

INSTRUCTIONS FOR REPLACING ROLL TOWEL MODULE 3974-359


1. REMOVE ROLL TOWEL MODULE 3974-359

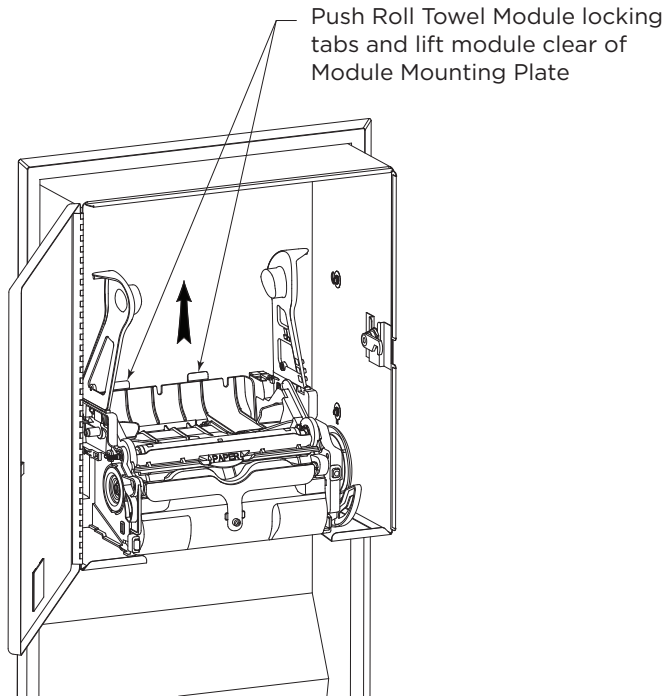


2. INSTALL NEW ROLL TOWEL MODULE 3974-359

(Cabinet not shown for clarify)

Locate two back corners of the module at 1-3/8" (35mm) from the bottom on the Module Mounting Plate. (Figure 1)

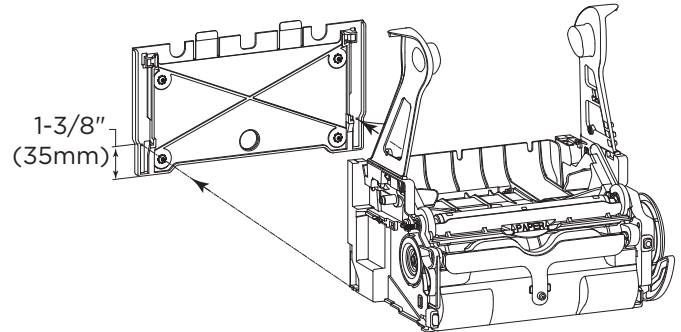

Place the 3974-359 module on that location, ensuring that both sides of the module are flat against the Module Mounting Plate and engages with the slots on both sides and push the module down until the tabs lock it into place.

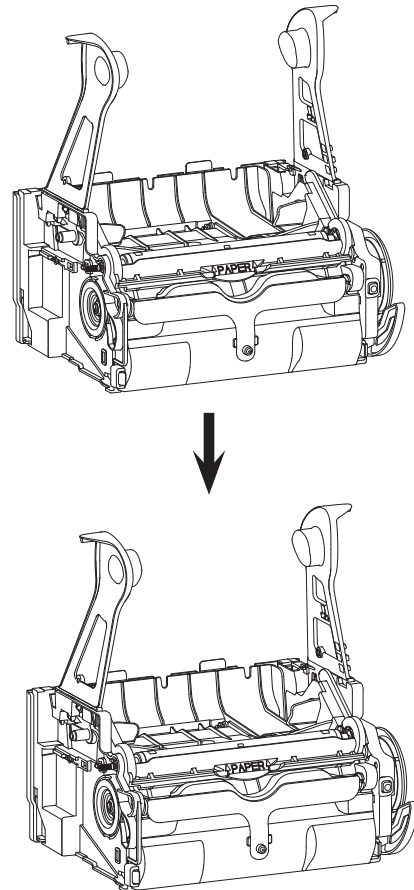

© 2024 by Bobrick Washroom Equipment, Inc.
Form No. 3974-168 Revised 10/25/24.

In the U.S.A.: BOBRICK WASHROOM EQUIPMENT, INC.


Los Angeles: 6901 Tujunga Ave., North Hollywood, CA 91605-6213; Tel: (818) 982-9600, Fax: (818) 503-1102
New York: 200 Commerce Drive, Clifton Park, NY 12065-1350; Tel: (518) 877-7444, Fax: (518) 877-5029,
or e-mail: customerservice@bobrick.com

In Canada: BOBRICK WASHROOM EQUIPMENT COMPANY


45 Rolark Drive, Scarborough, Ontario M1R 3B1 • Eastern Canada: Tel: (877) 423-6555, Fax: (877) 423-8555
• Western Canada: Tel: (877) 423-6444 • Fax: (877) 423-8444 or e-mail: customerservice@bobrick.com

AUTOMATIC UNIVERSAL ROLL TOWEL DISPENSERS AND WASTE RECEPTACLES




New Roll Loading

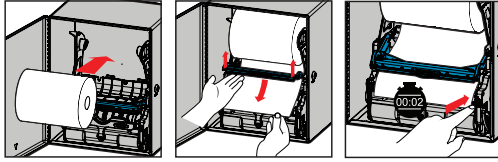

Stub Roll Loading

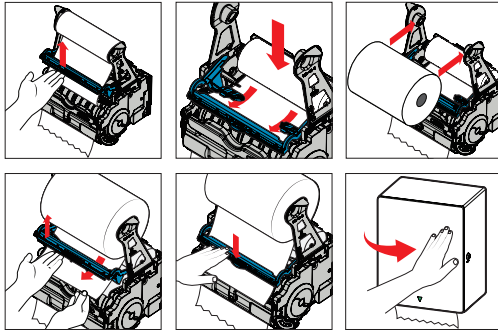

Battery Loading

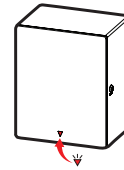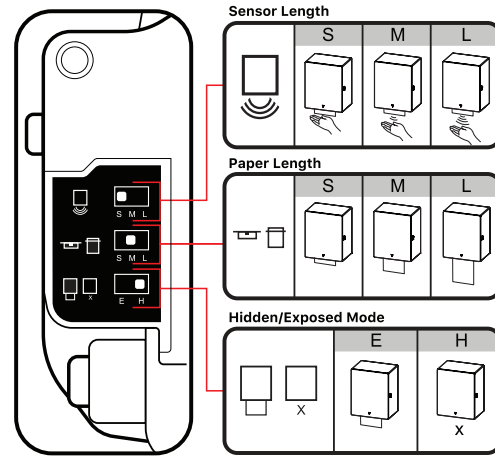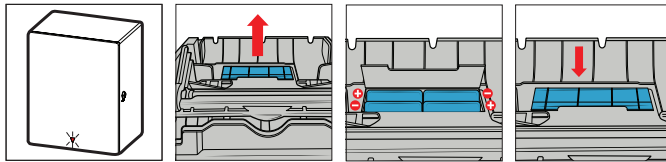

	Ready to Dispense	Intervals of 4 seconds
	Dispensing Paper	solid green
	Tear Bar Paper Jam	Intervals of 0.5 seconds
	Out Of Paper	Intervals of 3 seconds
	Alternate Red/Green Flashing When Batteries Are Low	Intervals of 3 seconds
	Batteries Are Dead	solid red


FULLY RECESSED COMBINATION TOWEL AND WASTE MODELS ARE CONVERTIBLE! *

To Convert From Automatic Roll Towels to Touch-Free Roll Towels or Folded Towels

Order Part No. 3961-50 (Touch-Free Universal Roll Towel Dispenser Module) or Order Part No. 3944-52 (Folded Towel Dispenser Module)

Order and Install


3961-50
Mechanical
Touch-Free
Universal
Roll Towel
Dispenser
Module

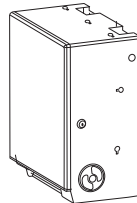

Order and Install



or

3944-52
Folded Towel
Dispenser
Module

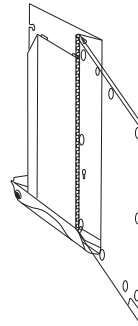


Remove

3974-250 or
3974-350
Automatic
Universal
Roll Towel
Dispenser
Module

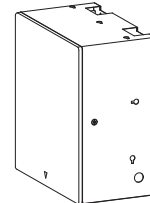


Waste Receptacle Accessory Item:


Order
3944-134
LinerMate
(Available
for 12-gal.
waste only)

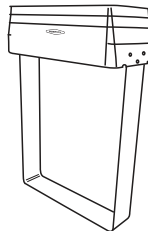

367-60
12-Gallon
Waste
Receptacle
Module

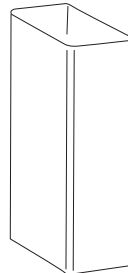

368-60
18-Gallon
Waste
Receptacle
Module

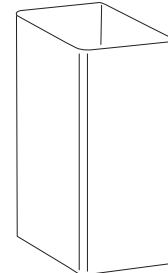

* Does not apply to B-2974 Surface Mounted or B-29744 Semi-Recessed Automatic Universal Roll Towel Dispenser. The Waste capacity on this model can be changed. By ordering Part No. 367-60 (12-Gallon Waste Receptacle Module) or 368-60 (18-Gallon Waste Receptacle Module). LinerMate Part No. 3944-134, available for 12-gal. waste only is sold as optional accessory to accommodate disposal trash liners. LinerMate eliminates unsightly trash liner overhang and facilitates installation and removal of disposable trash liners.



In the U.S.A.: BOBRICK WASHROOM EQUIPMENT, INC.

Los Angeles: 6901 Tujunga Ave., North Hollywood, CA 91605-6213; Tel: (818) 982-9600, Fax: (818) 503-1102
New York: 200 Commerce Drive, Clifton Park, NY 12065-1350; Tel: (518) 877-7444, Fax: (518) 877-5029,
or e-mail: customerservice@bobrick.com

In Canada: BOBRICK WASHROOM EQUIPMENT COMPANY

45 Rolark Drive, Scarborough, Ontario M1R 3B1 • Eastern Canada: Tel: (877) 423-6555, Fax: (877) 423-8555
• Western Canada: Tel: (877) 423-6444 • Fax: (877) 423-8444 or e-mail: customerservice@bobrick.com

© 2023 by Bobrick Washroom Equipment, Inc.
Form No. 3974-74 Rev. 8/30/23

REPLACEMENT PARTS FOR BOBRICK UNIVERSAL AUTOMATIC ROLL TOWEL DISPENSERS B-3974, B-3979, B-39747, B-2974 AND B-29744

Part No.	Description
3974-350	Convertible Automatic, Universal Roll Paper Towel Dispenser Module Assembly with Carton
3974-151	Door Replacement Kit
3974-57	AC Adapter Kit
3974-55	AC Adapter Kit (International)
3974-163	Arm Set (Left and Right)
2974-100	Lock & Key (Door)
3944-41	Lock & Key (Waste Receptacle)
3949-57	4" Skirt for Surface Mounting
3974-359	Module replacement, with arms and backplate
3974-85	Retrofit Kit
2974-151	Door Replacement Kit
29744-135	Adapter Flange Kit



© 2025 by Bobrick Washroom Equipment, Inc.
Form No. RP-Universal Auto RTD Rev. 9/9/25

In the U.S.A.: BOBRICK WASHROOM EQUIPMENT, INC.

Los Angeles: 6901 Tujunga Ave., North Hollywood, CA 91605-6213; Tel: (818) 982-9600, Fax: (818) 503-1102
New York: 200 Commerce Drive, Clifton Park, NY 12065-1350; Tel: (518) 877-7444, Fax: (518) 877-5029,
or e-mail: customerservice@bobrick.com

In Canada: BOBRICK WASHROOM EQUIPMENT COMPANY

45 Rolark Drive, Scarborough, Ontario M1R 3B1 • Eastern Canada: Tel: (877) 423-6555, Fax: (877) 423-8555
• Western Canada: Tel: (877) 423-6444 • Fax: (877) 423-8444 or e-mail: customerservice@bobrick.com