

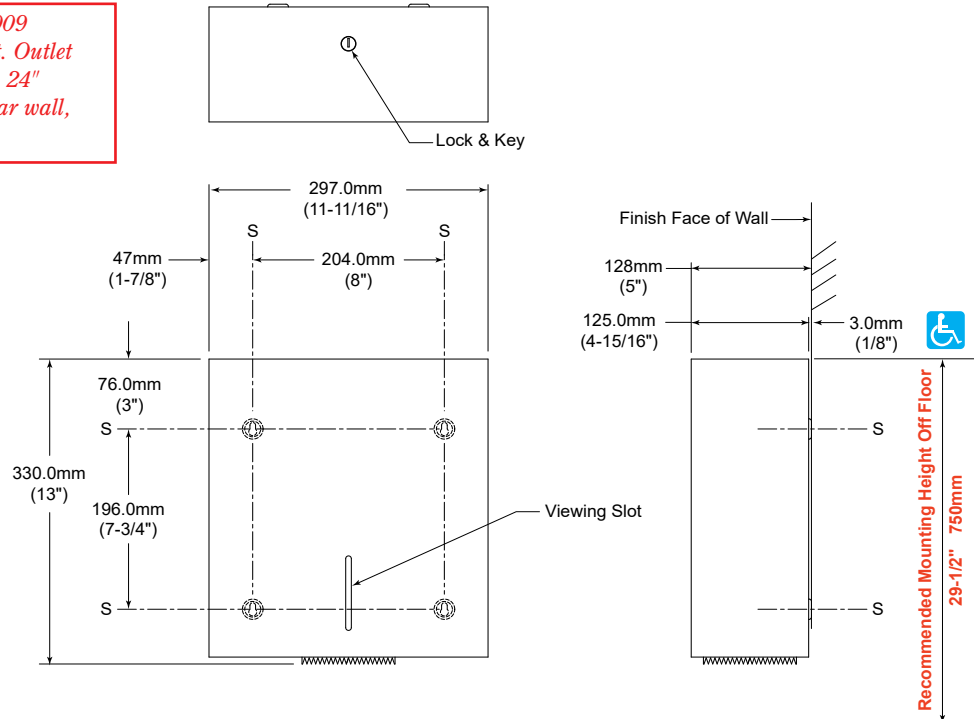
BOBRICK**Technical Data**

fino collection

SURFACE-MOUNTED SINGLE JUMBO-TOILET ROLL HOLDER

B-9890

Note: Dispenser is ICC A117.1 - 2009 Standard for Accessibility compliant. Outlet of dispenser shall be located, in area 24" minimum to 42" maximum from rear wall, 18" minimum above floor.

**MATERIAL:**

Cabinet — Unit is of type 304, 18 gauge (1,2mm) stainless steel satin finish. All seam-welded construction with well defined edges and corners. Cabinet is connected to backplate via a hinge at the unit's rear bottom. Cabinet-swing-limiter allows cabinet to open down to a horizontal position, which eases refill of toilet roll and prevents cabinet from harming the wall when opening. Slot reveals toilet tissue supply inside cabinet. Equipped with a lock keyed like other Bobrick Washroom Equipment accessories. Lock is on top of unit flush with the surface - no protrusion.

Spindle — fixed inner spindle, 18 gauge (1,2mm), stainless steel, seam welded against backplate. Adapters for different toilet-roll-core diameters are furnished (cap and o-rings).

OPERATION:

Door unlocks with key provided and swings down for loading dispenser. Spindle adapter accommodates one toilet tissue roll up to 10" (255mm) diameter with a 1-5/8" (40mm) diameter core roll; convertible for 3" (75mm) diameter core rolls. Rubber o-rings (2) (furnished by manufacturer) may be added to the steel inner spindle to accommodate a 2-1/8" (55mm) diameter core roll. Viewing slot in door reveals the amount of toilet tissue on roll. Unit is designed for quick reloading.

INSTALLATION:

Mount unit on wall or toilet partition with sheet-metal screws at points indicated by an S. Rear edge of unit should be 20" (510mm) from back wall. This locates toilet tissue within 7"-9" (180-230mm) of front of standard toilet that projects 30" (305mm) from back wall.

For plaster or dry wall construction, provide concealed backing to comply with local building codes, then secure with sheet-metal screws (not furnished). For other wall surfaces, provide fiber plugs or expansion shields for use with sheet-metal screws (not furnished), or provide 6mm (1/4") toggle bolts or expansion bolts.

For partitions with particle-board or other solid core, secure with sheet-metal screws (not furnished), or provide through-bolts, nuts, and washers. For hollow-core metal partitions, provide solid backing into which the sheet-metal screws can be secured. If two units are installed back-to-back, then provide threaded sleeves and machine screws for the full thickness of partition.

SPECIFICATION:

Surface-Mounted Single Jumbo-Toilet Roll Holder door shall be 18 gauge (1,2mm) stainless steel with satin-finish. Cabinet shall be equipped with a lock keyed like other Bobrick washroom accessories. Lock is on top of unit flush with the surface - no protrusion. Cabinet shall have a slot to reveal toilet tissue supply inside cabinet. Spindle shall accommodate one toilet tissue roll up to 10" (255mm) diameter with a 1-5/8" (40mm) diameter core roll convertible for 3" (75mm) diameter core rolls or 2-1/8" (55mm) diameter core roll by adding rubber o-rings (2) furnished.

Surface-Mounted Single Jumbo-Toilet Roll Holder shall be Model B-9890 of Bobrick Washroom Equipment, Inc., Clifton Park, New York; Jackson, Tennessee; Los Angeles, California; Bobrick Washroom Equipment Company, Scarborough, Ontario; Bobrick Washroom Equipment Pty. Ltd., Australia; and Bobrick Washroom Equipment Limited, United Kingdom.